

Immo/Remote Programming (Black-Free,Red-Subscribed)		
Brand	Menu	App
PROTON	PROTON>Select from type\Type 1	Add key,Immobiliser ECU reset,
	PROTON>Select from type\Type 2	Program key,Delete key,
	PROTON>Select from type\Type 3	Add key,Delete key,Key count,
	PROTON>Select from type\Type 4	Add key,Delete key,Reset immobiliser,Reset
	PROTON>Select from type\Type 5	Program key,Program remote,
	PROTON>Select from vehicle\Savvy	Add key,Immobiliser ECU reset,
	PROTON>Select from vehicle\Gen-2	Program key,Delete key,
	PROTON>Select from vehicle\Impian	Program key,Delete key,
	PROTON>Select from vehicle\Jump back\Type 1	Add key,Immobiliser ECU reset,
	PROTON>Select from vehicle\Jump back\Type 2	Program key,Delete key,
	PROTON>Select from type\Type 6	Add key,Delete key,Program remote,Key
	PROTON>Select from type\Type 7	Add one key,Add two keys,Program remote,Key
	PROTON>Select from type\Type 8	Add key,Delete key,Program remote,Key
	PROTON>Select from vehicle\X70\Smart key	Delete key,Program old key,Program new key,
	DACIA	DACIA\Dokker\2012-
DACIA\Duster\2010-2011		Add key,
DACIA\Lodgy\2013-		Program key,Read PIN code,Read key count,
DACIA\Logan\2013-		Program key,Read PIN code,Read key count,

DACIA	DACIA\Sandero\2013-	Program key,Read PIN code,Read key count,
	DACIA\Solenza	Add key,
	DACIA\Duster\2013-	Program key,Read PIN code,Read key count,
	DACIA\Logan\2004-2011	Add key,
	DACIA\Sandero\2007-2011	Add key,
	DACIA\Sandero stepway\2006-2012	Add key,
SCION	SCION\xB\2012\Remote	Program remote>Delete remote,
	SCION\CH-R\2018\Mechanical key	Add key>Delete key,Program immo
	SCION\CH-R\2018\Smart key	Add smart key>Delete smart key,Reset
	SCION\FR-S\2013-2016\Mechanical key	Read key count,Add key,Program
	SCION\FR-S\2013-2016\Smart key	Add smart key>Delete smart key,Reset
	SCION\iA\2016-2018\Smart key	Program remote,Add smart key,Immobiliser ECU reset,
	SCION\iM\2017-2018\Mechanical key	Add key>Delete key,Program immo
	SCION\iQ\2012-2015\Mechanical key	Add key>Delete key,Program immo
	SCION\tC\2011-2015\Mechanical key	Add key>Delete key,Program immo
	SCION\tC\2011-2015\Smart key	Add smart key>Delete smart key,Reset
	SCION\xB\2012-2013\Mechanical key	Add key>Delete key,Program immo
	SCION\xD\2012-2013\Mechanical key	Add key>Delete key,Program immo
	SCION\tC\2005-2010\Mechanical key	Add key>Delete key,All key lost,Immobiliser ECU
	GENESIS	GENESIS\G80(DH)\2017-2019

GENESIS	GENESIS\G90(HI)\2017-2019	Program smart key,Read PIN code(8A),
ABARTH	ABARTH\Europe\500\2008-(312)	Key count,Program key,Read pin code,Make
	ABARTH\Europe\Grande Punto\2007-2010(199)	Key count,Program key,Read pin code,Make
	ABARTH\Australia\500\2011-2014(312)	Key count,Program key,Read pin code,Make
	ACURA>Select from type\Immobilizer\16	Add one key,All key lost,Reset key,
	ACURA>Select from type\Smart key\Knob type	Add one key,All key lost,Detect smart key,
	ACURA>Select from type\Smart key\Button type	Add one key,All key lost,
	ACURA>Select from type\Remote\IMMO9	Add remote,Delete remote,
	ACURA>Select from type\Immobilizer\16	Add key,All key lost,Reset immobiliser,
	ACURA>Select from type\Immobilizer\16	Reset immo,Reset ECM,
	ACURA>Select from type\Immobilizer\16	Immo type,
	ACURA>Select from type\Smart key\Button type	Add one key,All key lost,
	ACURA>Select from type\Smart key\Button type	Add one smart key,All smart key lost,
	ACURA>Select from type\Immobilizer\3	Search IMMO type,
	ACURA>Select from type\Immobilizer\3	Add one key,All key lost,Reset key,
	ACURA>Select from type\Immobilizer\3	Add key,All key lost,Reset immobiliser,
	ACURA>Select from type\Immobilizer\3	Reset immo,Reset ECM,
	ACURA>Select from vehicle\ZDX\2010-	Add one key,All key lost,Reset key,
	ACURA>Select from vehicle\ZDX\2010-\Smart	Add one key,All key lost,
ACURA>Select from type\Immobilizer\16	Add one key,All key lost,Reset key,	

ACURA

ACURA\Select from type\Immobilizer\3	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\CL\1998-2003	Read key count,All key lost,
ACURA\Select from vehicle\CSX\2008-	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\EL\2001-2005	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\MDX\2001-2006	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\MDX\2007-2013	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\NSX\1995-2005	Read key count,All key lost,
ACURA\Select from vehicle\RDX\2007-2012	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\RL\1996-1999	Read key count,All key lost,
ACURA\Select from vehicle\RL\2005-2007	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\RSX\2002-2006	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\TL\1999-2003	Read key count,All key lost,
ACURA\Select from vehicle\TL\2004-2008	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\TL\2009-	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\TSX\2004-2008	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\TSX\2009-2013	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\RL\2008-2012	Add one key,All key lost,Reset key,
ACURA\Select from vehicle\Integra	Read key count,All key lost,
ACURA\Select from type\Immobilizer\16	Read key count,All key lost,
ROLLS-ROYCE\Select from vehicle\Phantom	Program key,Disable and enable,Make key with

ROLLS-ROYCE	ROLLS-ROYCE>Select from vehicle\Wraith	Generate ignition key,Disable key,Enable
	ROLLS-ROYCE>Select from vehicle\Ghost	Generate ignition key,Disable key,Enable
SMART	SMART\BR453\Add key	Read PIN code,Program key,Recover configured
	SMART\BR451\Immobilizer	Program key,
	SMART\BR450\2002\Immobilizer	Program key,
	SMART\BR452\2003-2006\Immobilizer	Program key,Read key count,
	SMART\BR454\2004-2006\Immobilizer	Program key,
	SMART\BR450\2002\Immobilizer	Program key,Read key count,
SSANG YONG	SSANG YONG>Select from type\Immobilizer\Type 3	Program key,
	SSANG YONG>Select from vehicle\Actyon\Petrol	Program key,
	SSANG YONG>Select from vehicle\Actyon\Diesel	Program key,
	SSANG YONG>Select from vehicle\Actyon\XDi system	Program key,
	SSANG YONG>Select from vehicle\Chairman\Petrol\Im	Program key,
	SSANG YONG>Select from vehicle\Chairman\Diesel	Program key,
	SSANG YONG>Select from vehicle\Chairman\XDi	Program key,
	SSANG YONG>Select from vehicle\Korando\Petrol	Program key,
	SSANG YONG>Select from vehicle\Korando\Diesel	Program key,
	SSANG YONG>Select from vehicle\Korando\XDi	Program key,
	SSANG YONG>Select from vehicle\Kyron\Petrol	Program key,
	SSANG YONG>Select from vehicle\Kyron\Diesel	Program key,

SSANG YONG\Select from vehicle\Kyron\XDi system	Program key,
SSANG YONG\Select from vehicle\Musso\Petrol	Program key,
SSANG YONG\Select from vehicle\Musso\Diesel	Program key,
SSANG YONG\Select from vehicle\Musso\XDi system	Program key,
SSANG YONG\Select from vehicle\Rexton\Petrol	Program key,
SSANG YONG\Select from vehicle\Rexton\Diesel	Program key,
SSANG YONG\Select from vehicle\Rexton\XDi system	Program key,
SSANG YONG\Select from vehicle\Stavic	Program key,
SSANG YONG\Select from vehicle\Stavic	Program key,
SSANG YONG\Select from vehicle\Stavic Rodius\XDi	Program key,
SSANG YONG\Select from vehicle\Rodius\Petrol	Program key,
SSANG YONG\Select from vehicle\Rodius\Diesel\Type	Program key,
SSANG YONG\Select from vehicle\Rodius\XDi system	Program key,
SSANG YONG\Select from vehicle\RextonII\Petrol	Program key,
SSANG YONG\Select from vehicle\RextonIIDiesel	Program key,
SSANG YONG\Select from vehicle\RextonIIXDi	Program key,
SSANG YONG\Select from vehicle\New Rexton\Petrol	Program key,
SSANG YONG\Select from vehicle\New Rexton\Diesel	Program key,
SSANG YONG\Select from vehicle\New Rexton\XDi	Program key,
SSANG YONG\Select from type\Remote\Type 2	Program remote,

SSANG YONG

SSANG YONG\Select from vehicle\New	Program smart key,
SSANG YONG\Select from vehicle\ChairmanH\Petrol\	Program smart key,
SSANG YONG\Select from vehicle\Rodius-Stavic	Program smart key,
SSANG YONG\Select from vehicle\Actyon	Program smart key,
SSANG YONG\Select from vehicle\XLV\Petrol\Smart	Program smart key,
SSANG YONG\Select from vehicle\XLV\Petrol\Remote	Program remote,
SSANG YONG\Select from vehicle\Musso(Rexton	Program remote,
SSANG YONG\Select from vehicle\Rexton(G4)\Petrol\	Program remote,
SSANG YONG\Select from vehicle\New	Program remote,
SSANG YONG\Select from vehicle\Tivolan\Remote	Program remote,
SSANG YONG\Select from vehicle\XLV\Petrol\Immobili	Program key,
SSANG YONG\Select from vehicle\Musso(Rexton	Program key,
SSANG YONG\Select from vehicle\Rexton(G4)\Petrol\I	Program key,
SSANG YONG\Select from vehicle\New	Program key,
SSANG YONG\Select from vehicle\Tivolan\Immobilizer	Program key,
SSANG YONG\Select from vehicle\Rexton(G4)\Petrol\	Program smart key,
SSANG YONG\Select from vehicle\Musso(Rexton	Program smart key,
SSANG YONG\Select from type\Smart key\Type 1	Program smart key,
SSANG YONG\Select from type\Smart key\Type 2	Program smart key,
SSANG YONG\Select from type\Immobilizer\Type 4	Program key,

SSANG YONG\Select from type\Remote\Type 3	Program remote,
SSANG YONG\Select from vehicle\New	Program key,
SSANG YONG\Select from vehicle\New	Program remote,
SSANG YONG\Select from vehicle\New	Program smart key,
SSANG YONG\Select from vehicle\Rexton	Program smart key,
SSANG YONG\Select from vehicle\Rexton	Program key,
SSANG YONG\Select from vehicle\Rodius\Diesel\Type	Program key,
SSANG YONG\Select from vehicle\Rodius-Stavic	Program key,
SSANG YONG\Select from vehicle\Rodius-Stavic	Program smart key,
SSANG YONG\Select from vehicle\Actyon	Program key,
SSANG YONG\Select from vehicle\Actyon	Program smart key,
SSANG YONG\Select from vehicle\XLV\Diesel\Immobil	Program key,
SSANG YONG\Select from vehicle\XLV\Diesel\Remote	Program remote,
SSANG YONG\Select from vehicle\XLV\Diesel\Smart	Program smart key,
SSANG YONG\Select from vehicle\Rexton(G4)\Diesel\I	Program key,
SSANG YONG\Select from vehicle\Rexton(G4)\Diesel\	Program remote,
SSANG YONG\Select from vehicle\Rexton(G4)\Diesel\	Program smart key,
SSANG YONG\Select from type\Immobilizer\Type 1	Program key,
SSANG YONG\Select from type\Remote\Type 1	Program remote,
SSANG YONG\Select from type\Immobilizer\Type 2	Program key,

	SSANG YONG\Select from vehicle\Tivolan\Smart key	Program smart key,
IVECO	IVECO\Daily\2012-	Key info.,Program key,Read pin code,Make
	IVECO\Power Daily\Immobilizer	Learn key,Write VIN,Replace IMMO,
	IVECO\Exceed\Immobilizer	Learn key,Write VIN,Replace IMMO,
	IVECO\Power Daily\Remote	Learn remote,Write VIN,
	IVECO\Exceed\Remote	Learn remote,Write VIN,
	IVECO\Daily\2007-2012	Key count,Program key,Remote count,Program
	IVECO\Eurocargo\2007-2012	Key count,Program key,Remote count,Program
GMC	GMC\Canyon\IMMO\2015-2018\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	GMC\Sierra\IMMO\2014-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	GMC\Sierra\IMMO\2014-2016\Smart key	Add smart key,All smart key lost,Read smart key
	GMC\Sierra 1500\IMMO\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	GMC\Sierra 2500\IMMO\2014-	All key lost,Add key,Read key count,Clear fault code,
	GMC\Sierra 3500\IMMO\2014-	All key lost,Add key,Read key count,Clear fault code,
	GMC\Yukon\IMMO\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	GMC\Yukon\IMMO\2015-2016\Smart key	Add smart key,All smart key lost,Read smart key
	GMC\Terrain\2010-2017\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
	GMC\Yukon\Remote\2015	Add remote,Clear fault code,
	GMC\Sierra 1500\Remote\2014-2015	Add remote,Clear fault code,
	GMC\Sierra 2500\Remote\2014-	Add remote,Clear fault code,

	GMC\Sierra 3500\Remote\2014-	Add remote,Clear fault code,
	GMC\Acadia\IMMO\2007- 2017\Immobilizer	All key lost,
	GMC\Savana\IMMO\2008- 2019\Immobilizer	All key lost,
	GMC\Sierra\IMMO\2007- 2013\Immobilizer	All key lost,
	GMC\Yukon\IMMO\2007- 2014\Immobilizer	All key lost,
	GMC\Canyon\IMMO\2008- 2012\Immobilizer	All key lost,
	GMC\Acadia\Remote\2007 -2017	Program remote>Delete remote,
	GMC\Savana\Remote\200 8-2019	Program remote>Delete remote,
	GMC\Yukon\Remote\2007- 2014	Program remote>Delete remote,
	GMC\Sierra\Remote\2007- 2013	Program remote>Delete remote,
	GMC\Read PIN code	Read pin code type6 (via BCM),Read pin code
MERCEDES-BENZ	MERCEDES- BENZ\Remote\163-ML	Program remote,Reset ECU,
	MERCEDES-BENZ\Tail box control\E	Trunk control,
	MERCEDES-BENZ\Key system\Type 2(2014-	Disable key,
	MERCEDES-BENZ\Key system\Type 1	Disable key,
	MERCEDES-BENZ\Tail box control\C series\204	Trunk control,
	MERCEDES-BENZ\Tail box control\CLK series\204	Trunk control,
	MERCEDES-BENZ\Tail box control\E series\212	Trunk control,
	MERCEDES-BENZ\Tail box control\S series\221	Trunk control,
	MERCEDES- BENZ\IMMO\Citan\2014-	Add key,Revise VIN code,Clear fault code,

LANCIA	LANCIA\IMMO\Ypsilon\2013-Immobilizer	Key count,Program key,Read pin code,Make
	LANCIA\IMMO\Thesis\02-09\Immobilizer	Read key count,Program key,
	LANCIA\IMMO\Ypsilon\2003-2006\Immobilizer	Read key count,Program key,
	LANCIA\IMMO\Phedra\2005-Immobilizer	Program key,
	LANCIA\IMMO\Delta	Read pin code,Backup EEPROM,Recover
	LANCIA\IMMO\Musa	Read pin code,Backup EEPROM,Recover
	LANCIA\IMMO\Phedra\Type 1	Program key,
	LANCIA\IMMO\Phedra\Type 2	Program key,
	LANCIA\IMMO\Phedra\Type 3	Program key,
	LANCIA\IMMO\Z\Type 1	Program key,
	LANCIA\IMMO\Z\Type 2	Program key,
	LANCIA\IMMO\Z\Type 3	Program key,
	LANCIA\IMMO\Ypsilon\2007-2012\Immobilizer	Key count,Program key,Remote count,Program
	AUDI\Q3\2014-\Immobilizer	Make dealer key,Learn key(OBD),Backup
AUDI\A3\2016\Immobilizer	Backup EEPROM,Recover EEPROM,Backup immo	
AUDI\A6L\2009-\Immobilizer	Backup immo data,Make dealer key,Learn	
AUDI\A6L\2009\Immobilizer	Backup immo data,Make dealer key,Learn	
AUDI\IMMO5\Immobilizer/Smart key	Backup immo data,Make dealer key,Learn key,Clear	
AUDI\Q7\2009\Immobilizer	Backup immo data,Make dealer key,Learn	
AUDI\Q7\2009-\Immobilizer	Backup immo data,Make dealer key,Learn	

AUDI

AUDI\A3\TT\R8-CDC32XX+24C32\Immobilizer	Backup EEPROM,Recover EEPROM,Backup immo
AUDI\Q3\2013\Immobilizer	Backup EEPROM,Recover EEPROM,Make dealer
AUDI\A1\Immobilizer	Backup EEPROM,Recover EEPROM,Make dealer
AUDI\IMMO5\Engineering mode	Obtain data,Make dealer key,Learn key,Clear airbag
AUDI\A4L\Immobilizer/Smart key	Backup immo data,Make dealer key,Learn key,Clear
AUDI\Remote\Central locking(1281)	Add remote>Delete remote,
AUDI\Remote\Central module (1281)\Type 1	Add remote>Delete remote,
AUDI\Remote\Remote	Add remote>Delete remote,
AUDI\A6L\2012-\Immobilizer/Smart key	Backup immo data,Make dealer key,Learn key,Clear
AUDI\Q5\Immobilizer/Smart key	Backup immo data,Make dealer key,Learn key,Clear
AUDI\Remote\Central module (1281)\Type 2	Add remote>Delete remote,

BESTURN

BESTURN\IMMO\New besturn(B50)\2015 -	All key lost,
BESTURN\IMMO\Old besturn(CAN)	Read key count,Add key,All key lost,
BESTURN\IMMO\B30	All key lost,
BESTURN\PEPS\B70	Program key,Program PEPS,
BESTURN\PEPS\B90	Program key,Program PEPS,
BESTURN\PEPS\X80	Program key,Program PEPS,
BESTURN\Remote\New B70	Program remote,
BESTURN\Remote\B90	Program remote,
BESTURN\Remote\X80	Program remote,

	BESTURN\Remote\Oley	Automatic,Manual,
	BESTURN\IMMO\New besturn(B50)\- 2015	Delete key,Clear fault code,Program key,
	BESTURN\IMMO\New besturn(B70)	Delete key,Clear fault code,Program key,
	BESTURN\IMMO\B70(2013)	Delete key,Clear fault code,Program key,
	BESTURN\IMMO\X80(2013)	Delete key,Clear fault code,Program key,
	BESTURN\IMMO\B90(2013)	Delete key,Clear fault code,Program key,
	BESTURN\IMMO\Oley	Delete key,Clear fault code,Program key,
ROEWE	ROEWE\Read PIN code\550\2013-	Read PIN code,
	ROEWE\Read PIN code\950\2012-	Read pin code type6 (via BCM),
	ROEWE\IMMO\350\2013-	Add key,Delete key,Check lock time,
	ROEWE\IMMO\360\Without smart	Add key,Delete key,Check lock time,
	ROEWE\IMMO\W5\2013-	Add key,Delete key,Check lock time,
	ROEWE\IMMO\550\2012	Delete key,Add key,
	ROEWE\IMMO\RX5\With smart	Delete key,Add key,Read key count,
	ROEWE\IMMO\RX5\Without smart	Delete key,Add key,Read key count,
	ROEWE\Remote\360	Add remote,Clear remote,
	ROEWE\Remote\750	Enable remote,Disable remote,Program
	ROEWE\IMMO\ERX5\With smart	Delete key,Add key,Read key count,
	ROEWE\IMMO\950\Without smart\Type 1	All key lost,Read key count,Clear fault code,Add
	ROEWE\IMMO\950\With smart	All smart key lost,Read smart key count,Clear fault

ROEWE\IMMO\350\2012	Add key,Delete key,Check lock time,
ROEWE\IMMO\W5\2012	Add key,Delete key,Check lock time,
ROEWE\IMMO\550\2013-	Add key,Delete key,Unlock time left,
ROEWE\IMMO\i6\With smart	Delete key,Read key count,Add key,
ROEWE\Remote\W5	Program remote,
ROEWE\IMMO\360\With smart\2017	Add key,Delete key,
ROEWE\IMMO\950\Without smart\Type 2	All key lost,Add key,Read key count,Clear fault code,
ROEWE\IMMO\750(new)\2012	Delete key,Add key,
ROEWE\IMMO\750(new)\2013-	Add key,Delete key,Unlock time left,
ROEWE\IMMO\ERX5\Without smart	Delete key,Add key,Read key count,
ROEWE\IMMO\E50\2012	Add key,Delete key,Check lock time,
ROEWE\IMMO\E50\2013-	Add key,Delete key,Check lock time,
MG\IMMO\MG6\2018-	Add key,Delete key,
MG\IMMO\GT	Add key,Delete key,Check lock time,
MG\IMMO\MG3\2011-	Add key,Delete key,Check lock time,
MG\IMMO\MG5\2013-	Add key,Delete key,Check lock time,
MG\IMMO\MG7\2013-	Add key,Delete key,Check lock time,
MG\IMMO\MG6\2012	Delete key,Add key,
MG\Remote\MG7	Enable remote,Disable remote,Program
MG\Remote\Old MG3	Add remote,Clear remote,Read VIN

MG

MG\IMMO\MG3\2011	Add key,Delete key,Check lock time,
MG\IMMO\MG5\2012	Add key,Delete key,Check lock time,
MG\IMMO\MG6\2013-	Add key,Delete key,Unlock time left,
MG\IMMO\GS\2016 \With smart	Add key,Delete key,
MG\IMMO\GS\2016 \Without smart	Add key,Delete key,
MG\IMMO\GS\2017\Without smart	Delete key,Add key,Read key count,
MG\Remote\MG TF	Add remote,Clear remote,Read VIN
MG\Read PIN code\MG6\2013-	Read PIN code,
MG\Remote\MG7-L	Enable remote,Disable remote,Program
MG\IMMO\ZS\Without smart	Add key,Delete key,Key count,
MG\IMMO\ZS\With smart	Add smart key,Delete smart key,Key count,
INFINITI\Select from vehicle\North	Program smart key,
INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\North	Program smart key,
INFINITI\Select from vehicle\North	Program smart key,
INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\North	Program smart key,
INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,

INFINITI\Select from vehicle\South	Program smart key,
INFINITI\Select from vehicle\South	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\South	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\South	Program smart key,
INFINITI\Select from vehicle\South	Program smart key,
INFINITI\Select from vehicle\South	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\South	Program smart key,
INFINITI\Select from vehicle\South	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Asia\G25\2011-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Asia\JX35\2013\Pr	Program smart key,
INFINITI\Select from vehicle\Asia\M37\2011-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Asia\M56\2011-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Asia\Q50\2014-	Program smart key,
INFINITI\Select from vehicle\Asia\QX50\2014-	Program smart key,
INFINITI\Select from vehicle\Asia\QX56\2011-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Asia\QX60\2014-	Program smart key,
INFINITI\Select from vehicle\Asia\QX70\2014\S	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Asia\QX70\2014\Pr	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Africa\JX35\2013\Pr	Program smart key,
INFINITI\Select from vehicle\Africa\M37\2011-	Read BCM inner code,Program smart key,

INFINITI\Select from vehicle\Africa\M56\2011-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Africa\Q50\2014-	Program smart key,
INFINITI\Select from vehicle\Africa\QX50\2014-	Program smart key,
INFINITI\Select from vehicle\Africa\QX56\2011-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Africa\QX60\2014-	Program smart key,
INFINITI\Select from vehicle\Africa\QX70\2014\	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\JX35\2013\	Program smart key,
INFINITI\Select from vehicle\Europe\M37\2011-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\M56\2011-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\Q50\2014-	Program smart key,
INFINITI\Select from vehicle\Europe\QX50\2014	Program smart key,
INFINITI\Select from vehicle\Europe\QX56\2011	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\QX60\2014	Program smart key,
INFINITI\Select from vehicle\Europe\QX70\2014	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Australia\JX35\201	Program smart key,
INFINITI\Select from vehicle\Australia\M37\2011	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Australia\M56\2011	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Australia\Q50\2014	Program smart key,
INFINITI\Select from vehicle\Australia\QX50\201	Program smart key,
INFINITI\Select from vehicle\Australia\QX56\201	Read BCM inner code,Program smart key,

INFINITI\Select from vehicle\Australia\QX60\201	Program smart key,
INFINITI\Select from vehicle\Australia\QX70\201	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Middle	Program smart key,
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Middle	Program smart key,
INFINITI\Select from vehicle\Middle	Program smart key,
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Middle	Program smart key,
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program smart key,
INFINITI\Select from type\Smart key\New 20-bit	Program smart key,
INFINITI\Select from type\Smart key\New 20-bit	Program smart key,
INFINITI\Select from type\Smart key\New 20-bit	Program smart key,
INFINITI\Select from type\Smart key\New 20-bit	Program smart key,
INFINITI\Select from type\Smart key\New 20-bit	Program smart key,
INFINITI\Select from type\Smart key\New 20-bit	Program smart key,
INFINITI\Select from type\Smart key\New 20-bit	Program smart key,
INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\North	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\North	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,

INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\North	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\North	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\North	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\North	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\North	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\North	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\North	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\North	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\North	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\North	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\North	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\North	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\North	Read BCM inner code,Program key,Delete

INFINITI\Select from vehicle\North	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\North	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\North	Read BCM inner code,Program key>Delete
INFINITI\Select from vehicle\North	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\North	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\North	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\South	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\South	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\South	Read BCM inner code,Program key>Delete
INFINITI\Select from vehicle\South	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\South	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\South	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\South	Read BCM inner code,Program key>Delete
INFINITI\Select from vehicle\South	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\South	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\South	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\South	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\South	Read BCM inner code,Program key>Delete
INFINITI\Select from vehicle\South	Read BCM inner code,Program key>Delete
INFINITI\Select from vehicle\South	Program key,Clear fault code,Read BCM inner

INFINITI\Select from vehicle\South	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\South	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\South	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\South	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\South	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\South	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\South	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\South	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\South	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\South	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\South	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\South	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\South	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\South	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\South	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Asia\EX35\2008-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Asia\FX35\2003\S	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Asia\FX35\2004-	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Asia\FX35\2008-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Asia\FX37\2008-	Read BCM inner code,Program smart key,

INFINITI

INFINITI\Select from vehicle\Asia\FX45\2003\S	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Asia\FX45\2003\S	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Asia\FX50\2008-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Asia\G20\2000-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Asia\G35\2	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Asia\G35\2	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Asia\G35\2	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Asia\G35\4	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Asia\G35\4	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Asia\G35\4	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Asia\G37\2008-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Asia\I30\2000-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Asia\I35\2000-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Asia\M35\2006-	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Asia\M35\2009-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Asia\M45\2003-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Asia\M45\2006-	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Asia\M45\2009-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Asia\QX4\2001-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Asia\Q45\2002-	Program key,Clear fault code,Read BCM inner

INFINITI\Select from vehicle\Asia\QX56\2004-	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Asia\QX56\2008-	Read BCM inner code,Program key,Delete
INFINITI\Read BCM code and release directional	Release steering lock,Read BCM inner code,
INFINITI\PIN calculator	Type 1,Type 2,Type 3 (20-bit rolling code/PIN),Type
INFINITI\Select from vehicle\Africa\EX35\2008-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Africa\FX35\2003\S	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Africa\FX35\2004-	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Africa\FX35\2008-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Africa\FX37\2008-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Africa\FX45\2003\S	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Africa\FX45\2003\S	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Africa\FX50\2008-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Africa\G20\2000-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Africa\G25\2011-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Africa\G35\2	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Africa\G35\2	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Africa\G35\2	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Africa\G35\4	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Africa\G35\4	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Africa\G35\4	Read BCM inner code,Program smart key,

INFINITI\Select from vehicle\Africa\G35\4	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Africa\G37\2008-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Africa\I30\2000-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Africa\I35\2000-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Africa\M35\2006-	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Africa\M35\2009-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Africa\M45\2003-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Africa\M45\2006-	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Africa\M45\2009-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Africa\QX4\2001-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Africa\Q45\2002-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Africa\QX56\2004-	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Africa\QX56\2008-	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Africa\QX70\2014\	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\EX35\2008-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\FX35\2003\	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Europe\FX35\2004-	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Europe\FX35\2008-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\FX37\2008-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\FX45\2003\	Program key,Clear fault code,Read BCM inner

INFINITI\Select from vehicle\Europe\FX45\2003\	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Europe\FX50\2008-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\G20\2000-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Europe\G25\2011-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\G35\2	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Europe\G35\2	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Europe\G35\2	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Europe\G35\4	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Europe\G35\4	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Europe\G35\4	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\G35\4	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Europe\G37\2008-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\I30\2000-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Europe\I35\2000-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Europe\M35\2006-	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Europe\M35\2009-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\M45\2003-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Europe\M45\2006-	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Europe\M45\2009-	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\QX4\2001-	Program key,Clear fault code,Read BCM inner

INFINITI\Select from vehicle\Europe\Q45\2002-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Europe\QX56\2004	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Europe\QX56\2008	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Europe\QX70\2014	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Australia\EX35\200	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Australia\FX35\200	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Australia\FX35\200	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Australia\FX35\200	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Australia\FX37\200	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Australia\FX45\200	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Australia\FX45\200	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Australia\FX50\200	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Australia\G20\2000	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Australia\G25\2011	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Australia\G35\2	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Australia\G35\2	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Australia\G35\2	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Australia\G35\4	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Australia\G35\4	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Australia\G35\4	Read BCM inner code,Program smart key,

INFINITI\Select from vehicle\Australia\G35\4	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Australia\G37\2008	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Australia\I30\2000-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Australia\I35\2000-	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Australia\M35\2006	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Australia\M35\2009	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Australia\M45\2003	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Australia\M45\2006	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Australia\M45\2009	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Australia\QX4\2001	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Australia\Q45\2002	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Australia\QX56\200	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Australia\QX56\200	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Australia\QX70\201	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner

INFINITI\Select from vehicle\Middle	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Middle East\G35\2	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Middle East\G35\2	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Middle East\G35\2	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Middle East\G35\4	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Middle East\G35\4	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Middle East\G35\4	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Middle East\G35\4	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner

INFINITI\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program key,Delete
INFINITI\Select from vehicle\Middle	Read BCM inner code,Program smart key,
INFINITI\Select from vehicle\Europe\FX30D\201	Read BCM inner code,Program smart key,
INFINITI\Select from type\Smart key\4-bit	Read BCM inner code,Release steering
INFINITI\Select from type\Immobilizer\12-bit	Program key,Key count,
INFINITI\Select from type\Immobilizer\12-bit	Program smart key,Key count,Type 3,Type 4,
INFINITI\Select from type\Smart key\12-bit	Program smart key,Key count,Type 3,Type 4,
INFINITI\Select from type\Smart key\4-bit	Activate steering wheel lock,
INFINITI\Select from type\Immobilizer\Activate	Activate steering wheel lock,
INFINITI\Select from type\Immobilizer\New 20-	Add key,
INFINITI\Select from type\Smart key\4-bit	Program smart key,
INFINITI\Select from type\Smart key\4-bit	Program smart key,Clear fault code,
INFINITI\Select from type\Smart key\4-bit	Program smart key,
INFINITI\Select from type\Smart key\4-bit	Program smart key,Delete smart key,
INFINITI\Select from type\Smart key\New 20-bit	Program smart key,
INFINITI\Select from type\Smart key\New 20-bit	Program smart key,
INFINITI\Select from type\Smart key\4-bit	Program smart key,Delete smart key,Program
INFINITI\Select from type\Remote\Type 1	Add remote,Delete remote,

INFINITI\Select from type\Immobilizer\Auto	Add key,
INFINITI\Select from type\Immobilizer\Electronic	Add key,Add key(fixed code),
INFINITI\Select from type\Immobilizer\Electronic	Program key,
INFINITI\Select from type\Immobilizer\Electronic	Add key,Activate steering wheel lock,Add key(fixed
INFINITI\Select from type\Remote\Type 2	Delete remote,Add remote,
INFINITI\Select from type\Smart key\New 20-bit	Program smart key,
ALFA ROMEO\Select from vehicle\Asia\Giulia\2015-	Add smart key,Delete smart key,Read pin code,
ALFA ROMEO\Select from vehicle\Asia\Stelvio\2016-	Add smart key,Delete smart key,Read pin code,
ALFA ROMEO\Select from vehicle\Europe\Giulia\2015	Add smart key,Delete smart key,Read pin code,
ALFA ROMEO\Select from vehicle\Europe\Stelvio\201	Add smart key,Delete smart key,Read pin code,
ALFA ROMEO\Select from type\Type 10	Add smart key,Delete smart key,Read pin code,
ALFA ROMEO\Select from vehicle\North	Add smart key,Delete smart key,Read pin code,
ALFA ROMEO\Select from vehicle\North	Add smart key,Delete smart key,Read pin code,
ALFA ROMEO\Select from vehicle\Australia\Giulia\201	Add smart key,Delete smart key,Read pin code,
ALFA ROMEO\Select from vehicle\Australia\Stelvio\20	Add smart key,Delete smart key,Read pin code,
ALFA ROMEO\Select from vehicle\Asia\159\Immobiliz	Key info.,Program key,Backup immo
ALFA ROMEO\Select from vehicle\Asia\Spider\Immobi	Key info.,Program key,Backup immo
ALFA ROMEO\Select from vehicle\Asia\Brera\Immobili	Key info.,Program key,Backup immo
ALFA ROMEO\Select from vehicle\Asia\147\Immobiliz	Read key count,Program key,Read key
ALFA ROMEO\Select from vehicle\Asia\GT\Immobilize	Read key count,Program key,Read key

ALFA ROMEO

ALFA ROMEO\Select from vehicle\Asia\Giulietta\2013-	Read key count,All key lost,Read pin code,Make
ALFA ROMEO\Select from vehicle\Asia\Mito\Immobiliz	Read key count,All key lost,Read pin code,Make
ALFA ROMEO\Select from vehicle\Asia\Giulietta\2010-	Key count,Program key,Remote count,Program
ALFA ROMEO\Select from type\Type 1	Key info.,Program key,Backup immo
ALFA ROMEO\Select from type\Type 2	Read key count,Program key,Read key
ALFA ROMEO\Select from type\Type 3	Read key count,All key lost,Read pin code,Make
ALFA ROMEO\Select from type\Type 4	Key count,Program key,Delete key,
ALFA ROMEO\Select from type\Type 5	Key count,Program key,Delete key,
ALFA ROMEO\Select from type\Type 6	Program key,Delete key,
ALFA ROMEO\Select from type\Type 7	Program key,Delete key,Obtain immoID,
ALFA ROMEO\Select from type\Type 8	Key info.,Program key,
ALFA ROMEO\Select from type\Type 9	Key count,Program key,Remote count,Program
ALFA ROMEO\Select from vehicle\Asia\The	Read key count,Program key,Read key
ALFA ROMEO\Select from vehicle\Europe\159\2007-	Key info.,Program key,Backup immo
ALFA ROMEO\Select from vehicle\Europe\Spider\200	Key info.,Program key,Backup immo
ALFA ROMEO\Select from vehicle\Europe\Brera\2007-	Key info.,Program key,Backup immo
ALFA ROMEO\Select from vehicle\Europe\147\2000-	Read key count,Program key,Read key
ALFA ROMEO\Select from vehicle\Europe\GT\2003-	Read key count,Program key,Read key
ALFA ROMEO\Select from vehicle\Europe\Giulietta\20	Read key count,All key lost,Read pin code,Make
ALFA ROMEO\Select from vehicle\Europe\Mito\2008-	Read key count,All key lost,Read pin code,Make

ALFA ROMEO\Select from vehicle\Europe\Giulietta\20	Key count,Program key,Remote count,Program
ALFA ROMEO\Select from vehicle\South	Read key count,All key lost,Read pin code,Make
ALFA ROMEO\Select from vehicle\South	Key count,Program key,Remote count,Program
ALFA ROMEO\Select from vehicle\Australia\159\2006-	Key info.,Program key,Backup immo
ALFA ROMEO\Select from vehicle\Australia\Spider\20	Key info.,Program key,Backup immo
ALFA ROMEO\Select from vehicle\Australia\Brera\200	Key info.,Program key,Backup immo
ALFA ROMEO\Select from vehicle\Australia\147\2000-	Read key count,Program key,Read key
ALFA ROMEO\Select from vehicle\Australia\GT\2003-	Read key count,Program key,Read key
ALFA ROMEO\Select from vehicle\Australia\Giulietta\2	Read key count,All key lost,Read pin code,Make
ALFA ROMEO\Select from vehicle\Australia\Mito\2009	Read key count,All key lost,Read pin code,Make
ALFA ROMEO\Select from vehicle\Australia\Giulietta\2	Key count,Program key,Remote count,Program
FIAT\Select from type\Immobilizer\Type 1	Program key,
FIAT\Select from type\Immobilizer\Type 2	Program key,
FIAT\Select from type\Immobilizer\Type 3	Program key,
FIAT\Select from type\Immobilizer\Type 4	Program key,
FIAT\Select from type\Immobilizer\Type 5	Key info.,Program key,
FIAT\Select from type\Immobilizer\Type 6	Key count,Program key>Delete key,
FIAT\Select from type\Immobilizer\Type 7	Key count,Program key>Delete key,
FIAT\Select from type\Immobilizer\Type 8	Key count,Program key,Remote count,Program
FIAT\Select from type\Immobilizer\Type 9	Program key>Delete key,

FIAT>Select from type\Immobilizer\Type 10	Program key,Delete key,Obtain immoID,
FIAT>Select from type\Smart key\Type 1	Add smart key,Delete smart key,Read PIN code,
FIAT>Select from type\Smart key\Type 2	Add smart key,Delete smart key,Read pin code,
FIAT\Asia\500	Key count,Program key,Read pin code,Make
FIAT\Asia\Linea	Key count,Program key,Remote count,Program
FIAT\Asia\Punto	Key count,Program key,Remote count,Program
FIAT\Asia\Viaggio\2013-	Key count,Program key,Read pin code,Make
FIAT\Europe\500X\2014-2018(334)	Add smart key,Delete smart key,Read pin code,
FIAT\Europe\Freemont\Smart key	Add smart key,Delete smart key,Read PIN code,
FIAT\Europe\Palio(178)	Key count,Program key,Remote count,Program
FIAT\Europe\Panda\2011-(312)	Key count,Program key,Read pin code,Make
FIAT\Europe\Sedici\Petrol\2010	Key count,Program key,Delete key,
FIAT\Europe\Viaggio\2012-	Key count,Program key,Read pin code,Make
FIAT\South America\500\2010-2012	Key count,Program key,Read pin code,Make
FIAT>Select from type\Immobilizer\Type 11	Key count,Program key,Read pin code,Make
FIAT\Europe\Sedici\Diesel\2010-	Program key,
FIAT\Europe\500L\2012-(199)	Key info.,Program key,Read pin code,Make
FIAT\North America\UNO	Key count,Program key,Remote count,Program
FIAT\Europe\Talento\2016	Read PIN code,Recover backup data,Program key,
FIAT\Europe\500X\2018-2019(334)	Add smart key,Delete smart key,Read pin code,

FIAT

FIAT\North America\500X\2014-	Add smart key,Delete smart key,Read pin code,
FIAT\North America\500X\2018-	Add smart key,Delete smart key,Read pin code,
FIAT\China\500X\2014-2018(334)	Add smart key,Delete smart key,Read pin code,
FIAT\China\500X\2018-2019(334)	Add smart key,Delete smart key,Read pin code,
FIAT\Europe\124\2017-	All smart key lost,Switch ignition on,Add smart key,
FIAT\North America\124\2017	All smart key lost,Switch ignition on,Add smart key,
FIAT\North America\124\2018-2019	All smart key lost,Switch ignition on,Add smart key,
FIAT\North America\Spider\2017-2018	All smart key lost,Switch ignition on,Add smart key,
FIAT\China\Viaggio\Fobik	Backup immo data,Make dealer key,Program
FIAT\China\Palio\Immobilizer	Backup immo data,Make dealer key(48)
FIAT\China\Siena\Immobilizer	Backup immo data,Make dealer key(48)
FIAT\China\Bravo\Immobilizer	Backup immo data,Program key,Make
FIAT\China\Perla\Immobilizer	Backup immo data,Make dealer key(48)
FIAT\China\Freemont\Smart key	Read PIN code,Add smart key,Delete smart key,
FIAT\China\Ottimo\Smart key	Program smart key,Read PIN code,
FIAT\China\Viaggio\Smart key	Program smart key,Read PIN code,
FIAT\China\Ottimo\Fobik	Backup immo data,Make dealer key,Program
FIAT\Africa\Siena\2002-2008	Key count,Program key,Remote count,Program
FIAT\Asia\Fiorino\2008-	Key count,Program key,Read pin code,Make
FIAT\Europe\500\2007-2016(312)	Key count,Program key,Read pin code,Make

FIAT\Europe\Albea\2002- (172)	Key count,Program key,Remote count,Program
FIAT\Europe\Bravo\ 2007(198)	Key count,Program key,Remote count,Program
FIAT\Europe\Croma\2005- 2007(194)	Key info.,Program key,
FIAT\Europe\Doblo\2009- (263)	Key count,Program key,Read pin code,Make
FIAT\Europe\Ducato\2006- 2012(250)	Key count,Program key,Remote count,Program
FIAT\Europe\Ducato\2012- (250)	Key info.,Program key,Read pin code,Make
FIAT\Europe\Fiorino\2008- (225)	Key count,Program key,Read pin code,Make
FIAT\South America\Punto\2008-2014	Key count,Program key,Remote count,Program
FIAT\South America\Stilo\2002-2006	Key count,Program key,Remote count,Program
FIAT\South America\Doblo\2000-	Key count,Program key,Remote count,Program
FIAT\South America\Fiorino\2014-2015	Read pin code,Backup EEPROM,Recover
FIAT\South America\Idea\2004-2012	Key count,Program key,Remote count,Program
FIAT\South America\Linea\2004-2012	Key count,Program key,Remote count,Program
FIAT\South America\Palio\2000-2003	Key count,Program key,Remote count,Program
FIAT\South America\Palio\2004-2012	Key count,Program key,Remote count,Program
FIAT\Asia\Grande Punto\2006-2011	Key count,Program key,Read pin code,Make
FIAT\Europe\Idea\2003- 2012(135)	Key count,Program key,Remote count,Program
FIAT\Europe\Linea\2007- (323)	Key count,Program key,Remote count,Program
FIAT\Europe\Panda\2005- 2011(169)	Key count,Program key,Remote count,Program
FIAT\Europe\Punto\2000- 2006(188)	Key count,Program key,Remote count,Program

FIAT\Europe\Punto\2006-2011(199)	Key count,Program key,Read pin code,Make
FIAT\Europe\Qubo\2008-(300)	Key count,Program key,Read pin code,Make
FIAT\Europe\Scudo\2007(220)\Type 1	Program key,
FIAT\Europe\Scudo\2007(220)\Type 2	Program key,
FIAT\Europe\Scudo\2007(220)\Type 3	Program key,
FIAT\Europe\Scudo\2008-(270)	Program key,
FIAT\Europe\Stilo\2000-2006(192)	Key count,Program key,Remote count,Program
FIAT\Europe\Ulysee\2002-2010(179)	Program key,
FIAT\Middle East\500\2007-	Key count,Program key,Read pin code,Make
FIAT\Middle East\Doblo\2009	Key count,Program key,Remote count,Program
FIAT\South America\Bravo\2007-	Key count,Program key,Remote count,Program
FIAT\South America\Siena\2008-2012	Key count,Program key,Remote count,Program
FIAT\South America\Strada\2000-2003	Key count,Program key,Remote count,Program
FIAT\Europe\Sedici\Diesel\2006-2010	Add new key,Add old key,Delete key,
FIAT\Europe\Phedra\2005-	Program key,
FIAT\Europe\Ulysse\2002-2005(179)	Program key,
FIAT\Europe\Ulysse\2005-2010(179)	Program key,
FIAT\Europe\Doblo\2005-2009(223)	Program key,Key count,Program
FIAT\China\Linea\Immobilizer	Backup immo data,Program key,Make
CADILLAC\China\XTS\2018\Smart key	All smart key lost,Add smart key,Read smart key

CADILLAC\China\ATS\2017-\Smart key	All smart key lost,Add smart key,Read smart key
CADILLAC\China\XT4\2018-\Smart key	All smart key lost,Add smart key,Read smart key
CADILLAC\China\Escalade\2018-\Smart key	All smart key lost,Add smart key,Read smart key
CADILLAC\USA\Canada\CT6\2018\Smart key	All smart key lost,Add smart key,Read smart key
CADILLAC\USA\Canada\CTS\2014-2016\Smart key	Add smart key,All smart key lost,Read smart key
CADILLAC\USA\Canada\CTS\2019\Smart key	All smart key lost,Add smart key,Read smart key
CADILLAC\USA\Canada\Escalade\2014-2016\Smart	All smart key lost,Add smart key,Read key
CADILLAC\USA\Canada\Escalade\2017-2020\Smart	All smart key lost,Add smart key,Read smart key
CADILLAC\USA\Canada\SRX\2014-2016\Smart key	Add smart key,All smart key lost,Read smart key
CADILLAC\USA\Canada\XT4\2020\Smart key	All smart key lost,Add smart key,Read smart key
CADILLAC\USA\Canada\XT5\2017-2019\Smart key	All smart key lost,Add smart key,Read smart key
CADILLAC\USA\Canada\XT5\2020\Smart key	All smart key lost,Add smart key,Read smart key
CADILLAC\USA\Canada\XTS\2019\Smart key	All smart key lost,Add smart key,Read smart key
CADILLAC\China\ATS\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CADILLAC\China\ATSL\2015-2017\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CADILLAC\China\SRX\2010-2014\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CADILLAC\China\SRX\2015-\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CADILLAC\China\XTS\2015\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CADILLAC\China\ATS\2016\Smart key	All smart key lost,Add smart key,Read key
CADILLAC\China\ATSL\2015-2017\Smart key\Type 1	All smart key lost,Add smart key,Read key

CADILLAC\China\SRX\2010-2014\Smart key\Type 1	All smart key lost,Add smart key,Read key
CADILLAC\China\SRX\2015-\Smart key	All smart key lost,Add smart key,Read key
CADILLAC\China\CT6\2016\Smart key	Add smart key,All smart key lost,Read smart key
CADILLAC\China\CTS\Smart key\2013-	Add smart key,All smart key lost,Read smart key
CADILLAC\China\Escalade\-\2017\Smart key	Add smart key,All smart key lost,Read smart key
CADILLAC\China\CT6\2017\Smart key	All smart key lost,Add smart key,Read smart key
CADILLAC\China\XT5\2017\Smart key	All smart key lost,Add smart key,Read smart key
CADILLAC\China\CTS\Mechanical key\2008-	All key lost,
CADILLAC\China\DTS\2006-2013\Mechanical key	All key lost,
CADILLAC\China\Escalade\-\2017\Mechanical key	All key lost,
CADILLAC\China\SRX\2004-2009\Mechanical key	All key lost,
CADILLAC\China\SLS\2005-2009\Mechanical key	All key lost,
CADILLAC\China\SLS\2013\Mechanical key	All key lost,
CADILLAC\China\SLS\2009-\Mechanical key	All key lost,
CADILLAC\China\Escalade\-\2017\Remote	Program remote,Delete remote,
CADILLAC\China\CTS\Remote	Program remote,
CADILLAC\China\Read PIN code	Read pin code type1,Read pin code type2,Read pin
CADILLAC\China\CTS\Mechanical key\2003-2007	All key lost,
CADILLAC\China\CTS\Smart key\2008-2012\Knob	All key lost,
CADILLAC\China\ATSL\2017-\Smart key	All smart key lost,Add smart key,Read smart key

CADILLAC

CADILLAC\China\XTS\2016-\Smart key	Add smart key,All smart key lost,Read smart key
CADILLAC\China\XTS\2015\Smart key	Add smart key,All smart key lost,Read smart key
CADILLAC\China\SRX\2010-2014\Smart key\Type 2	Add smart key,All smart key lost,Read smart key
CADILLAC\China\ATSL\2015-2017\Smart key\Type 2	Add smart key,All smart key lost,Read smart key
CADILLAC\China\Catera\1997-2002\Mechanical key	Clear fault code,Program key,Delete key,
CADILLAC\China\CTS\Mechanical key\2008-	All key lost,
CADILLAC\China\Deville\2003\Mechanical key	All key lost,
CADILLAC\China\Deville STS\Mechanical key	All key lost,
CADILLAC\China\STS\2007-2012\Mechanical key	All key lost,
CADILLAC\China\XLR\2004-2009\Mechanical key	All key lost,
CADILLAC\China\XT6\Smart key	All smart key lost,Add smart key,Read smart key
CADILLAC\Asia\ATS\2013-2016\Smart key	All smart key lost,Add smart key,Read key
CADILLAC\Asia\Seville\1998-2004\Mechanical key	All key lost,
CADILLAC\Asia\Seville\1998-2004\Remote	Program remote,
CADILLAC\Asia\SLS\2005-2012\Smart key	All key lost,
CADILLAC\Asia\SRX\2010-2013\Smart key	All smart key lost,Add smart key,Read key
CADILLAC\Europe\BLS\2005-2010\Smart key	All key lost,
CADILLAC\Europe\Seville\1998-2004\Mechanical key	All key lost,
CADILLAC\Europe\Seville\1998-2004\Remote	Program remote,
CADILLAC\Europe\SRX\2001-2004\Mechanical key	All key lost,

CADILLAC\Europe\STS\2005-2012\Smart key	All key lost,
CADILLAC\Middle East\SRX\2010-	All smart key lost,Add smart key,Read key
CADILLAC\USA\Canada\ATS\2013-2016\Smart key	All smart key lost,Add smart key,Read key
CADILLAC\USA\Canada\Catera\1997-	Clear fault code,Program key,Delete key,
CADILLAC\USA\Canada\CTS\2003-2007\Mechanical	All key lost,
CADILLAC\USA\Canada\CTS\2003-2007\Remote	Program remote,
CADILLAC\USA\Canada\CTS\2008-2013\Mechanical	All key lost,
CADILLAC\USA\Canada\CTS\2008-2013\Remote	Program remote,Delete remote,
CADILLAC\USA\Canada\CTS\2008-2013\Smart key	All key lost,
CADILLAC\USA\Canada\Deville\2000-2005\Smart key	All key lost,
CADILLAC\USA\Canada\Deville\2000-2005\Remote	Program remote,
CADILLAC\USA\Canada\DTs\2006-2011\Type	All key lost,
CADILLAC\USA\Canada\DTs\2006-2011\Type	Program remote,
CADILLAC\USA\Canada\DTs\2006-2011\Type	All key lost,
CADILLAC\USA\Canada\DTs\2006-2011\Type	Program remote,Delete remote,
CADILLAC\USA\Canada\Eldorado\1998-	Program remote,
CADILLAC\USA\Canada\Escalade\2007-	All key lost,
CADILLAC\USA\Canada\Escalade\2007-	Program remote,Delete remote,
CADILLAC\USA\Canada\Seville\1998-	All key lost,
CADILLAC\USA\Canada\Seville\1998-2004\Remote	Program remote,

CADILLAC\USA\Canada\S LS\2005-2012\Smart key	All key lost,
CADILLAC\USA\Canada\S RX\2004-2006\Mechanical	All key lost,
CADILLAC\USA\Canada\S RX\2004-2006\Remote	Program remote,
CADILLAC\USA\Canada\S RX\2007-2009\Mechanical	All key lost,
CADILLAC\USA\Canada\S RX\2007-2009\Remote	Program remote,Delete remote,
CADILLAC\USA\Canada\S RX\2010-2014\Smart key	All smart key lost,Add smart key,Read key
CADILLAC\USA\Canada\S TS\2005-2006\Mechanical	All key lost,
CADILLAC\USA\Canada\S TS\2005-2011\Smart key	All key lost,
CADILLAC\USA\CanadaX LR\2004-2009\Smart key	All smart key lost,
CADILLAC\USA\CanadaX TS\2013-2014\Smart key	All smart key lost,Add smart key,Read key
OPEL\Remote\Antara	Program remote,Delete remote,
OPEL\IMMO>Select from vehicle\Antara\2010-	All key lost,
OPEL\IMMO>Select from vehicle\Omega-	All key lost,Add key,Read key count,Clear fault
OPEL\IMMO>Select from vehicle\Omega-B\Smart	Add smart key,All smart key lost,Read smart key
OPEL\IMMO>Select from type\Type 6	All key lost,
OPEL\IMMO>Select from vehicle\Astra\Astra-J\2010-	All smart key lost,Add smart key,Read key
OPEL\IMMO>Select from vehicle\Astra\Astra-J\2010-	All key lost,Add key,Read key count,Clear fault
OPEL\IMMO>Select from vehicle\Zafira\Zafira-	All smart key lost,Add smart key,Read key
OPEL\IMMO>Select from vehicle\Zafira\Zafira-	All key lost,Add key,Read key count,Clear fault
OPEL\IMMO>Select from vehicle\Meriva\Meriva-	Add key,Delete key,Read pin code,

OPEL\IMMO\Select from vehicle\Corsa\Corsa-	Add key,Delete key,Read pin code,
OPEL\IMMO\Select from vehicle\Mokka\2012-	All smart key lost,Add smart key,Read key
OPEL\IMMO\Select from vehicle\Mokka\2012-	All key lost,Add key,Read key count,Clear fault
OPEL\Remote\Meriva	Program remote,Delete remote,
OPEL\IMMO\Select from vehicle\Vivaro\2014-	Read PIN code,Program key,Recover backup data,
OPEL\Remote\Corsa\Corsa-C	Program remote,Delete remote,
OPEL\IMMO\Select from vehicle\Vivaro\2014-	Program key,
OPEL\Read PIN code	Switch ignition on,Read pin code type1,Read pin code
OPEL\IMMO\Select from type\Type 1\Smart key	All smart key lost,Add smart key,Read key
OPEL\IMMO\Select from vehicle\Insignia\2009-	All smart key lost,Add smart key,Read key
OPEL\IMMO\Select from type\Type 1\Immobilizer	All key lost,Add key,Read key count,Clear fault
OPEL\IMMO\Select from vehicle\Insignia\2009-	All key lost,Add key,Read key count,Clear fault
OPEL\IMMO\Select from type\Type 2	Clear fault code,Program key,Delete key,Program
OPEL\IMMO\Select from vehicle\Agila	Clear fault code,Program key,Delete key,Program
OPEL\IMMO\Select from vehicle\Astra\Astra-G	Clear fault code,Program key,Delete key,Program
OPEL\IMMO\Select from vehicle\Calibra	Clear fault code,Program key,Delete key,Program
OPEL\IMMO\Select from vehicle\Combo\1998-	Clear fault code,Program key,Delete key,Program
OPEL\IMMO\Select from vehicle\Corsa\Corsa-B	Clear fault code,Program key,Delete key,Program
OPEL\IMMO\Select from vehicle\Corsa\Corsa-C	Clear fault code,Program key,Delete key,Program
OPEL\IMMO\Select from vehicle\Meriva\Meriva	Clear fault code,Program key,Delete key,Program

OPEL

OPEL\IMMO>Select from vehicle\Movano\1998-2001	Clear fault code,Program key,Delete key,Program
OPEL\IMMO>Select from vehicle\Omega-	Clear fault code,Program key,Delete key,Program
OPEL\IMMO>Select from vehicle\Sintra	Clear fault code,Program key,Delete key,Program
OPEL\IMMO>Select from vehicle\Tigra-B	Clear fault code,Program key,Delete key,Program
OPEL\IMMO>Select from vehicle\Vectra-B	Clear fault code,Program key,Delete key,Program
OPEL\IMMO>Select from type\Type 3	Program key,Delete key,
OPEL\IMMO>Select from vehicle\Astra\Astra-	Program key,Delete key,Read pin code,Read
OPEL\IMMO>Select from type\Type 4	Read key count,Program key,
OPEL\IMMO>Select from vehicle\Agila B\2009	Read key count,Program key,
OPEL\IMMO>Select from type\Type 5	Read key count,Program key,
OPEL\IMMO>Select from vehicle\Agila B\2009-	Read key count,Program key,
OPEL\Remote\Astra-H	Delete remote,Program remote,
OPEL\Remote\Zafira-B	Delete remote,Program remote,
OPEL\Remote\Vectra-C/Signum	Delete remote,Program remote,
OPEL\Remote\Corsa\Corsa-D	Delete remote,Program remote,
OPEL\IMMO>Select from vehicle\Astra\Astra-	Program key,Delete key,Key count,
OPEL\IMMO>Select from vehicle\Astra\Astra-	All key lost,
OPEL\IMMO>Select from vehicle\Astra\Astra\2007\S	Learn smart key,Delete all smart keys,
OPEL\Remote\Astra\07	Program remote,Delete remote,
OPEL\IMMO>Select from vehicle\Signum\2003-2007	Program key,Delete key,Read PIN

OPEL\IMMO\Select from vehicle\Antara\2006-	All key lost,
OPEL\IMMO\Select from vehicle\Zafira\Zafira-	Clear fault code,Program key,Delete key,Program
OPEL\IMMO\Select from vehicle\Astra\Astra-	All key lost,Add key,Read key count,Clear fault
OPEL\IMMO\Select from vehicle\Astra\Astra-	All smart key lost,Add smart key,Read key
OPEL\IMMO\Select from vehicle\Combo\2012-	All smart key lost,Add smart key,Read key
OPEL\IMMO\Select from vehicle\Astra\Astra-F\1995-	Clear fault code,Program key,Delete key,Program
OPEL\IMMO\Select from vehicle\Astra\Astra\1995-	Clear fault code,Program key,Delete key,Program
OPEL\IMMO\Select from vehicle\Zafira\Zafira-	Program key,Delete key,Read PIN
OPEL\IMMO\Select from vehicle\Combo\2012-	Key count,Program key,Read pin code,Make
VW\IMMO4\Select IMMO manually\NEC24C64(2014	Make dealer key,Learn key(OBD),Backup
VW\IMMO4\Select IMMO manually\MQB-	Backup EEPROM,Recover EEPROM,Backup immo
VW\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo
VW\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo
VW\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo
VW\IMMO5\Immobilizer/Smart key	Backup immo data,Make dealer key,Learn key,Clear
VW\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo
VW\IMMO4\Select IMMO manually\NEC+24C64	Backup EEPROM,Recover EEPROM,Read immo
VW\IMMO4\Select IMMO manually\9S12XHZ512\Im	Backup EEPROM,Recover EEPROM,Read immo
VW\Touareg\2003-2007\Immobilizer	Read PIN code,Learn key,
VW\Phaeton\2008-\Immobilizer	Learn key,Read PIN code,

VW

VWIMMO4>Select IMMO manually\CDC+24C32\Imm	Read immo data,Make dealer key,Directly add
VWIMMO2 & IMMO3\Immobilizer	Immo box,Dashboard,Jetta(2006-
VWRemote\Polo/Jetta (2015)\Remote	Program remote,
VWIMMO4\Auto identify IMMO	Identify immo4 type,
VWRemote\Remote	Add remote>Delete remote,
VW Touareg\2008-2011\Immobilizer	Learn key,Read PIN code,
VW Phaeton\2003-2007\Immobilizer	Read PIN code,Learn key,
VWIMMO4>Select IMMO manually\NEC+24C64	Backup EEPROM,Recover EEPROM,Read immo
VWRemote\Central door lock(1281)	Add remote>Delete remote,
VWRemote\Central module (1281)\Type 1	Add remote>Delete remote,
VWIMMO4>Select IMMO manually\NEC35XX\Immobilizer	Backup EEPROM,Recover EEPROM,Read immo
VWIMMO4>Select IMMO manually\NEC95320(Bora)	Backup EEPROM,Recover EEPROM,Backup immo
VWIMMO4>Select IMMO manually\Magotan/CC\Imm	Make dealer key,Learn key,Unlock 46 chip key,
VWIMMO4>Select IMMO manually\Engineering	Obtain data,Obtain data (MQB),Make dealer
VWIMMO3.5\Immobilizer	Immo box,Dashboard,
VWIMMO3.5\Remote	Add remote>Delete remote,
VWIMMO2 & IMMO3\Read PIN	Dashboard,Immo box,Engine,Touareg 3.0
VWIMMO3.5\Read PIN code(OBD)\Read PIN	Dashboard,Immo box,Engine,Touareg 3.0
VWIMMO2 & IMMO3\Read PIN	Read pin code,
VWIMMO4>Select IMMO manually\A3/TT/R8-	Backup EEPROM,Recover EEPROM,Backup immo

VW\IMMO4\Select IMMO manually\2013(Q3)NEC+2	Backup EEPROM,Recover EEPROM,Make dealer
VW\IMMO4\Select IMMO manually\NEC95320(JCI)\I	Backup EEPROM,Recover EEPROM,Backup immo
VW\IMMO4\Select IMMO manually\Magotan/CC\Re	Add remote>Delete remote,
VW\IMMO3.5\Read PIN code(OBD)\Read PIN	Read pin code,
VW\IMMO2 & IMMO3\Read PIN	Read pin code,
VW\IMMO2 & IMMO3\Read PIN	Read pin code type1,Read pin code type2,
VW\IMMO2 & IMMO3\Read PIN	Read pin code type1,Read pin code type2,Read pin
VW\IMMO2 & IMMO3\Read PIN	Read pin code,
VW\IMMO2 & IMMO3\Read PIN	Read pin code,
VW\IMMO2 & IMMO3\Read PIN	Read pin code,
VW\IMMO2 & IMMO3\Read PIN	Read pin code,
VW\Remote\Central module (1281)\Type 2	Add remote>Delete remote,
SKODA\IMMO4\Select IMMO	Make dealer key,Learn key(OBD),Backup
SKODA\IMMO4\Select IMMO manually\MQB-	Backup EEPROM,Recover EEPROM,Backup immo
SKODA\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo
SKODA\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo
SKODA\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo
SKODA\IMMO 5\Smart key	Backup immo data,Make dealer key,Learn key,Clear
SKODA\IMMO4\Select IMMO manually\NEC	Backup EEPROM,Recover EEPROM,Read immo
SKODA\IMMO4\Select IMMO	Backup EEPROM,Recover EEPROM,Read immo

SKODA

SKODA\IMMO4>Select IMMO	Backup EEPROM,Recover EEPROM,Read immo
SKODA\IMMO4>Select IMMO	Read immo data,Make dealer key,Directly add
SKODA\IMMO2 & IMMO3\Immobilizer	Immo box,Dashboard,Jetta(2006-
SKODA\Remote\Polo (2015)\Remote	Program remote,
SKODA\IMMO4\Auto identify IMMO	Identify immo4 type,
SKODA\Remote\Remote	Add remote>Delete remote,
SKODA\IMMO4>Select IMMO	Backup EEPROM,Recover EEPROM,Read immo
SKODA\Remote\Central door lock (1281)	Add remote>Delete remote,
SKODA\Remote\Central module (1281)\Type 1	Add remote>Delete remote,
SKODA\IMMO4>Select IMMO	Backup EEPROM,Recover EEPROM,Read immo
SKODA\IMMO4>Select IMMO	Backup EEPROM,Recover EEPROM,Backup immo
SKODA\IMMO4>Select IMMO	Make dealer key,Learn key,Unlock 46 chip key,
SKODA\IMMO4>Select IMMO	Obtain data,Obtain data (MQB),Make dealer
SKODA\IMMO3.5\Immobilizer	Immo box,Dashboard,
SKODA\IMMO3.5\Remote	Add remote>Delete remote,
SKODA\IMMO3.5\Read PIN code	Dashboard,Immo box,Engine,Touareg 3.0
SKODA\IMMO2 & IMMO3\Read PIN code	Dashboard,Immo box,Engine,Touareg 3.0
SKODA\Remote\Central module (1281)\Type 2	Add remote>Delete remote,
CHEVROLET\China\Cruze \2017-\Smart key	All smart key lost,Add smart key,Read smart key
CHEVROLET\USA\Canada\Impala\2014-	All key lost,Add key,Read key count,Clear fault code,

CHEVROLET\USA\Canada\Impala\2014-2019\Smart	All smart key lost,Add smart key,Read key
CHEVROLET\USA\Canada\Malibu\2013-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA\Canada\Malibu\2016\Smart key	All smart key lost,Add smart key,Read key
CHEVROLET\China\Cruze\2014-2016\Smart key	Add smart key,All smart key lost,Read smart key
CHEVROLET\China\Cruze\2014-2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Camaro\2014-2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Camaro\2014-2015\Smart key	Add smart key,All smart key lost,Read smart key
CHEVROLET\China\Equinox\2017-\Smart key	All smart key lost,Add smart key,Read smart key
CHEVROLET\China\Monza\2019-\Immobilizer	Read key count,All key lost,Add key,
CHEVROLET\China\Orlando\2018-\With smart	Add smart key,All smart key lost,Read key count,
CHEVROLET\China\Trailblazer\2019-\Smart key	All smart key lost,Add smart key,Read smart key
CHEVROLET\USA\Canada\Trailblazer\2020\Smart	All smart key lost,Add smart key,Read smart key
CHEVROLET\China\Spark\2013-2014\Smart key	All smart key lost,Add smart key,Read key
CHEVROLET\China\Spark\2013-2014\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Corvette\2017-\Smart key	All smart key lost,Add smart key,Read smart key
CHEVROLET\USA\Canada\Corvette\2017-\Smart	All smart key lost,Add smart key,Read smart key
CHEVROLET\China\Corvette\2014-2015\Smart key	All smart key lost,Add smart key,Read key
CHEVROLET\China\Corvette\2014-2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Africa\Captiva\2013-2017\Smart key-	All key lost,
CHEVROLET\Africa\Sonic\2012-2020\Mechanical key	All key lost,Add key,Read key count,Clear fault code,

CHEVROLET\Africa\Trailblazer\2015-\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Africa\Utility\2015-\Mechanical key	Add key,Delete key,
CHEVROLET\Africa\Utility\2015-\Remote	Program remote,
CHEVROLET\Asia\Malibu\2013-2016\Mechanical key	All smart key lost,Add smart key,Read key
CHEVROLET\Brazil\Captiva\2012-2017\Mechanical	All key lost,
CHEVROLET\Brazil\Captiva\2012-2017\Remote	Program remote,Delete remote,
CHEVROLET\Brazil\Cruze\2012-2016\Smart key	Add key,Delete key,Reset PIN code,
CHEVROLET\Brazil\Onix\2013-2016\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Brazil\Prisma\2013-2016\Mechanical	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Brazil\Spin\2012-2018\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Canada\Orlando\2011-2018\Mechanical	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Europe\Camaro\2017-2019\Smart key-	All smart key lost,Add smart key,Read smart key
CHEVROLET\Europe\Captiva\2013-2017\Smart key-	All key lost,
CHEVROLET\Europe\Trax\2013-2019\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Middle East\Sonic\2013-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\South America\Sonic\2013-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\South America\Spin\2012-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\South America\Tracker\2013-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA/Canada\Blazer\2019-\Smart key-	All smart key lost,Add smart key,Read smart key
CHEVROLET\USA/Canada\Caprice\2011-	All key lost,Add key,Read key count,Clear fault code,

CHEVROLET\USA\Canada\City Express\2014-	Read BCM inner code,Program key,Delete
CHEVROLET\USA\Canada\Corvette Stingray\2014-	All smart key lost,Add smart key,Read key
CHEVROLET\USA\Canada\Corvette Stingray\2017-	All smart key lost,Add smart key,Read smart key
CHEVROLET\USA\Canada\Bolt\2017\Smart key	All smart key lost,Add smart key,Read smart key
CHEVROLET\USA\Canada\Camaro\2017-\Smart key	All smart key lost,Add smart key,Read smart key
CHEVROLET\USA\Canada\Colorado\2015-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA\Canada\Colorado\2015-	Add remote,Clear fault code,
CHEVROLET\USA\Canada\Cruze\2017-2019\Smart	All smart key lost,Add smart key,Read smart key
CHEVROLET\USA\Canada\Equinox\2017-	All smart key lost,Add smart key,Read smart key
CHEVROLET\USA\Canada\Malibu\2017-2020\Smart	All smart key lost,Add smart key,Read smart key
CHEVROLET\USA\Canada\Silverado 1500\2014-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA\Canada\Silverado 1500\2014-	Add remote,Clear fault code,
CHEVROLET\USA\Canada\Silverado 1500\2017-	All smart key lost,Add smart key,Read smart key
CHEVROLET\USA\Canada\Silverado 2500\2015-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA\Canada\Silverado 2500\2015-	Add remote,Clear fault code,
CHEVROLET\USA\Canada\Silverado 3500\2015-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA\Canada\Silverado 3500\2015-	Add remote,Clear fault code,
CHEVROLET\USA\Canada\Suburban\2017-	All smart key lost,Add smart key,Read smart key
CHEVROLET\USA\Canada\Tahoe\2015-	Add remote,Clear fault code,
CHEVROLET\USA\Canada\Tahoe\2017-\Smart key	All smart key lost,Add smart key,Read smart key

CHEVROLET\USA\Canada\Traverse\2019-\Smart	All smart key lost,Add smart key,Read smart key
CHEVROLET\China\Cruze\2013\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Malibu\2015\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Trax\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Aveo\ Type 2\Smart key	All smart key lost,Add smart key,Read key
CHEVROLET\China\Cruze\2013\Smart key	All smart key lost,Add smart key,Read key
CHEVROLET\China\Malibu\2015\Smart key	All smart key lost,Add smart key,Read key
CHEVROLET\China\Trax\ Smart key\2019	All smart key lost,Add smart key,Read key
CHEVROLET\China\Malibu\2016-\Smart key	Add smart key,All smart key lost,Read smart key
CHEVROLET\China\Lova\2016\Immobilizer	All key lost,Add key,
CHEVROLET\China\Lova\2016\Smart key	All smart key lost,Add smart key,
CHEVROLET\China\Epica\2013-\Immobilizer	Program key,Delete key,Read key count,
CHEVROLET\China\Captiva\IMMO\Without	All key lost,
CHEVROLET\China\Captiva\IMMO\Without	Program key,
CHEVROLET\China\Aveo\ Type 1\Immobilizer	Program key,Switch neutral mode,
CHEVROLET\China\Lova\2015-\Immobilizer	Program key,Switch neutral mode,
CHEVROLET\China\Epica\2012\Immobilizer	All key lost,Read Epica(-2009) PIN,
CHEVROLET\China\Lova\2015\Remote	Program remote,
CHEVROLET\China\Sail\Remote	Program remote,Read key count,
CHEVROLET\China\Epica\2013-\Remote	Program remote,Read key count,

CHEVROLET\China\Captiva\Remote\Type 1	Program remote,Delete remote,
CHEVROLET\China\Captiva\Remote\Type 2	Program remote,Delete remote,
CHEVROLET\China\Malibu\2007-2011\Remote	Program remote,Delete remote,
CHEVROLET\China\Sail\3\Remote	Program remote,Read key count,
CHEVROLET\China\Luminar\2006-2011\Immobilizer	Program key,
CHEVROLET\China\Read PIN code	Read pin code type1,Read pin code type2,Read pin
CHEVROLET\China\Lova\2016\Remote	Program remote,Read key count,
CHEVROLET\China\Sail\MMO	Clear fault code,Program key,Delete key,
CHEVROLET\China\Captiva\IMMO\With smart\Smart	All key lost,
CHEVROLET\China\Cavaliere\Immobilizer	Read key count,All key lost,Add key,
CHEVROLET\China\Camaro\2013\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Camaro\2013\Smart key	All smart key lost,Add smart key,Read key
CHEVROLET\China\Camaro\2016-\Smart key	All smart key lost,Add smart key,Read smart key
CHEVROLET\China\Malibu XL\2016\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\China\Malibu XL\2016\Smart key	All smart key lost,Add smart key,Read key
CHEVROLET\China\Malibu XL\2017\Smart key	All smart key lost,Add smart key,Read smart key
CHEVROLET\China\Aveo(old)\Immobilizer	Program key,Switch neutral mode,
CHEVROLET\China\Zafira\1999-	Program key,Delete key,
CHEVROLET\China\Colorado\IMMO\Without smart	All key lost,Clear fault code,Read key count,Add
CHEVROLET\China\Colorado\IMMO\With smart	All key lost,Add key,Read key count,Clear fault code,

CHEVROLET\South America\Montana\2003-	Clear fault code,Program key,Delete key,
CHEVROLET\South America\Astra\2001-\IMMO	Clear fault code,Program key,Delete key,
CHEVROLET\South America\Blazer\2008-	Clear fault code,Program key,Delete key,
CHEVROLET\South America\Meriva\2002-	Clear fault code,Program key,Delete key,
CHEVROLET\South America\Chevy\IMMO	Clear fault code,Program key,Delete key,
CHEVROLET\South America\Celta\2000-\IMMO	Clear fault code,Program key,Delete key,
CHEVROLET\South America\Corsa\1995-	Clear fault code,Program key,Delete key,
CHEVROLET\South America\Corsa	Clear fault code,Program key,Delete key,
CHEVROLET\South America\Omega\1995-	Clear fault code,Program key,Delete key,
CHEVROLET\South America\Prisa\2006-\IMMO	Clear fault code,Program key,Delete key,
CHEVROLET\South America\S10\2008-\IMMO	Clear fault code,Program key,Delete key,
CHEVROLET\South America\Vectra\2005-	Clear fault code,Program key,Delete key,
CHEVROLET\South America\Zafira\1999-	Clear fault code,Program key,Delete key,
CHEVROLET\South America\Cruze\2010-	Add smart key,All smart key lost,Read smart key
CHEVROLET\USA/Canada\Aveo\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA/Canada\Aveo\Smart key	All smart key lost,Add smart key,Read key
CHEVROLET\USA/Canada\Analanche\2007-	Program key,
CHEVROLET\USA/Canada\Camaro\2010-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA/Canada\Camaro\2016\Smart key	All smart key lost,Add smart key,Read key
CHEVROLET\USA/Canada\Captiva\Without smart\All	Program key,

CHEVROLET\USA\Canad a\Colorado\2004-	All key lost,
CHEVROLET\USA\Canad a\Corvette\2014-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA\Canad a\Corvette\2014-	All smart key lost,Add smart key,Read key
CHEVROLET\USA\Canad a\Cruze\2010-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA\Canad a\Cruze\2010-2013\Smart	All smart key lost,Add smart key,Read key
CHEVROLET\USA\Canad a\Equinox\2010-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA\Canad a\Equinox\2010-\Smart key	All smart key lost,Add smart key,Read key
CHEVROLET\USA\Canad a\Equinox\2007-	Program key,
CHEVROLET\USA\Canad a\Express\2008-	Program key,
CHEVROLET\USA\Canad a\HHR\2006-2011\Without	Program key,
CHEVROLET\USA\Canad a\Impala\2006-	Program key,
CHEVROLET\USA\Canad a\Malibu\2004-	Program key,
CHEVROLET\USA\Canad a\Monte Carlo\2006-	Program key,
CHEVROLET\USA\Canad a\Orlando\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA\Canad a\Orlando\Smart key	All smart key lost,Add smart key,Read key
CHEVROLET\USA\Canad a\Silverado\2007-	Program key,
CHEVROLET\USA\Canad a\Silverado\2014-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA\Canad a\Silverado\2014-\Smart	All smart key lost,Add smart key,Read key
CHEVROLET\USA\Canad a\Sonic\2012-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA\Canad a\Sonic\2019\Smart key	All smart key lost,Add smart key,Read key

CHEVROLET\USA/Canada\Spark\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA/Canada\Spark\Smart key	All smart key lost,Add smart key,Read key
CHEVROLET\USA/Canada\Tahoe\2015-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA/Canada\Tahoe\2015-2016\Smart	All smart key lost,Add smart key,Read key
CHEVROLET\USA/Canada\Tahoe\2007-	Program key,
CHEVROLET\USA/Canada\Suburban\2007-	Program key,
CHEVROLET\USA/Canada\Trailblazer\2009\Without	Program key,
CHEVROLET\USA/Canada\Traverse\2009-	Program key,
CHEVROLET\USA/Canada\Cobalt\2005-	Program key,
CHEVROLET\Mexico\Aveo\Immobilizer	Program key,Key diagnosis,Switch to neutral
CHEVROLET\Mexico\Matiz\Immobilizer	Program key,Key diagnosis,Switch to neutral
CHEVROLET\Mexico\Spark\Immobilizer	Program key,Key diagnosis,Switch to neutral
CHEVROLET\USA/Canada\Corvette\2005-	All key lost,
CHEVROLET\USA/Canada\Cruze\2014-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA/Canada\Cruze\2014-2017\Smart	Add smart key,All smart key lost,Read smart key
CHEVROLET\USA/Canada\Suburban\2015-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA/Canada\Suburban\2015-	Add smart key,All smart key lost,Read smart key
CHEVROLET\USA/Canada\Volt\2011-2016\Smart	All smart key lost,Add smart key,Read key
CHEVROLET\USA/Canada\Silverado 1500\2014-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA/Canada\Silverado	All key lost,Add key,Read key count,Clear fault code,

CHEVROLET

CHEVROLET\USA\Canada\Silverado	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA\Canada\Read PIN code	Read pin code type1,Read pin code type2,Read pin
CHEVROLET\South America\Read PIN code	Read pin code type1,Read pin code type2,Read pin
CHEVROLET\Mexico\Read PIN code	Read pin code type1,Read pin code type2,Read pin
CHEVROLET\USA\Canada\Trax\Smart key\2017-	All smart key lost,Add smart key,Read key
CHEVROLET\USA\Canada\Silverado\Remote\2007-	Program remote>Delete remote,
CHEVROLET\USA\Canada\Venture\1999-	All key lost,
CHEVROLET\China\Aveo\ Type 2\Immobilizer	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\USA\Canada\HHE\2006\Without	Program key,
CHEVROLET\Mexico\Chevy\2012\Immobilizer	Modify VIN code,Program key>Delete key,Program
CHEVROLET\China\Aveo(old)\Remote	Program remote,
CHEVROLET\USA\Canada\Spark\2005-	Program key,Switch neutral mode,
CHEVROLET\China\Spark\ 2005-2009\Immobilizer	Program key,Switch neutral mode,
CHEVROLET\China\Corvette\2005-2013\Immobilizer	All key lost,
CHEVROLET\Africa\Aveo\ 2003-2011\Mechanical key	Program key,Switch neutral mode,
CHEVROLET\Africa\Aveo\ 2003-2011\Remote	Program remote,
CHEVROLET\Africa\Captiva\2006-2012\Mechanical	All key lost,
CHEVROLET\Africa\Captiva\2006-2012\Remote	Program remote>Delete remote,
CHEVROLET\Africa\Cruze\ Smart key\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Africa\Orlando\2010-\Mechanical key	All key lost,Add key,Read key count,Clear fault code,

CHEVROLET\Africa\Spark\ 2005-2015\Mechanical key	Program key,Switch neutral mode,
CHEVROLET\Africa\Spark\ 2005-2015\Remote	Program remote,
CHEVROLET\Africa\Vivant\ \2004-2007\Mechanical	Program remote,
CHEVROLET\Asia\Avalanc he\2007-2013\Mechanical	All key lost,
CHEVROLET\Asia\Aveo\ 2007-2011\Mechanical key	Program key,Switch neutral mode,
CHEVROLET\Asia\Aveo\ 2007-2011\Remote	Program remote,
CHEVROLET\Asia\Aveo\ 2011-2014\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Asia\Camaro\ \2010-2014\Mechanical	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Asia\Camaro\ \2012-\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Asia\Captiva\ \2006-2012\Mechanical	All key lost,
CHEVROLET\Asia\Captiva\ \2006-2012\Remote	Program remote>Delete remote,
CHEVROLET\Asia\Cruze\ 2010-\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Asia\Cruze\ 2011-\Smart key	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Asia\Epica\ 2006-2014\Mechanical key	Program key,Switch neutral mode,
CHEVROLET\Asia\Epica\ 2006-2014\Remote	Program remote,
CHEVROLET\Asia\Lumina\ 1998-2006\Mechanical key	Program key,
CHEVROLET\Asia\Lumina\ 2006-2011\Mechanical key	All key lost,
CHEVROLET\Asia\Malibu\ 2008-2011\Mechanical key	All key lost,
CHEVROLET\Asia\Malibu\ 2008-2011\Remote	Program remote>Delete remote,
CHEVROLET\Asia\Spark\ 2009-2015\Mechanical key	Program key,Switch neutral mode,

CHEVROLET\Asia\Spark\2009-2015\Remote	Program remote,
CHEVROLET\Brazil\Astra\2001-2011\Mechanical key	Add key,Delete key,Reset PIN code,
CHEVROLET\Brazil\Blazer\2007-2011\Mechanical	Add key,Delete key,Reset PIN code,
CHEVROLET\Brazil\Celta\2001-2011\Mechanical key	Add key,Delete key,Reset PIN code,
CHEVROLET\Brazil\Cobalt\2012-2015\Mechanical	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Brazil\Colorado\2012-2015\Mechanical	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Brazil\Corsa\2003-2010\Mechanical key	Add key,Delete key,Reset PIN code,
CHEVROLET\Brazil\Montana\2008-2010\Mechanical	Add key,Delete key,Reset PIN code,
CHEVROLET\Brazil\Prisma\2007-2011\Mechanical	Add key,Delete key,Reset PIN code,
CHEVROLET\Brazil\S10\2007-2011\Mechanical key	Add key,Delete key,Reset PIN code,
CHEVROLET\Brazil\Vectra\2000-2005\Mechanical	Clear fault code,Program key,Delete key,
CHEVROLET\Brazil\Vectra\2006-2011\Mechanical	Add key,Delete key,Reset PIN code,
CHEVROLET\Canada\Envoy\2008-2012\Mechanical	All key lost,
CHEVROLET\Canada\Envoy\2008-2012\Remote	Program remote,
CHEVROLET\Canada\Trailblazer\2004-	All key lost,
CHEVROLET\Canada\Trailblazer\2004-2005\Remote	Program remote,
CHEVROLET\Canada\Trailblazer\2008-	All key lost,
CHEVROLET\Canada\Trailblazer\2008-2009\Remote	Program remote,
CHEVROLET\Canada\Uplander\2009\Mechanical	All key lost,
CHEVROLET\Canada\Uplander\2009\Remote	Program remote,

CHEVROLET\Europe\Aveo \2002-2011\Mechanical	Program key,Switch neutral mode,
CHEVROLET\Europe\Aveo \2006-2011\Mechanical	Program remote,
CHEVROLET\Europe\Aveo \2011-Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Europe\Beat \2007-Mechanical key	Program key,Switch neutral mode,
CHEVROLET\Europe\Beat \2007-Remote	Program remote,
CHEVROLET\Europe\Capri ce\2001-2006\Mechanical	All key lost,
CHEVROLET\Europe\Capri ce\2006-Mechanical key	All key lost,
CHEVROLET\Europe\Capt iva\2006-2012\Mechanical	All key lost,
CHEVROLET\Europe\Capt iva\2006-2012\Remote	Program remote>Delete remote,
CHEVROLET\Europe\Cob alt\2010-Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Europe\Cruz e\Smart key\Mechanical	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Europe\Epic a\2006-2014\Mechanical	Program key,Switch neutral mode,
CHEVROLET\Europe\Epic a\2006-2014\Remote	Program remote,
CHEVROLET\Europe\Kalo s\2002-2014\Mechanical	Program key,Switch neutral mode,
CHEVROLET\Europe\Kalo s\2002-2014\Remote	Program remote,
CHEVROLET\Europe\Lace tti\2007-2012\Mechanical	Program key,Switch neutral mode,
CHEVROLET\Europe\Lace tti\2007-2012\Remote	Program remote,
CHEVROLET\Europe\Mati z\2007-Mechanical key	Program key,Switch neutral mode,
CHEVROLET\Europe\Mati z\2007-Remote	Program remote,
CHEVROLET\Europe\Orla ndo\2010-Mechanical key	All key lost,Add key,Read key count,Clear fault code,

CHEVROLET\Europe\Sonic\2012-2015\Mechanical	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Europe\Spark\2009-2015\Mechanical	Program key,Switch neutral mode,
CHEVROLET\Europe\Spark\2009-2015\Remote	Program remote,
CHEVROLET\Europe\Spark GT\2007-\Mechanical key	Program key,Switch neutral mode,
CHEVROLET\Europe\Spark GT\2007-\Remote	Program remote,
CHEVROLET\Europe\Tacuma\2006-\Mechanical key	Program key,Switch neutral mode,
CHEVROLET\Europe\Tacuma\2006-\Remote	Program remote,
CHEVROLET\Europe\Trailblazer\1999-	All key lost,
CHEVROLET\Europe\Trailblazer\1999-2005\Remote	Program remote,
CHEVROLET\India\Beat\Mechanical key	Program key,Switch neutral mode,
CHEVROLET\India\Captiva\2009-2012\Mechanical	All key lost,
CHEVROLET\India\Captiva\2009-2013\Remote	Program remote>Delete remote,
CHEVROLET\India\Cruze\2008-\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\India\Kalos\2005-2014\Mechanical key	Program key,Switch neutral mode,
CHEVROLET\India\Kalos\2005-2015\Remote	Program remote,
CHEVROLET\India\Lacetti\2004-2012\Mechanical key	Program key,Switch neutral mode,
CHEVROLET\India\Sail\2012-2015\Mechanical key	Program key,Switch neutral mode,
CHEVROLET\Middle East\Caprice\2006-	All key lost,
CHEVROLET\Middle East\Cruze\2009-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Middle East\Impala\2014-	All smart key lost,Add smart key,Read key

CHEVROLET\Middle East\Malibu\2004-	Program remote,
CHEVROLET\Middle East\Malibu\2013-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\Middle East\Spark\2009-	Program key,Switch neutral mode,
CHEVROLET\Middle East\Spark\2009-	Program remote,
CHEVROLET\Middle East\Trailblazer\1999-	All key lost,
CHEVROLET\Middle East\Trailblazer\1999-	Program remote,
CHEVROLET\Middle East\Trax\2013-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\South America\Agile\2009-	Add key,Delete key,
CHEVROLET\South America\C2\1996-	All key lost,
CHEVROLET\South America\Camaro\2010-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\South America\Captiva\2007-	All key lost,
CHEVROLET\South America\Captiva\2007-	Program remote,Delete remote,
CHEVROLET\South America\Classic\2008-	Clear fault code,Program key,Delete key,
CHEVROLET\South America\Cobalt\2010-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\South America\Epica\2006-	Program key,Switch neutral mode,
CHEVROLET\South America\Epica\2006-	Program remote,
CHEVROLET\South America\Matiz\2007-	Program key,Switch neutral mode,
CHEVROLET\South America\Matiz\2007-	Program remote,
CHEVROLET\South America\Monza\1996-	Add key,Delete key,Reset PIN code,
CHEVROLET\South America\Onix\2012-	All key lost,Add key,Read key count,Clear fault code,

CHEVROLET\South America\Optra\2004-	Program key,Switch neutral mode,
CHEVROLET\South America\Optra\2004-	Program remote,
CHEVROLET\South America\Sail\2012-	Program key,Switch neutral mode,
CHEVROLET\South America\Spark\2009-	Program key,Switch neutral mode,
CHEVROLET\South America\Spark\2009-	Program remote,
CHEVROLET\South America\SSR\2004-	Program remote,
CHEVROLET\South America\Suburban\2007-	All key lost,
CHEVROLET\South America\Suburban\2007-	Program remote,Delete remote,
CHEVROLET\South America\Tornado\2000-	Add key,Delete key,Reset PIN code,
CHEVROLET\South America\Tornado\2000-	Program remote,
CHEVROLET\South America\Tracker\2001-	All key lost,
CHEVROLET\South America\Tracker\2001-	Program key,Delete key,Register immobiliser,
CHEVROLET\South America\Trax\2013-	All key lost,Add key,Read key count,Clear fault code,
CHEVROLET\South America\Vectra\2006-	Add key,Delete key,Reset PIN code,
CHEVROLET\USA/Canada\Captiva\2012-	All key lost,
CHEVROLET\USA/Canada\Cavalier\2000-	Program remote,Delete remote,
CHEVROLET\USA/Canada\HHR\2006-2011\Remote	Program remote,
CHEVROLET\USA/Canada\SSR\2004-2006\Remote	Program remote,
CHEVROLET\USA/Canada\Uplander\2005-	All key lost,
CHEVROLET\USA/Canada\Uplander\2005-	Program remote,

CHEVROLET\USA\Canada\Uplander\2008\Mechanic	All key lost,
CHEVROLET\USA\Canada\Uplander\2008\Remote	Program remote,
CHEVROLET\USA\Canada\Corvette\2005-	All smart key lost,
CHEVROLET\USA\Canada\Avalanche\2007-	All key lost,
CHEVROLET\USA\Canada\Avalanche\2007-	Program remote,Delete remote,
CHEVROLET\USA\Canada\Aveo\Remote	Program remote,
CHEVROLET\USA\Canada\Captiva\2012-	Program remote,Delete remote,
CHEVROLET\USA\Canada\Cobalt\2005-	Program remote,Delete remote,
CHEVROLET\USA\Canada\Colorado\2004-	Program remote,
CHEVROLET\USA\Canada\Equinox\2005-	Program remote,Delete remote,
CHEVROLET\USA\Canada\Equinox\2007-	Program remote,Delete remote,
CHEVROLET\USA\Canada\Express Van\2002-	Program remote,
CHEVROLET\USA\Canada\Express Van\2008-	All key lost,
CHEVROLET\USA\Canada\Express Van\2008-	Program remote,Delete remote,
CHEVROLET\USA\Canada\Impala\2000-	Program remote,
CHEVROLET\USA\Canada\Malibu\2001-	Program remote,Delete remote,
CHEVROLET\USA\Canada\Malibu\2004-	Program remote,Delete remote,
CHEVROLET\USA\Canada\Monte Carlo\2006-	All key lost,
CHEVROLET\USA\Canada\Monte Carlo\2006-	All key lost,
CHEVROLET\USA\Canada\Silverado\2007-	Program remote,Delete remote,

	CHEVROLET\USA\Canada\Tahoe\2007-	Program remote,Delete remote,
	CHEVROLET\USA\Canada\Traverse\2009-	Program remote,Delete remote,
	CHEVROLET\USA\Canada\Trax\Mechanical	All key lost,Add key,Read key count,Clear fault code,
	MAZDA\China\Atenza\2017\Smart key	Add smart key,All smart key lost,Switch ignition on,
	MAZDA\China\MX-5\2017-\Smart key	Add smart key,All smart key lost,Switch ignition on,
	MAZDA\China\M2\2017-\Smart key	Add smart key,All smart key lost,Switch ignition on,
	MAZDA\China\M3\Smart key\Type 2(2017-)	Add smart key,All smart key lost,Switch ignition on,
	MAZDA\China\CX-3\2017-\Smart key	Add smart key,All smart key lost,Switch ignition on,
	MAZDA\China\Axela\2018-\Smart key	All smart key lost,Switch ignition on,Add smart key,
	MAZDA\China\CX-5\2018-\Smart key	All smart key lost,Switch ignition on,Add smart key,
	MAZDA\China\CX-4\2018-\Smart key	All smart key lost,Switch ignition on,Add smart key,
	MAZDA\China\M2\2018-\Smart key	All smart key lost,Switch ignition on,Add smart key,
	MAZDA\China\CX-9\With smart\2018-	All smart key lost,Switch ignition on,Add smart key,
	MAZDA\China\CX-7\With smart\2018-	All smart key lost,Switch ignition on,Add smart key,
	MAZDA\China\CX-7\With smart\2017-2018	Add smart key,All smart key lost,Switch ignition on,
	MAZDA\China\CX-9\With smart\2017-2018	Add smart key,All smart key lost,Switch ignition on,
	MAZDA\China\Atenza\2018-\Smart key	All smart key lost,Switch ignition on,Add smart key,
	MAZDA\China\MX-5\2018-\Smart key	All smart key lost,Switch ignition on,Add smart key,
	MAZDA\China\CX-8\2018-\Smart key	All smart key lost,Switch ignition on,Add smart key,
	MAZDA\Europe\CX-9\With smart\2017	All smart key lost,Add smart key,Switch ignition

MAZDA\North America\Mx5\With	All smart key lost,Switch ignition on,Add smart key,
MAZDA\North America\CX-9\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\North America\CX-5\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\North America\CX-4\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\North America\CX-3\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\North America\M6\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\North America\M3\With	All smart key lost,Switch ignition on,Add smart key,
MAZDA\North America\M2\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\North America\Axela\With	All smart key lost,Switch ignition on,Add smart key,
MAZDA\North America\Atenza\With	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Africa\Mx5\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Africa\CX-9\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Africa\CX-5\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Africa\CX-3\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Africa\M6\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Africa\M3\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Africa\M2\With smart\2017	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Australia\Mx5\With smart\2017	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Australia\Demio\With smart\2017	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Australia\CX-9\With smart\2017	All smart key lost,Switch ignition on,Add smart key,

MAZDA\Australia\CX-5\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Australia\CX-3\With smart\2017	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Australia\M6\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Australia\M3\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Australia\M2\With smart\2017	All smart key lost,Switch ignition on,Add smart key,
MAZDA\South America\Mx5\With	All smart key lost,Switch ignition on,Add smart key,
MAZDA\South America\CX-9\With	All smart key lost,Switch ignition on,Add smart key,
MAZDA\South America\CX-5\With	All smart key lost,Switch ignition on,Add smart key,
MAZDA\South America\CX-3\With	All smart key lost,Switch ignition on,Add smart key,
MAZDA\South America\M6\With	All smart key lost,Switch ignition on,Add smart key,
MAZDA\South America\M3\With	All smart key lost,Switch ignition on,Add smart key,
MAZDA\South America\M2\With	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Europe\Mx5\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Europe\Demio\With smart\2017	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Europe\CX-9\With smart\2018-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Europe\CX-5\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Europe\CX-3\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Europe\M6\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Europe\M3\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Europe\M2\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,

MAZDA\Asia\Mx5\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Asia\M6\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\China\Axela-2016\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\China\Atenza\2013-2016\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\China\CX-5\2016\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\China\M6\Immobilizer	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\China\M6\Smart key	Add smart key,Delete smart key,
MAZDA\China\M3\Immobilizer\Type 1	Add key,Read key count,All key lost,
MAZDA\China\M2\2008-2014\Immobilizer	Add key,All key lost,
MAZDA\China\Mazda6\Immobilizer	All key lost,
MAZDA\China\Mazda6\Smart key	Delete & program smart key,All key/smart key
MAZDA\China\M3\Immobilizer\Type 2	Add key,All key lost,
MAZDA\China\M5\Immobilizer\Type 2	Add key,All key lost,
MAZDA\China\M8\Smart key	Add key,All key lost,Add smart key,Lost all smart
MAZDA\China\M5\Immobilizer\Type 1	Add key,All key lost,Read key count,
MAZDA\China\M3\Smart key\Type 1	Add smart key,All smart key lost,Switch ignition on,
MAZDA\China\Axela\2017-2018\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\China\M8\Immobilizer	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\China\CX-7\With smart\2016	Add key,All key lost,Add smart key,Lost all smart
MAZDA\China\CX-3\2017\Smart key	Add smart key,All smart key lost,Switch ignition on,

MAZDA\China\CX-4-2016\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\China\CX-4\2017\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\China\M2\2014-2016\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\China\B series\2007-\Immobilizer	Key count,Add key,All key lost,
MAZDA\China\CX-9\Without smart\2004-2009	Add key,Read key count,All key lost,
MAZDA\China\CX-9\Without smart\2009-	Add key,All key lost,
MAZDA\China\MX-5\2004-2009\Immobilizer	Add key,Read key count,All key lost,
MAZDA\China\MX-5\2009-2016\Immobilizer	Key count,Add key,All key lost,
MAZDA\China\BT50\2012-\Immobilizer	Add key,Delete key,All key lost,
MAZDA\China\CX-7\With smart\2016	All smart key lost,Add smart key,Switch ignition
MAZDA\China\CX-9\With smart\2016	All smart key lost,Add smart key,Switch ignition
MAZDA\China\CX-5\2017\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\China\M121\Immobilizer	Key count,Delete key,Add key,
MAZDA\China\M2\2008-2014\PEPS\Type 1	Add key,Delete key,Add remote,Delete remote,Key
MAZDA\China\Demio\2001\Immobilizer	Key count,Delete key,Add key,
MAZDA\China\Demio\2002-2007\Immobilizer	Key count,Delete key,Add key,
MAZDA\China\Demio\2008-2013\Smart key	Add key,Delete key,Add remote,Delete remote,Key
MAZDA\China\Demio\2008-2013\Immobilizer	Key count,Delete key,Add key,
MAZDA\China\Demio\2014-\Smart key	Add smart key,All smart key lost,Switch ignition on,
MAZDA\China\MX-5 Miata\2005-	Key count,Delete key,Add key,

MAZDA\China\Premacy\2005\Smart key	Key count,Delete key,Add key,
MAZDA\China\RX-8\2004-2009\Immobilizer	Key count,Delete key,Add key,
MAZDA\China\RX-8\2009\Smart key	Add key,Delete key,Add remote,Delete remote,Key
MAZDA\China\RX-8\2009\Immobilizer	Key count,Delete key,Add key,
MAZDA\China\Tribute\Immobilizer\2001-2004	Key count,Delete key,Add key,
MAZDA\China\Tribute\Immobilizer\2005-2008	Key count,Delete key,Add key,
MAZDA\China\Tribute\Immobilizer\2009-2011	Key count,Delete key,Add key,
MAZDA\China\M2\2002-2008\Mechanical key	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\China\M2\2008-2014\PEPS\Type 2	All key lost,Add key,All smart key lost,Add smart
MAZDA\Asia\BT-50\2011-	Add key,Delete key,All key lost,
MAZDA\Asia\M121	Key count,Delete key,Add key,
MAZDA\Asia\M2\With smart\2008-2014	All key lost,Add key,All smart key lost,Add smart
MAZDA\Asia\M2\Without smart\2002-2008	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\Asia\M2\Without smart\2008-2014	Add key,All key lost,
MAZDA\Asia\M3\With smart\2004-2008	Add smart key,Delete smart key,
MAZDA\Asia\M3\With smart\2009-2013	All key lost,Add key,All smart key lost,Add smart
MAZDA\Asia\M3\Without smart\2004-2008	Add key,Read key count,All key lost,
MAZDA\Asia\M3\Without smart\2009-2013	Add key,All key lost,
MAZDA\Asia\M5\Without smart\2011	Add key,Read key count,All key lost,
MAZDA\Asia\M5\Without smart\2012-	Add key,All key lost,

MAZDA\Asia\M6\With smart\2008-2012	All key lost,Add key,All smart key lost,Add smart
MAZDA\Asia\M6\Without smart\2012-2008	Add key,Read key count,All key lost,
MAZDA\Asia\CX-7\With smart\2016	Add key,All key lost,Add smart key,Lost all smart
MAZDA\Asia\CX-7\Without smart\2004-2009	Add key,Read key count,All key lost,
MAZDA\Asia\CX-7\Without smart\2009-	Add key,All key lost,
MAZDA\Asia\Demio\With smart\2008-2013	All key lost,Add key,All smart key lost,Add smart
MAZDA\Asia\Demio\Without smart\2001	Key count,Delete key,Add key,
MAZDA\Asia\Demio\Without smart\2002-2007	Add key,Read key count,All key lost,
MAZDA\Asia\Demio\Without smart\2008-2013	Add key,All key lost,
MAZDA\Asia\Mx5\Without smart\2005-2009	Add key,Read key count,All key lost,
MAZDA\Asia\Mx5\Without smart\2009-2015	Add key,All key lost,
MAZDA\Asia\Primary\2005-\With smart	All key lost,Add key,All smart key lost,Add smart
MAZDA\Asia\Primary\2005-\Without smart	Add key,Read key count,All key lost,
MAZDA\Asia\Rx8\With smart\2009-	All key lost,
MAZDA\Asia\Rx8\Without smart\2004-2009	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\Asia\Rx8\Without smart\2009-	Add key,All key lost,
MAZDA\Asia\CX-9\Without smart\2004-2009	Add key,Read key count,All key lost,
MAZDA\Asia\CX-9\Without smart\2009-	Add key,All key lost,
MAZDA\Europe\BT-50\2011-	Add key,Delete key,All key lost,
MAZDA\Europe\M121	Key count,Delete key,Add key,

MAZDA\Europe\M2\With smart\2008-2014	All key lost,Add key,All smart key lost,Add smart
MAZDA\Europe\M2\Without smart\2002-2008	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\Europe\M2\Without smart\2008-2014	Add key,All key lost,
MAZDA\Europe\M3\With smart\2004-2008	Add smart key,Delete smart key,
MAZDA\Europe\M3\With smart\2009-2013	All key lost,Add key,All smart key lost,Add smart
MAZDA\Europe\M3\Without smart\2004-2008	Add key,Read key count,All key lost,
MAZDA\Europe\M3\Without smart\2009-2013	Add key,All key lost,
MAZDA\Europe\M5\Without smart\2011	Add key,Read key count,All key lost,
MAZDA\Europe\M5\Without smart\2012-	Add key,All key lost,
MAZDA\Europe\M6\With smart\2009-2013	All key lost,Add key,All smart key lost,Add smart
MAZDA\Europe\M6\Without smart\2002-2008	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\Europe\M6\Without smart\2009-2013	All key lost,
MAZDA\Europe\CX-7\With smart\2016	Add key,All key lost,Add smart key,Lost all smart
MAZDA\Europe\CX-7\Without smart\2004-2009	Add key,Read key count,All key lost,
MAZDA\Europe\CX-7\Without smart\2009-	Add key,All key lost,
MAZDA\Europe\CX-9\Without smart\2004-2009	Add key,Read key count,All key lost,
MAZDA\Europe\CX-9\Without smart\2009-	Add key,All key lost,
MAZDA\Europe\Demio\With smart\2008-2013	All key lost,Add key,All smart key lost,Add smart
MAZDA\Europe\Demio\Without smart\2001	Key count,Delete key,Add key,
MAZDA\Europe\Demio\With smart\2002-2007	Add key,Read key count,All key lost,

MAZDA

MAZDA\Europe\Demio\Without smart\2008-2013	Add key,All key lost,
MAZDA\Europe\Mx5\Without smart\2005-2009	Add key,Read key count,All key lost,
MAZDA\Europe\Mx5\Without smart\2009-2015	Add key,All key lost,
MAZDA\Europe\Premacy\2005-Without smart	All key lost,Add key,All smart key lost,Add smart
MAZDA\Europe\Premacy\2005-Without smart	Add key,Read key count,All key lost,
MAZDA\Europe\RX-8\With smart\2009-	All key lost,
MAZDA\Europe\RX-8\Without smart\2004-2009	Add key,Read key count,All key lost,
MAZDA\Europe\RX-8\Without smart\2009-	Add key,All key lost,
MAZDA\South America\BT-50\2011-	Add key,Delete key,All key lost,
MAZDA\South America\M121	Key count,Delete key,Add key,
MAZDA\South America\M2\With	All key lost,Add key,All smart key lost,Add smart
MAZDA\South America\M2\Without	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\South America\M2\Without	Add key,All key lost,
MAZDA\South America\M3\With	Add smart key,Delete smart key,
MAZDA\South America\M3\With	All key lost,Add key,All smart key lost,Add smart
MAZDA\South America\M3\Without	Add key,Read key count,All key lost,
MAZDA\South America\M3\Without	Add key,All key lost,
MAZDA\South America\M5\Without	Add key,Read key count,All key lost,
MAZDA\South America\M5\Without	Add key,All key lost,
MAZDA\South America\M6\With	All key lost,Add key,All smart key lost,Add smart

MAZDA\South America\M6\Without	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\South America\CX-7\With smart\-	Add key,All key lost,Add smart key,Lost all smart
MAZDA\South America\CX-7\Without	Add key,Read key count,All key lost,
MAZDA\South America\CX-7\Without	Add key,All key lost,
MAZDA\South America\CX-9\Without	Add key,Read key count,All key lost,
MAZDA\South America\CX-9\Without	Add key,All key lost,
MAZDA\South America\Demio\With	All key lost,Add key,All smart key lost,Add smart
MAZDA\South America\Demio\Without	Key count,Delete key,Add key,
MAZDA\South America\Demio\Without	Add key,Read key count,All key lost,
MAZDA\South America\Demio\Without	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\South America\Mx5\Without	Add key,Read key count,All key lost,
MAZDA\South America\Mx5\Without	Add key,All key lost,
MAZDA\South America\Premacy\2005-	All key lost,Add key,All smart key lost,Add smart
MAZDA\South America\Premacy\2005-	Add key,Read key count,All key lost,
MAZDA\South America\RX-8\With	All key lost,
MAZDA\South America\RX-8\Without	Add key,Read key count,All key lost,
MAZDA\South America\RX-8\Without	Add key,All key lost,
MAZDA\Australia\BT-50\2011-	Add key,Delete key,All key lost,
MAZDA\Australia\M121	Key count,Delete key,Add key,
MAZDA\Australia\M2\With smart\2008-2014	All key lost,Add key,All smart key lost,Add smart

MAZDA\Australia\M2\Without smart\2002-2008	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\Australia\M2\Without smart\2008-2014	Add key,All key lost,
MAZDA\Australia\M3\With smart\2004-2008	Add smart key,Delete smart key,
MAZDA\Australia\M3\With smart\2009-2013	All key lost,Add key,All smart key lost,Add smart
MAZDA\Australia\M3\Without smart\2004-2008	Add key,Read key count,All key lost,
MAZDA\Australia\M3\Without smart\2009-2013	Add key,All key lost,
MAZDA\Australia\M5\Without smart\2011	Add key,Read key count,All key lost,
MAZDA\Australia\M5\Without smart\2012-	Add key,All key lost,
MAZDA\Australia\M6\With smart\2008-2012	All key lost,Add key,All smart key lost,Add smart
MAZDA\Australia\M6\Without smart\2002-2008	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\Australia\CX-7\With smart\2016	Add key,All key lost,Add smart key,Lost all smart
MAZDA\Australia\CX-7\Without smart\2004-2009	Add key,Read key count,All key lost,
MAZDA\Australia\CX-7\Without smart\2009-	Add key,All key lost,
MAZDA\Australia\CX-9\Without smart\2004-2009	Add key,Read key count,All key lost,
MAZDA\Australia\CX-9\Without smart\2009-	Add key,All key lost,
MAZDA\Australia\Demio\With smart\2008-2013	All key lost,Add key,All smart key lost,Add smart
MAZDA\Australia\Demio\Without smart\2001	Key count,Delete key,Add key,
MAZDA\Australia\Demio\Without smart\2002-2007	Add key,Read key count,All key lost,
MAZDA\Australia\Demio\Without smart\2008-2013	Add key,All key lost,
MAZDA\Australia\Mx5\Without smart\2005-2009	Add key,Read key count,All key lost,

MAZDA\Australia\Mx5\Without smart\2009-2015	Add key,All key lost,
MAZDA\Australia\Premacy\2005-\With smart	All key lost,Add key,All smart key lost,Add smart
MAZDA\Australia\Premacy\2005-\Without smart	Add key,Read key count,All key lost,
MAZDA\Australia\RX-8\With smart\2009-	All key lost,
MAZDA\Australia\RX-8\Without smart\2004-2009	Add key,Read key count,All key lost,
MAZDA\Australia\RX-8\Without smart\2009-	Add key,All key lost,
MAZDA\Africa\BT-50\2011-	Add key,Delete key,All key lost,
MAZDA\Africa\M121	Key count,Delete key,Add key,
MAZDA\Africa\M2\With smart\2008-2014	All key lost,Add key,All smart key lost,Add smart
MAZDA\Africa\M2\Without smart\2002-2008	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\Africa\M2\Without smart\2008-2014	Add key,All key lost,
MAZDA\Africa\M3\With smart\2004-2008	Add smart key,Delete smart key,
MAZDA\Africa\M3\With smart\2009-2013	All key lost,Add key,All smart key lost,Add smart
MAZDA\Africa\M3\Without smart\2004-2008	Add key,Read key count,All key lost,
MAZDA\Africa\M3\Without smart\2009-2013	Add key,All key lost,
MAZDA\Africa\M5\Without smart\2011	Add key,Read key count,All key lost,
MAZDA\Africa\M5\Without smart\2012-	Add key,All key lost,
MAZDA\Africa\M6\With smart\2008-2012	All key lost,Add key,All smart key lost,Add smart
MAZDA\Africa\M6\Without smart\2002-2008	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\Africa\CX-7\With smart\2016	Add key,All key lost,Add smart key,Lost all smart

MAZDA\Africa\CX-7\Without smart\2004-2009	Add key,Read key count,All key lost,
MAZDA\Africa\CX-7\Without smart\2009-	Add key,All key lost,
MAZDA\Africa\CX-9\Without smart\2004-2009	Add key,Read key count,All key lost,
MAZDA\Africa\CX-9\Without smart\2009-	Add key,All key lost,
MAZDA\Africa\Demio\With smart\2008-	All key lost,Add key,All smart key lost,Add smart
MAZDA\Africa\Demio\Without smart\2001	Key count,Delete key,Add key,
MAZDA\Africa\Demio\Without smart\2002-2007	Add key,Read key count,All key lost,
MAZDA\Africa\Demio\Without smart\2008-	Add key,All key lost,
MAZDA\Africa\Mx5\Without smart\2005-2009	Add key,Read key count,All key lost,
MAZDA\Africa\Mx5\Without smart\2009-2015	Add key,All key lost,
MAZDA\Africa\Premacy\2005-\With smart	All key lost,Add key,All smart key lost,Add smart
MAZDA\Africa\Premacy\2005-\Without smart	Add key,Read key count,All key lost,
MAZDA\Africa\RX-8\With smart\2009-	All key lost,
MAZDA\Africa\RX-8\Without smart\2004-2009	Add key,Read key count,All key lost,
MAZDA\Africa\RX-8\Without smart\2009-	Add key,All key lost,
MAZDA\North America\B series\2007	Key count,Delete key,Add key,
MAZDA\North America\B series\2007-2011	Key count,Add key,All key lost,
MAZDA\North America\M2\2011-2014	Add key,All key lost,
MAZDA\North America\M3\With	All key lost,Add key,All smart key lost,Add smart
MAZDA\North America\M3\Without	Add key,Read key count,All key lost,

MAZDA\North America\M3\Without	Add key,All key lost,
MAZDA\North America\M5\2006-2011	Add key,Read key count,All key lost,
MAZDA\North America\M5\2012-	Add key,All key lost,
MAZDA\North America\M6\2003-	Add smart key,Delete smart key,
MAZDA\North America\M6\2003-	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\North America\M6\2008-	All key lost,Add key,All smart key lost,Add smart
MAZDA\North America\M6\2008-	All key lost,
MAZDA\North America\M8\With smart	Add smart key,Delete smart key,
MAZDA\North America\CX-7\2004-2008	Add key,Read key count,All key lost,
MAZDA\North America\CX-7\2009-2014	Add key,All key lost,
MAZDA\North America\CX-9\Without smart\2004-2006	Add key,Read key count,All key lost,
MAZDA\North America\CX-9\Without smart\2007-2014	Add key,All key lost,
MAZDA\North America\Mx5\With smart\-	Add smart key,Delete smart key,
MAZDA\North America\Mx5\Without	Add key,Read key count,All key lost,
MAZDA\North America\Mx5\Without	Add key,All key lost,
MAZDA\North America\Mx5 miata\With	Add smart key,Delete smart key,
MAZDA\North America\Mx5	Add key,Read key count,All key lost,
MAZDA\North America\Speed 3\2012	All key lost,
MAZDA\North America\Tribute\2001-2004	Key count,Delete key,Add key,
MAZDA\North America\Tribute\2005-2008	Add key,All key lost,Valid backup key setting,Invalid

MAZDA\North America\Tribute\2009-2011	Key count,Delete key,Add key,
MAZDA\North America\RX-8\With smart	Add smart key,Delete smart key,
MAZDA\North America\RX-8\Without smart	Add key,All key lost,Valid backup key setting,Invalid
MAZDA\North America\Mx5\With	All smart key lost,Add smart key,Switch ignition
MAZDA\North America\CX-9\With smart\2016	All smart key lost,Add smart key,Switch ignition
MAZDA\North America\CX-5\With smart\2016	All smart key lost,Add smart key,Switch ignition
MAZDA\North America\CX-4\With smart\2013-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\North America\CX-3\With smart\2013-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\North America\M6\2014-	All smart key lost,Add smart key,Switch ignition
MAZDA\North America\M3\With	All smart key lost,Add smart key,Switch ignition
MAZDA\North America\M2\2014-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\North America\Axela\With smart-	All smart key lost,Add smart key,Switch ignition
MAZDA\North America\Atenza\With	All smart key lost,Add smart key,Switch ignition
MAZDA\Africa\Mx5\With smart\2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Africa\CX-9\With smart\2009-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Africa\CX-5\With smart\2013-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Africa\CX-3\With smart\2017	All smart key lost,Add smart key,Switch ignition
MAZDA\Africa\M6\With smart\2012-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Africa\M3\With smart\2014-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Africa\M2\With smart\2014-2016	All smart key lost,Add smart key,Switch ignition

MAZDA\Australia\Mx5\With smart\2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Australia\Demio\With smart\2014-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Australia\CX-9\With smart\2009-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Australia\CX-5\With smart\2013-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Australia\CX-3\With smart\2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Australia\M6\With smart\2012-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Australia\M3\With smart\2014-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Australia\M2\With smart\2014-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\South America\Mx5\With	All smart key lost,Add smart key,Switch ignition
MAZDA\South America\Demio\With	All smart key lost,Add smart key,Switch ignition
MAZDA\South America\CX-9\With	All smart key lost,Add smart key,Switch ignition
MAZDA\South America\CX-5\With	All smart key lost,Add smart key,Switch ignition
MAZDA\South America\CX-3\With	All smart key lost,Add smart key,Switch ignition
MAZDA\South America\M3\With	All smart key lost,Add smart key,Switch ignition
MAZDA\South America\M2\With	All smart key lost,Add smart key,Switch ignition
MAZDA\Europe\Mx5\With smart\2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Europe\Demio\With smart\2014-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Europe\CX-5\With smart\2013-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Europe\CX-3\With smart\2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Europe\M6\With smart\2014-2016	All smart key lost,Add smart key,Switch ignition

MAZDA\Europe\M3\With smart\2014-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Europe\M2\With smart\2014-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Asia\Mx5\With smart\2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Asia\Demio\With smart\2014-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Asia\CX-9\With smart\2009-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Asia\CX-5\With smart\2013-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Asia\CX-3\With smart\2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Asia\M6\With smart\2012-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Asia\M3\With smart\2014-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\Asia\M2\With smart\2014-2016	All smart key lost,Add smart key,Switch ignition
MAZDA\South America\Demio\With	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Asia\Demio\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Asia\CX-9\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Asia\CX-5\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Asia\CX-3\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Asia\M3\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\Asia\M2\With smart\2017-	All smart key lost,Switch ignition on,Add smart key,
MAZDA\China\CX-7\Without smart\2009-	Add key,All key lost,
MAZDA\China\CX-7\Without smart\2004-2009	Add key,Read key count,All key lost,
MAZDA\Australia\Tribute\2001-2006	Program key,All key lost,Key count,

	MAZDA\Australia\Tribute\2006-2008	Program key,All key lost,Key count,
	MAZDA\South America\M6\With	Add smart key,All smart key lost,Switch ignition on,
	MAZDA\Europe\CX-9\With smart\2009-2016	Key count,Add key,All key lost,Remote count,Program
	JEEP\Select from vehicle\North	Read PIN code,Add new key,Delete key,Key
	JEEP\Select from vehicle\Asia\Cherokee\201	Read PIN code,Add key,Delete key,
	JEEP\Select from vehicle\Asia\Cherokee\201	Read PIN code,Add key,Delete key,
	JEEP\Select from vehicle\Asia\Grand	Add smart key,Delete smart key,Key count,Read
	JEEP\Select from vehicle\Asia\Renegade\201	Read PIN code,Add key,Delete key,
	JEEP\Select from vehicle\Europe\Grand	Read PIN code,Add key,Delete key,Key
	JEEP\Select from vehicle\Europe\Cherokee\2	Read PIN code,Add key,Delete key,
	JEEP\Select from vehicle\Europe\Cherokee\2	Read PIN code,Add key,Delete key,
	JEEP\Select from vehicle\Europe\Grand	Add smart key,Delete smart key,Key count,Read
	JEEP\Select from vehicle\Europe\Renegade\	Read PIN code,Add key,Delete key,
	JEEP\Select from vehicle\South	Read PIN code,Add key,Delete key,Key
	JEEP\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key
	JEEP\Select from vehicle\South	Read PIN code,Add key,Delete key,
	JEEP\Select from vehicle\South	Read PIN code,Add key,Delete key,
	JEEP\Select from vehicle\South	Add smart key,Delete smart key,Key count,Read
	JEEP\Select from vehicle\South	Read PIN code,Add key,Delete key,
	JEEP\Select from vehicle\Australia\Grand	Read PIN code,Add key,Delete key,Key

JEEP>Select from vehicle\Australia\Rubicon\2	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Australia\Cherokee\	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Australia\Cherokee\	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Australia\Grand	Add smart key,Delete smart key,Key count,Read
JEEP>Select from vehicle\Australia\Renegade	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Middle East\Grand	Read PIN code,Add key,Delete key,Key
JEEP>Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Middle	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Middle	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Middle East\Grand	Add smart key,Delete smart key,Key count,Read
JEEP>Select from vehicle\Middle	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Africa\Grand	Read PIN code,Add key,Delete key,Key
JEEP>Select from vehicle\Africa\Rubicon\201	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Africa\Cherokee\20	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Africa\Cherokee\20	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Africa\Grand	Add smart key,Delete smart key,Key count,Read
JEEP>Select from vehicle\Africa\Renegade\2	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Asia\Cherokee\-	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Australia\Cherokee\	Read PIN code,Add key,Delete key,Key count,

JEEP>Select from vehicle\South	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Africa\Cherokee-	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Africa\Grand	Sync smart function,
JEEP>Select from vehicle\Australia\Grand	Sync smart function,
JEEP>Select from vehicle\South	Sync smart function,
JEEP>Select from vehicle\Middle East\Grand	Sync smart function,
JEEP>Select from vehicle\Europe\Grand	Sync smart function,
JEEP>Select from vehicle\Asia\Renegade\201	Program key,Read PIN code,Read immo
JEEP>Select from vehicle\Asia\Compass\201	Program smart key,Delete smart key,Key count,
JEEP>Select from vehicle\Asia\Laredo\2012\F	Read PIN code,Add key,Delete key,Sync smart
JEEP>Select from vehicle\Asia\Grand	Add smart key,Delete smart key,
JEEP>Select from vehicle\Asia\Wrangler\2018	Add smart key,Delete smart key,Key count,
JEEP>Select from vehicle\North	Program smart key,Delete smart key,Key count,
JEEP>Select from vehicle\Africa\Renegade\2	Program key,Read PIN code,Read immo
JEEP>Select from vehicle\North	Program key,Read PIN code,Read immo
JEEP>Select from vehicle\Australia\Renegade	Program key,Read PIN code,Read immo
JEEP>Select from vehicle\Europe\Renegade\	Program key,Read PIN code,Read immo
JEEP>Select from vehicle\South	Program key,Read PIN code,Read immo
JEEP>Select from vehicle\North	Add smart key,Delete smart key,Key count,
JEEP>Select from vehicle\North	Add smart key,Delete smart key,

JEEP>Select from vehicle\Asia\Cherokee\201	Read PIN code,Program key,Delete key,
JEEP>Select from vehicle\Asia\Commander\2	Read PIN code,Program key,Delete key,
JEEP>Select from vehicle\Asia\Cherokee\201	Read PIN code,Program key,Delete key,
JEEP>Select from vehicle\North	Read PIN code,Program key,Delete key,
JEEP>Select from vehicle\North	Read PIN code,Program key,Delete key,
JEEP>Select from vehicle\North	Read PIN code,Program key,Delete key,
JEEP>Select from vehicle\Australia\Wrangler\	Add smart key,Delete smart key,Key count,
JEEP>Select from vehicle\Asia\Wrangler\2020	Read PIN code,Program smart key,Delete smart
JEEP>Select from vehicle\North	Read PIN code,Program smart key,Delete smart
JEEP>Select from vehicle\Australia\Wrangler\	Read PIN code,Program smart key,Delete smart
JEEP>Select from vehicle\Asia\Renegade\201	Key count,Program key,Delete key,
JEEP>Select from vehicle\North	Key count,Program key,Delete key,
JEEP>Select from vehicle\North	Read PIN code,Program smart key,Delete smart
JEEP>Select from vehicle\Asia\Gladiator\2020	Read PIN code,Program smart key,Delete smart
JEEP>Select from vehicle\North	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\North	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\North	Read PIN code,Add smart key,Delete smart key,Key
JEEP>Select from vehicle\North	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\North	Read PIN code,Add key,Delete key,
JEEP>Select from vehicle\Asia\Grand	Read PIN code,Sync smart key,Add key,Delete

JEEP>Select from type\IMMO-Fobik	Read PIN code,Sync smart key,Add key,Delete
JEEP>Select from type\Smart key\Type 1	Add smart key,Delete smart key,Read PIN code,
JEEP>Select from type\Smart key\Type 2	Add smart key,Delete smart key,Key count,Read
JEEP>Select from type\Immobilizer\Type 1	Add new key,Add old key,Add remote,Check key
JEEP>Select from type\Immobilizer\Type 2	Read PIN code,Add new key,Delete key,Key
JEEP>Select from type\Immobilizer\Type 3	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from type\Immobilizer\Type 4	Read PIN code,Add key,Delete key,Key
JEEP>Select from type\Immobilizer\Type 5	Add key,Delete key,Key count,Add remote,Read
JEEP>Select from type\Immobilizer\Type 6	Add key,Delete key,Key count,Read PIN
JEEP>Select from type\Remote\Type 1(VPW)	Add remote,
JEEP>Select from type\Remote\Type 2(VPW)	Add remote,
JEEP>Select from type\Remote\Type 3(VPW)	Add remote,
JEEP>Select from type\Remote\Type 4 (CAN)	Add remote,Read PIN code,
JEEP>Select from type\Remote\Type 5(VPW)	Add remote,Clear remote,
JEEP>Select from type\Remote\Type 6(VPW)	Add remote,
JEEP>Select from type\Remote\Type 7(VPW)	Add remote,
JEEP>Select from type\Remote\Type 8(VPW)	Add remote,
JEEP>Select from vehicle\Asia\Wrangler\2007	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\North	Add key,Delete key,Key count,Add remote,Read
JEEP>Select from vehicle\North	Read PIN code,Add key,Delete key,Key count,

JEEP>Select from vehicle\North	Read PIN code,Add key,Delete key,Key
JEEP>Select from vehicle\North	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\North	Add remote,
JEEP>Select from vehicle\North	Add key,Delete key,Key count,Add remote,Read
JEEP>Select from vehicle\North	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from vehicle\North	Read PIN code,Add key,Delete key,Key
JEEP>Select from vehicle\North	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\North	Add new key,Add old key,Add remote,Delete
JEEP>Select from vehicle\North	Read PIN code,Add key,Delete key,Key
JEEP>Select from vehicle\North	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\North	Add remote,
JEEP>Select from vehicle\North	Add key,Delete key,
JEEP>Select from vehicle\North	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\North	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\North	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\North	Read PIN code,Add new key,Delete key,Key
JEEP>Select from type\Smart key\Type	Add smart key,Delete smart key,Read PIN code,
JEEP>Select from type\Smart key\Type	Sync smart function,
JEEP>Select from type\Smart key\Type	Add smart key,Delete smart key,Read PIN code,
JEEP>Select from type\Immobilizer\Type	Add key,Delete key,

JEEP

JEEP>Select from type\Immobilizer\Type	Add new key,Add old key,Add remote>Delete
JEEP>Select from vehicle\Asia\Commander\2	Add key>Delete key,Key count,Add remote,Read
JEEP>Select from vehicle\Asia\Commander\2	Read PIN code,Add key>Delete key,Key count,
JEEP>Select from vehicle\Asia\Commander\2	Read PIN code,Add key>Delete key,Key
JEEP>Select from vehicle\Asia\Grand	Add key>Delete key,Key count,Read PIN
JEEP>Select from vehicle\Asia\Grand	Add remote,
JEEP>Select from vehicle\Asia\Grand	Add key>Delete key,Key count,Add remote,Read
JEEP>Select from vehicle\Asia\Grand	Read PIN code,Add key>Delete key,Key count,
JEEP>Select from vehicle\Asia\Laredo\1999-	Add key>Delete key,Key count,Read PIN
JEEP>Select from vehicle\Asia\Laredo\2005-	Add new key,Add old key,Add remote>Delete
JEEP>Select from vehicle\Asia\Laredo\2008-	Read PIN code,Add key>Delete key,Key
JEEP>Select from vehicle\Asia\Liberty\2002-	Add key>Delete key,Key count,Read PIN
JEEP>Select from vehicle\Asia\Liberty\2002-	Add remote,
JEEP>Select from vehicle\Asia\Liberty\2005-	Add key>Delete key,
JEEP>Select from vehicle\Asia\Liberty\2008-	Read PIN code,Add new key>Delete key,Key
JEEP>Select from vehicle\Asia\Patriot\2007-	Read PIN code,Add new key>Delete key,Key
JEEP>Select from vehicle\Asia\Rubicon\2007-	Read PIN code,Add new key>Delete key,Key
JEEP>Select from vehicle\Asia\Wrangler\2001	Add key>Delete key,Key count,Read PIN
JEEP>Select from vehicle\Asia\Compass\200	Read PIN code,Add new key>Delete key,Key
JEEP>Select from vehicle\Europe\Commande	Add key>Delete key,Key count,Add remote,Read

JEEP>Select from vehicle\Europe\Commande	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Europe\Commande	Read PIN code,Add key,Delete key,Key
JEEP>Select from vehicle\Europe\Grand	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\Europe\Grand	Add remote,
JEEP>Select from vehicle\Europe\Grand	Add key,Delete key,Key count,Add remote,Read
JEEP>Select from vehicle\Europe\Grand	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Europe\Laredo\199	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\Europe\Laredo\200	Add new key,Add old key,Add remote,Delete
JEEP>Select from vehicle\Europe\Laredo\200	Read PIN code,Add key,Delete key,Key
JEEP>Select from vehicle\Europe\Liberty\200	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\Europe\Liberty\200	Add remote,
JEEP>Select from vehicle\Europe\Liberty\200	Add key,Delete key,
JEEP>Select from vehicle\Europe\Liberty\200	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Europe\Patriot\200	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Europe\Rubicon\20	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Europe\Wrangler\2	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\Europe\Wrangler\2	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Europe\Compass\2	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\South	Add key,Delete key,Key count,Add remote,Read
JEEP>Select from vehicle\South	Read PIN code,Add key,Delete key,Key count,

JEEP>Select from vehicle\South	Read PIN code,Add key,Delete key,Key
JEEP>Select from vehicle\South	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\South	Add remote,
JEEP>Select from vehicle\South	Add key,Delete key,Key count,Add remote,Read
JEEP>Select from vehicle\South	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from vehicle\South	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\South	Add new key,Add old key,Add remote,Delete
JEEP>Select from vehicle\South	Read PIN code,Add key,Delete key,Key
JEEP>Select from vehicle\South	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\South	Add remote,
JEEP>Select from vehicle\South	Add key,Delete key,
JEEP>Select from vehicle\South	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\South	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\South	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\South	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\South	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Australia\Command	Add key,Delete key,Key count,Add remote,Read
JEEP>Select from vehicle\Australia\Command	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Australia\Command	Read PIN code,Add key,Delete key,Key
JEEP>Select from vehicle\Australia\Grand	Add key,Delete key,Key count,Read PIN

JEEP>Select from vehicle\Australia\Grand	Add remote,
JEEP>Select from vehicle\Australia\Grand	Add key,Delete key,Key count,Add remote,Read
JEEP>Select from vehicle\Australia\Grand	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Australia\Laredo\19	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\Australia\Laredo\20	Add new key,Add old key,Add remote,Delete
JEEP>Select from vehicle\Australia\Laredo\20	Read PIN code,Add key,Delete key,Key
JEEP>Select from vehicle\Australia\Liberty\20	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\Australia\Liberty\20	Add remote,
JEEP>Select from vehicle\Australia\Liberty\20	Add key,Delete key,
JEEP>Select from vehicle\Australia\Liberty\20	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Australia\Patriot\20	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Australia\Wrangler\	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\Australia\Wrangler\	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Australia\Compass\	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Middle	Add key,Delete key,Key count,Add remote,Read
JEEP>Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key
JEEP>Select from vehicle\Middle East\Grand	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\Middle East\Grand	Add remote,
JEEP>Select from vehicle\Middle East\Grand	Add key,Delete key,Key count,Add remote,Read

JEEP>Select from vehicle\Middle East\Grand	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\Middle	Add new key,Add old key,Add remote,Delete
JEEP>Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key
JEEP>Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\Middle	Add remote,
JEEP>Select from vehicle\Middle	Add key,Delete key,
JEEP>Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key
JEEP>Select from vehicle\Africa\Commander\	Add key,Delete key,Key count,Add remote,Read
JEEP>Select from vehicle\Africa\Commander\	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Africa\Commander\	Read PIN code,Add key,Delete key,Key
JEEP>Select from vehicle\Africa\Grand	Add key,Delete key,Key count,Read PIN
JEEP>Select from vehicle\Africa\Grand	Add remote,
JEEP>Select from vehicle\Africa\Grand	Add key,Delete key,Key count,Add remote,Read
JEEP>Select from vehicle\Africa\Grand	Read PIN code,Add key,Delete key,Key count,
JEEP>Select from vehicle\Africa\Laredo\1999-	Add key,Delete key,Key count,Read PIN

JEEP\Select from vehicle\Africa\Laredo\2005-	Add new key,Add old key,Add remote,Delete
JEEP\Select from vehicle\Africa\Laredo\2008-	Read PIN code,Add key,Delete key,Key
JEEP\Select from vehicle\Africa\Liberty\2002-	Add key,Delete key,Key count,Read PIN
JEEP\Select from vehicle\Africa\Liberty\2002-	Add remote,
JEEP\Select from vehicle\Africa\Liberty\2005-	Add key,Delete key,
JEEP\Select from vehicle\Africa\Liberty\2008-	Read PIN code,Add new key,Delete key,Key
JEEP\Select from vehicle\Africa\Patriot\2007-	Read PIN code,Add new key,Delete key,Key
JEEP\Select from vehicle\Africa\Wrangler\20	Add key,Delete key,Key count,Read PIN
JEEP\Select from vehicle\Africa\Wrangler\20	Read PIN code,Add new key,Delete key,Key
JEEP\Select from vehicle\Africa\Compass\20	Read PIN code,Add new key,Delete key,Key
JEEP\Select from vehicle\Europe\Cherokee\2	Add key,Delete key,
JEEP\Select from vehicle\North	Read PIN code,Add key,Delete key,Key count,
JEEP\Select from type\Immobilizer\Type	Key count,Program key,Delete key,Program
JEEP\Select from type\Smart key\Type	Read PIN code,Add key,Delete key,
JEEP\Select from type\Smart key\Type	Read PIN code,Add smart key,Delete smart key,
JEEP\Select from type\Smart key\Type	Read PIN code,Add key,Delete key,
JEEP\Select from type\Smart key\Type	Read PIN code,Add key,Delete key,
JEEP\Select from vehicle\North	Sync smart function,
JEEP\Select from type\Smart key\Type	Program smart key,Delete smart key,Key count,
JEEP\Select from type\Remote\Type 9(VPW)	Program remote,

	JEEP\Select from vehicle\North	Add new key,Add old key,Add remote,Delete
	JEEP\Select from vehicle\North	Add new key,Add old key,Add remote,Check key
	BUICK\China\Regal\2017-\Smart key	All smart key lost,Add smart key,Read smart key
	BUICK\China\GL8\2017-\Smart key\Type 2(2.5L)	All smart key lost,Add smart key,Read smart key
	BUICK\China\Verano\2017-\Mechanical key	All key lost,Clear fault code,Read key count,
	BUICK\China\Verano\2017-\Smart key	All smart key lost,Add smart key,Read smart key
	BUICK\China\GL6\2017-\Smart key	Add smart key,All smart key lost,Read key count,
	BUICK\China\Regal\2017-\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
	BUICK\China\GL6\2017-\Mechanical key	Add key,All key lost,Read key count,
	BUICK\China\Excelle\2018-\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
	BUICK\China\Excelle GT\XT\2018-\Smart key	Add smart key,All smart key lost,Read key
	BUICK\China\Excelle GX\2018-\Smart key	Add smart key,All smart key lost,Read key
	BUICK\China\GL8\2017-\Smart key\Type 3	Read key count,Program smart key,
	BUICK\China\Excelle\2018-\Smart key	All smart key lost,Add smart key,Read smart key
	BUICK\Asia\Encore\2014-\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
	BUICK\USA\Canada\Cascade\2016-2019\Mechanical	All key lost,Add key,Read key count,Clear fault code,
	BUICK\USA\Canada\Cascade\2018\Smart key	All smart key lost,Add smart key,Read smart key
	BUICK\USA\Canada\Enclave\2018-2020\Smart key	All smart key lost,Add smart key,Read smart key
	BUICK\USA\Canada\Encore\Mechanical key\2013-	All key lost,Add key,Read key count,Clear fault code,
	BUICK\USA\Canada\Envision\2016-2017\Smart key	All smart key lost,Add smart key,Read key

BUICK\USA\Canada\Regal \2018-2019\Smart key	All smart key lost,Add smart key,Read smart key
BUICK\China\Excelle GT/XT\2015\Mechanical	All key lost,Add key,Read key count,Clear fault code,
BUICK\China\Excelle GT/XT\2015\Smart key	All smart key lost,Add smart key,Read key
BUICK\China\Envision\Mec hanical key	All key lost,Add key,Read key count,Clear fault code,
BUICK\China\Encore\Mech anical key	All key lost,Add key,Read key count,Clear fault code,
BUICK\China\GL8\2011- 2016\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
BUICK\China\Lacrosse\20 10-2016\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
BUICK\China\Regal\ 2016\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
BUICK\China\Verano\2015 -\Mechanical key	All key lost,Add key,Read key count,Clear fault code,
BUICK\China\Encore\Smar t key	All smart key lost,Add smart key,Read key
BUICK\China\GL8\2011- 2016\Smart key\Type 1	All smart key lost,Add smart key,Read key
BUICK\China\Lacrosse\20 10-2016\Smart key	All smart key lost,Add smart key,Read key
BUICK\China\Regal\ 2016\Smart key	All smart key lost,Add smart key,Read key
BUICK\China\Verano\2015 -\Smart key	All smart key lost,Add smart key,Read key
BUICK\China\Excelle GT/XT\2015-	All key lost,Add key,
BUICK\China\Excelle GT/XT\2015-2017\Smart	All smart key lost,Add smart key,
BUICK\China\Excelle\2013 -2017\Mechanical	Program key,Delete key,Read key count,
BUICK\China\Lacrosse\20 17-\Smart key	All smart key lost,Add smart key,Read smart key
BUICK\China\Allure\2005- 2008\Mechanical key	All key lost,
BUICK\China\Enclave\Mec hanical key	All key lost,

BUICK

BUICK\China\Lucerne\Mechanical key	All key lost,
BUICK\China\Park Avenue\2005-\Mechanical	All key lost,
BUICK\China\Terraza\Mechanical key	All key lost,
BUICK\China\Excelle-2012\Mechanical key	Program key,Switch neutral mode,
BUICK\China\GL8\2004-2010\Mechanical key	All key lost,
BUICK\China\Excelle-2012\Remote\Type 1	Program remote,
BUICK\China\Excelle\2013-2017\Remote	Program remote,Read key count,
BUICK\China\Enclave\Remote	Program remote>Delete remote,
BUICK\China\Park Avenue\Remote	Program remote>Delete remote,
BUICK\China\Lacrosse\Remote	Program remote,
BUICK\China\Century\Remote	Program remote,
BUICK\China\Regall-2016\Remote	Program remote,
BUICK\China\FirstLand\Remote	Program remote,
BUICK\China\Read PIN code	Read pin code type1,Read pin code type2,Read pin
BUICK\China\Royaum\Mechanical key	Program key,
BUICK\China\GL8\2017-\Smart key\Type 1	Read key count,All smart key lost,Add smart key,
BUICK\China\Envision\Smart key\2017	Add smart key,All smart key lost,Read smart key
BUICK\China\Lacrosse\2005-2009\Mechanical key	All key lost,
BUICK\China\Excelle-2012\Remote\Type 2	Program remote,
BUICK\China\Excelle\2013-2017\Mechanical	All key lost,Add key,

BUICK\China\GL8\2011-2016\Smart key\Type 2	Add smart key,All smart key lost,Read smart key
BUICK\China\Envision\Smart key\2017-	All smart key lost,Add smart key,Read smart key
BUICK\China\Excelle GT\XT\2018-Mechanical	Read key count,All key lost,Add key,
BUICK\China\Park Avenue\2004\Mechanical	All key lost,
BUICK\China\Lesabre\2000-2005\Mechanical key	All key lost,
BUICK\China\Rendezous\2002-2004\Mechanical key	All key lost,
BUICK\China\Sail\Mechanical key	Clear fault code,Program key,Delete key,
BUICK\Asia\Excelle GT\2010-2015\Mechanical	All key lost,Add key,Read key count,Clear fault code,
BUICK\Asia\GL8\2010-2012\Smart key	All smart key lost,Add smart key,Read key
BUICK\Asia\Lacrosse\2005-2009\Mechanical key	All key lost,
BUICK\Asia\Lacrosse\2005-2009\Remote	Program remote,
BUICK\Asia\Lacrosse\2010-2016\Smart key	All smart key lost,Add smart key,Read key
BUICK\Asia\Park Avenue\2006-\Mechanical	All key lost,
BUICK\Asia\Royaum\2005-\Mechanical key	Program key,
BUICK\USA/Canada\Allure \2005-2006\Mechanical	All key lost,
BUICK\USA/Canada\Allure \2005-2006\Remote	Program remote,
BUICK\USA/Canada\Allure \2007-2009\Mechanical	All key lost,
BUICK\USA/Canada\Allure \2007-2009\Remote	Program remote,
BUICK\USA/Canada\Allure \2009-2012\Mechanical	All key lost,Add key,Read key count,Clear fault code,
BUICK\USA/Canada\Allure \2009-2012\Smart key	All smart key lost,Add smart key,Read key

BUICK\USA/Canada\Century\1997-2005\Remote	Program remote,
BUICK\USA/Canada\Enclave\2008-2017\Mechanical	All key lost,
BUICK\USA/Canada\Enclave\2008-2017\Remote	Program remote,Delete remote,
BUICK\USA/Canada\Lacrosse\2005-2006\Mechanical	All key lost,
BUICK\USA/Canada\Lacrosse\2005-2006\Remote	Program remote,
BUICK\USA/Canada\Lacrosse\2007-2009\Mechanical	All key lost,
BUICK\USA/Canada\Lacrosse\2007-2009\Remote	Program remote,
BUICK\USA/Canada\Lacrosse\2010-2015\Mechanical	All key lost,Add key,Read key count,Clear fault code,
BUICK\USA/Canada\Lacrosse\2010-2015\Smart key	All smart key lost,Add smart key,Read key
BUICK\USA/Canada\Lesabre\2000-2005\Mechanical	All key lost,
BUICK\USA/Canada\Lesabre\2000-2005\Remote	Program remote,
BUICK\USA/Canada\Lesabre\2006-2011\Mechanical	All key lost,
BUICK\USA/Canada\Lesabre\2006-2011\Remote	Program remote,Delete remote,
BUICK\USA/Canada\Park Avenue\1997-	All key lost,
BUICK\USA/Canada\Park Avenue\1997-	Program remote,
BUICK\USA/Canada\Regal\2000-2004\Mechanical	All key lost,
BUICK\USA/Canada\Regal\2000-2004\Remote	Program remote,
BUICK\USA/Canada\Regal\2011-2017\Mechanical	All key lost,Add key,Read key count,Clear fault code,
BUICK\USA/Canada\Regal\2011-2017\Smart key	All smart key lost,Add smart key,Read key
BUICK\USA/Canada\Rezvous\2002-	All key lost,

	BUICK\USA\Canada\Terra za\2005-2008\Remote	Program remote,
	BUICK\USA\Canada\Verano o\2012-2014\Mechanical	All key lost,Add key,Read key count,Clear fault code,
	BUICK\USA\Canada\Verano o\2012-2014\Smart key	All smart key lost,Add smart key,Read key
	DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key
	DODGE\Select from vehicle\North	Sync smart function,
	DODGE\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,
	DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key
	DODGE\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,
	DODGE\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,
	DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key
	DODGE\Select from vehicle\North	Sync smart function,
	DODGE\Select from vehicle\North	Add smart key,Delete smart key,Key count,Read
	DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key
	DODGE\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,
	DODGE\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,
	DODGE\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,
	DODGE\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,
	DODGE\Select from vehicle\Asia\Charger\2011-	Read PIN code,Add key,Delete key,Key
	DODGE\Select from vehicle\Asia\Durango\2011	Read PIN code,Add key,Delete key,Key
	DODGE\Select from vehicle\Asia\Durango\2011	Sync smart function,

DODGE\Select from vehicle\Asia\Durango\2014	Add smart key,Delete smart key,Key count,Read
DODGE\Select from vehicle\Asia\Journey\2011-	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Europe\Caravan\20	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Europe\Caravan\20	Sync smart function,
DODGE\Select from vehicle\Europe\Challenger\	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Charger\20	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Europe\Charger\20	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Dart\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Durango\20	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Europe\Durango\20	Sync smart function,
DODGE\Select from vehicle\Europe\Durango\20	Add smart key,Delete smart key,Key count,Read
DODGE\Select from vehicle\Europe\Grand	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Europe\Journey\20	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Europe\Ram\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Magnum\20	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Dart\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\South	Sync smart function,
DODGE\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,Key

DODGE\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\South	Sync smart function,
DODGE\Select from vehicle\South	Add smart key,Delete smart key,Key count,Read
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Middle	Sync smart function,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Middle	Sync smart function,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Key count,Read
DODGE\Select from vehicle\Middle East\Grand	Read PIN code,Add key,Delete key,Key

DODGE\Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Caravan\2	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Australia\Caravan\2	Sync smart function,
DODGE\Select from vehicle\Australia\Challenge	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Charger\2	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Australia\Charger\2	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Dart\2013	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Durango\	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Australia\Durango\	Sync smart function,
DODGE\Select from vehicle\Australia\Durango\	Add smart key,Delete smart key,Key count,Read
DODGE\Select from vehicle\Australia\Grand	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Australia\Journey\2	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Australia\Ram\2013	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Magnum\	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Dart\2013	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Caravan\201	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Africa\Caravan\201	Sync smart function,

DODGE\Select from vehicle\Africa\Challenger\2	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Charger\201	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Africa\Charger\201	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Dart\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Durango\201	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Africa\Durango\201	Sync smart function,
DODGE\Select from vehicle\Africa\Durango\201	Add smart key,Delete smart key,Key count,Read
DODGE\Select from vehicle\Africa\Grand	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Africa\Journey\201	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Africa\Ram\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Magnum\201	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Dart\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Dart\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\North	Add smart key,Delete key,Read PIN code,
DODGE\Select from vehicle\Europe\Ram\2013-	Add smart key,Delete key,Read PIN code,
DODGE\Select from vehicle\Australia\Ram\2013	Add smart key,Delete key,Read PIN code,
DODGE\Select from vehicle\Africa\Ram\2013-	Add smart key,Delete key,Read PIN code,
DODGE\Select from vehicle\South	Add smart key,Delete key,Read PIN code,
DODGE\Select from vehicle\Middle	Add smart key,Delete key,Read PIN code,
DODGE\Select from vehicle\North America\Ram	Read PIN code,Add key,Delete key,

DODGE\Select from vehicle\North America\Ram	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\Asia\Ram	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\Asia\Ram	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\Europe\Ram	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\Europe\Ram	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\Australia\Ram	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\Australia\Ram	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\Africa\Ram	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\Africa\Ram	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\Middle East\Ram	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\Middle East\Ram	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\North America\Ram	Add smart key,Key count,
DODGE\Select from vehicle\Asia\Ram\2018\PE	Add key,Delete key,
DODGE\Select from vehicle\Asia\Viper\2015-	Add smart key,Delete smart key,
DODGE\Select from vehicle\North	Add smart key,Delete smart key,Key count,
DODGE\Select from vehicle\North	Add smart key,Delete smart key,Key count,
DODGE\Select from vehicle\North	Add smart key,Delete smart key,Key count,
DODGE\Select from vehicle\North	Add smart key,Delete smart key,Key count,

DODGE\Select from vehicle\Asia\Challenger\20	Add smart key,Delete smart key,Key count,
DODGE\Select from vehicle\Asia\Challenger\20	Add smart key,Delete smart key,Key count,
DODGE\Select from vehicle\Asia\Charger\2018\	Add smart key,Delete smart key,Key count,
DODGE\Select from vehicle\Asia\Charger\2019-	Add smart key,Delete smart key,Key count,
DODGE\Select from vehicle\Asia\Ram\2018\IM	Program key,Delete key,
DODGE\Select from vehicle\North	Add smart key,Delete smart key,
DODGE\Select from vehicle\North	Add key,Delete key,
DODGE\Select from vehicle\North	Program key,Delete key,
DODGE\Select from vehicle\North	Add smart key,Delete smart key,
DODGE\Select from vehicle\Asia\Ram\2019-	Add smart key,Delete smart key,
DODGE\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Viper\2015-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Challenger\20	Add smart key,Delete smart key,
DODGE\Select from vehicle\North	Add smart key,Delete smart key,
DODGE\Select from vehicle\Asia\Charger\2015-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Charger\2015-	Add smart key,Delete smart key,
DODGE\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\North	Add smart key,Delete smart key,
DODGE\Select from vehicle\Europe\Charger\20	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Charger\20	Add smart key,Delete smart key,

DODGE\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South	Add smart key,Delete smart key,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle	Add smart key,Delete smart key,
DODGE\Select from vehicle\Australia\Charger\2	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Charger\2	Add smart key,Delete smart key,
DODGE\Select from vehicle\Africa\Charger\201	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Charger\201	Add smart key,Delete smart key,
DODGE\Select from vehicle\Asia\Durango\2018	Add smart key,Delete smart key,
DODGE\Select from vehicle\North	Add smart key,Delete smart key,
DODGE\Select from vehicle\North America\Ram	All key lost,Key count,
DODGE\Select from vehicle\North America\Ram	Key count,Program key,Read pin code,Make
DODGE\Select from vehicle\Asia\RAM	Program key,Delete key,
DODGE\Select from vehicle\North	Program key,Delete key,
DODGE\Select from vehicle\Asia\RAM	Program key,Delete key,
DODGE\Select from vehicle\North	Program key,Delete key,
DODGE\Select from vehicle\Asia\RAM	Add smart key,Delete smart key,
DODGE\Select from vehicle\Asia\RAM	Add smart key,Delete smart key,
DODGE\Select from vehicle\North	Add smart key,Delete smart key,
DODGE\Select from vehicle\North	Add smart key,Delete smart key,

DODGE\Select from type\Remote\Type 1(VPW)	Add remote,
DODGE\Select from type\Remote\Type 2(VPW)	Add remote,
DODGE\Select from type\Remote\Type 3(VPW)	Add remote,
DODGE\Select from type\Remote\Type 4(CAN)	Add remote,Read PIN code,
DODGE\Select from type\Remote\Type 5(VPW)	Add remote,Clear remote,
DODGE\Select from type\Remote\Type 6(VPW)	Add remote,
DODGE\Select from type\Remote\Type 7(VPW)	Add remote,
DODGE\Select from type\Remote\Type 8(VPW)	Add remote,
DODGE\Select from vehicle\Asia\Caravan\2001	Add remote,Clear remote,
DODGE\Select from vehicle\Asia\Dakota\2001-	Add remote,
DODGE\Select from vehicle\Asia\Durango\2001	Add remote,
DODGE\Select from vehicle\Asia\Interpid\1997-	Add remote,
DODGE\Select from vehicle\Asia\Neon\2000-	Add remote,
DODGE\Select from vehicle\Asia\Ram\2002-	Add remote,
DODGE\Select from vehicle\Asia\Stratus\4	Add remote,
DODGE\Select from type\Smart key\Type	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from type\Smart key\Type	Read PIN code,Add smart key,Delete smart key,Key
DODGE\Select from vehicle\Asia\Challenger\20	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Charger\2011-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Magnum\2011	Add smart key,Delete smart key,Read PIN code,

DODGE\Select from vehicle\Asia\Viper\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from type\Immobilizer\Type	Add new key,Add old key,Add remote,Check key
DODGE\Select from type\Immobilizer\Type	Read PIN code,Add new key,Delete key,Key
DODGE\Select from type\Immobilizer\Type	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from type\Immobilizer\Type	Read PIN code,Add key,Delete key,Key
DODGE\Select from type\Immobilizer\Type	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from type\Immobilizer\Type	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Asia\Dart\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Ram\2013-	Add smart key,Delete key,Read PIN code,
DODGE\Select from type\Smart key\Type	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from type\Smart key\Type	Sync smart function,
DODGE\Select from type\Smart key\Type	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from type\Immobilizer\Type	Add key,Delete key,
DODGE\Select from type\Immobilizer\Type	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\North	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\North	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\North	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\North	Add remote,
DODGE\Select from vehicle\North	Add key,Delete key,
DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key count,

DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\North	Sync smart function,
DODGE\Select from vehicle\North	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\North	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\North	Sync smart function,
DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\North	Sync smart function,
DODGE\Select from vehicle\North	Add remote,
DODGE\Select from vehicle\North	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\North	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\North	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\North	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\North	Add remote,
DODGE\Select from vehicle\North	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\North	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\North	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\North	Add key,Delete key,
DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\North	Add key,Delete key,Key count,Read PIN

DODGE\Select from vehicle\North	Add remote,
DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\North	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\North	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\North	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\North	Add remote,
DODGE\Select from vehicle\North	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\North	Add remote,
DODGE\Select from vehicle\North	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\North	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\North	Add remote,
DODGE\Select from vehicle\North	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\North	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\North	Add remote,
DODGE\Select from type\IMMO-Fobik	Read PIN code,Sync smart key,Add key,Delete
DODGE\Select from vehicle\North	Add key,Delete key,Key count,Read PIN

DODGE\Select from vehicle\Asia\Avenger\2008-	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Asia\Caliber\2007-	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Asia\Caravan\2001	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Asia\Caravan\2004	Add key,Delete key,
DODGE\Select from vehicle\Asia\Caravan\2008	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Caravan\2010	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Asia\Caravan\2010	Sync smart function,
DODGE\Select from vehicle\Asia\Challenger\20	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Asia\Challenger\20	Sync smart function,
DODGE\Select from vehicle\Asia\Charger\2005-	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Asia\Charger\2006-	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Asia\Charger\2008\	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Charger\2008\	Sync smart function,
DODGE\Select from vehicle\Asia\Charger\2009-	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Asia\Charger\2009-	Sync smart function,
DODGE\Select from vehicle\Asia\Dakota\2005-	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Asia\Dakota\2007-	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Asia\Dakota\2009-	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Asia\Durango\2001	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Asia\Durango\2004	Add new key,Add old key,Add remote,Delete

DODGE

DODGE\Select from vehicle\Asia\Durango\2007	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Asia\Grand	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Asia\Grand	Add key,Delete key,
DODGE\Select from vehicle\Asia\Grand	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Grand	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Asia\Interpid\1997-	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Asia\Journey\2008-	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Asia\Magnum\2005	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Asia\Magnum\2006	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Asia\Magnum\2008	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Asia\Neon\2000-	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Asia\Neon\2005-	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Asia\Neon\2005-	Add remote,
DODGE\Select from vehicle\Asia\Nitro\2007-	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Asia\Ram\2002-	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Asia\Stratus\4	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Asia\Dakota\2001-	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Europe\Avenger\20	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Europe\Caliber\200	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Europe\Caravan\20	Read PIN code,Add new key,Delete key,Key

DODGE\Select from vehicle\Europe\Caravan\20	Add remote,
DODGE\Select from vehicle\Europe\Caravan\20	Add key,Delete key,
DODGE\Select from vehicle\Europe\Caravan\20	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Challenger\	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Europe\Challenger\	Sync smart function,
DODGE\Select from vehicle\Europe\Charger\20	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Europe\Charger\20	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Europe\Charger\20	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Charger\20	Sync smart function,
DODGE\Select from vehicle\Europe\Charger\20	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Europe\Charger\20	Sync smart function,
DODGE\Select from vehicle\Europe\Dakota\200	Add remote,
DODGE\Select from vehicle\Europe\Dakota\200	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Europe\Dakota\200	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Europe\Dakota\200	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Europe\Durango\20	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Europe\Durango\20	Add remote,
DODGE\Select from vehicle\Europe\Durango\20	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Europe\Durango\20	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Europe\Grand	Add key,Delete key,Key count,Read PIN

DODGE\Select from vehicle\Europe\Grand	Add key,Delete key,
DODGE\Select from vehicle\Europe\Grand	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Interpid\199	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Europe\Interpid\199	Add remote,
DODGE\Select from vehicle\Europe\Journey\20	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Europe\Journey\20	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Europe\Magnum\20	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Europe\Magnum\20	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Europe\Magnum\20	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Europe\Neon\2000-	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Europe\Neon\2000-	Add remote,
DODGE\Select from vehicle\Europe\Neon\2005-	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Europe\Neon\2005-	Add remote,
DODGE\Select from vehicle\Europe\Nitro\2007-	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Europe\Ram\2002-	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Europe\Ram\2002-	Add remote,
DODGE\Select from vehicle\Europe\Ram\2006-	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Europe\Ram\2009-	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Europe\Stratus\200	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Europe\Stratus\200	Add remote,

DODGE\Select from vehicle\Europe\Dakota\200	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Add key,Delete key,
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\South	Sync smart function,
DODGE\Select from vehicle\South	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\South	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Sync smart function,
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\South	Sync smart function,
DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\South	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\South	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\South	Add key,Delete key,Key count,Read PIN

DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\South	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\South	Add key,Delete key,
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\South	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\South	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\South	Add remote,

DODGE\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\South	Add remote,
DODGE\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Middle	Add remote,
DODGE\Select from vehicle\Middle	Add key,Delete key,
DODGE\Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Middle	Sync smart function,
DODGE\Select from vehicle\Middle	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Middle	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Middle	Sync smart function,
DODGE\Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Middle	Sync smart function,
DODGE\Select from vehicle\Middle	Add remote,

DODGE\Select from vehicle\Middle	Add new key,Add old key,Add remote>Delete
DODGE\Select from vehicle\Middle	Add key>Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Middle	Add key>Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Middle	Add key>Delete key,Key count,Read PIN
DODGE\Select from vehicle\Middle	Add remote,
DODGE\Select from vehicle\Middle	Add new key,Add old key,Add remote>Delete
DODGE\Select from vehicle\Middle	Add key>Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Middle East\Grand	Add key>Delete key,Key count,Read PIN
DODGE\Select from vehicle\Middle East\Grand	Add key>Delete key,
DODGE\Select from vehicle\Middle East\Grand	Read PIN code,Add key>Delete key,Key count,
DODGE\Select from vehicle\Middle	Add key>Delete key,Key count,Read PIN
DODGE\Select from vehicle\Middle	Add remote,
DODGE\Select from vehicle\Middle	Read PIN code,Add key>Delete key,Key count,
DODGE\Select from vehicle\Middle	Add smart key>Delete smart key,Read PIN code,
DODGE\Select from vehicle\Middle	Add new key,Add old key,Add remote>Delete
DODGE\Select from vehicle\Middle	Add key>Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Middle	Read PIN code,Add key>Delete key,Key
DODGE\Select from vehicle\Middle	Add key>Delete key,Key count,Read PIN
DODGE\Select from vehicle\Middle	Add remote,
DODGE\Select from vehicle\Middle	Add new key,Add old key,Add remote>Delete

DODGE\Select from vehicle\Middle	Add remote,
DODGE\Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Middle	Add remote,
DODGE\Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Middle	Add remote,
DODGE\Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Australia\Avenger\2	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Australia\Caliber\20	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Australia\Caravan\2	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Australia\Caravan\2	Add remote,
DODGE\Select from vehicle\Australia\Caravan\2	Add key,Delete key,
DODGE\Select from vehicle\Australia\Caravan\2	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Challenge	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Australia\Challenge	Sync smart function,
DODGE\Select from vehicle\Australia\Charger\2	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Australia\Charger\2	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Australia\Charger\2	Read PIN code,Add key,Delete key,Key count,

DODGE\Select from vehicle\Australia\Charger\2	Sync smart function,
DODGE\Select from vehicle\Australia\Charger\2	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Australia\Charger\2	Sync smart function,
DODGE\Select from vehicle\Australia\Dakota\20	Add remote,
DODGE\Select from vehicle\Australia\Dakota\20	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Australia\Dakota\20	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Australia\Dakota\20	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Australia\Durango\	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Australia\Durango\	Add remote,
DODGE\Select from vehicle\Australia\Durango\	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Australia\Durango\	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Australia\Grand	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Australia\Grand	Add key,Delete key,
DODGE\Select from vehicle\Australia\Grand	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Interpid\1	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Australia\Interpid\1	Add remote,
DODGE\Select from vehicle\Australia\Journey\2	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Australia\Journey\2	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Australia\Magnum\	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Australia\Magnum\	Add key,Delete key,Key count,Add remote,Read

DODGE\Select from vehicle\Australia\Magnum\	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Australia\Neon\200	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Australia\Neon\200	Add remote,
DODGE\Select from vehicle\Australia\Neon\200	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Australia\Neon\200	Add remote,
DODGE\Select from vehicle\Australia\Nitro\2007	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Australia\Ram\2002	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Australia\Ram\2002	Add remote,
DODGE\Select from vehicle\Australia\Ram\2006	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Australia\Ram\2009	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Australia\Stratus\20	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Australia\Stratus\20	Add remote,
DODGE\Select from vehicle\Australia\Dakota\20	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Africa\Avenger\200	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Africa\Caliber\2007	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Africa\Caravan\200	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Africa\Caravan\200	Add remote,
DODGE\Select from vehicle\Africa\Caravan\200	Add key,Delete key,
DODGE\Select from vehicle\Africa\Caravan\200	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Challenger\2	Read PIN code,Add key,Delete key,Key

DODGE\Select from vehicle\Africa\Challenger\2	Sync smart function,
DODGE\Select from vehicle\Africa\Charger\200	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Africa\Charger\200	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Africa\Charger\200	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Charger\200	Sync smart function,
DODGE\Select from vehicle\Africa\Charger\200	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Africa\Charger\200	Sync smart function,
DODGE\Select from vehicle\Africa\Dakota\2001	Add remote,
DODGE\Select from vehicle\Africa\Dakota\2005	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Africa\Dakota\2007	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Africa\Dakota\2009	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Africa\Durango\200	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Africa\Durango\200	Add remote,
DODGE\Select from vehicle\Africa\Durango\200	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Africa\Durango\200	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Africa\Grand	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Africa\Grand	Add key,Delete key,
DODGE\Select from vehicle\Africa\Grand	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Interpid\1997	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Africa\Interpid\1997	Add remote,

DODGE\Select from vehicle\Africa\Journey\200	Read PIN code,Add key,Delete key,Key count,
DODGE\Select from vehicle\Africa\Journey\201	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Africa\Magnum\200	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Africa\Magnum\200	Add key,Delete key,Key count,Add remote,Read
DODGE\Select from vehicle\Africa\Magnum\200	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Africa\Neon\2000-	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Africa\Neon\2000-	Add remote,
DODGE\Select from vehicle\Africa\Neon\2005-	Add new key,Add old key,Add remote,Delete
DODGE\Select from vehicle\Africa\Neon\2005-	Add remote,
DODGE\Select from vehicle\Africa\Nitro\2007-	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Africa\Ram\2002-	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Africa\Ram\2002-	Add remote,
DODGE\Select from vehicle\Africa\Ram\2006-	Read PIN code,Add new key,Delete key,Key
DODGE\Select from vehicle\Africa\Ram\2009-	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Africa\Stratus\2001	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\Africa\Stratus\2001	Add remote,
DODGE\Select from vehicle\Africa\Dakota\2001	Add key,Delete key,Key count,Read PIN
DODGE\Select from type\Immobilizer\Type	Key count,Program key,Delete key,Program
DODGE\Select from type\Smart key\Type	Read PIN code,Add key,Delete key,
DODGE\Select from vehicle\Asia\Ram\2006-	Read PIN code,Add new key,Delete key,Key

DODGE\Select from vehicle\Asia\Ram\2009-	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Asia\Journey\2011-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Ram\2013-	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from type\Smart key\Type	Read PIN code,Add smart key,Delete smart key,
DODGE\Select from type\Smart key\Type	Read PIN code,Add key,Delete key,
DODGE\Select from type\Smart key\Type	Read PIN code,Add key,Delete key,
DODGE\Select from type\Remote\Type 9(VPW)	Program remote,
DODGE\Select from vehicle\Asia\Ram	Add key,Delete key,Key count,Read PIN
DODGE\Select from vehicle\North	Read PIN code,Sync smart key,Add key,Delete
DODGE\Select from vehicle\North	Add new key,Add old key,Add remote,Check key
DODGE\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,
DODGE\Select from vehicle\Asia\Caravan\2008	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Europe\Caravan\20	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\South	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Australia\Caravan\2	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Africa\Caravan\200	Read PIN code,Add key,Delete key,Key
DODGE\Select from vehicle\Asia\Tradesman\20	Sync smart function,
DODGE\Select from vehicle\Asia\Tradesman\20	Read PIN code,Add key,Delete key,Key

	DODGE\Select from vehicle\North	Sync smart function,
	DODGE\Select from vehicle\North	Read PIN code,Add key,Delete key,Key
	RENAULT\Select from vehicle\Symbol\Symbol.\Ty	Add key,
	RENAULT\Select from vehicle\Thalia\Thalia.\Type	Add key,
	RENAULT\Select from vehicle\Trafic\Trafic II Ph2.	Add key,
	RENAULT\Select from vehicle\Master\Master.	Add key,
	RENAULT\Select from vehicle\Primastar\Primasta	Add key,
	RENAULT\Select from vehicle\Clio\Clio II Ph2.	Add key,
	RENAULT\Select from vehicle\Kangoo\Kangoo I.	Add key,
	RENAULT\Select from vehicle\Symbol\Symbol.\Ty	Program key,
	RENAULT\Select from vehicle\Thalia\Thalia.\Type	Program key,
	RENAULT\Select from vehicle\Laguna\Laguna II.	Add key,
	RENAULT\Select from vehicle\Espace\Espace IV.	Add key,
	RENAULT\Select from vehicle\Laguna\Laguna II	Add key,
	RENAULT\Select from vehicle\Espace\Espace IV	Add key,
	RENAULT\Select from vehicle\Clio\CLIO	Add key,
	RENAULT\Select from vehicle\Modus\Modus.\Wit	Add key,
	RENAULT\Select from vehicle\Clio\CLIO III.\With	Add key,
	RENAULT\Select from vehicle\Trafic\Trafic II	Add key,Revise VIN code,Clear fault code,
	RENAULT\Select from vehicle\Master\Master	Add key,Revise VIN code,Clear fault code,

RENAULT\Select from vehicle\Wind\2010-2013.	Add key,
RENAULT\Select from type\All\Type 0	Add key,
RENAULT\Select from type\All\Type 1	Add key,
RENAULT\Select from type\All\Type 2	Program key,
RENAULT\Select from type\All\Type 3	Add key,
RENAULT\Select from type\All\Type 4	Add key,
RENAULT\Select from type\All\Type 5	Add key,
RENAULT\Select from type\All\Type 6	Add key,
RENAULT\Select from type\All\Type 7	Add key,Revise VIN code,Clear fault code,
RENAULT\Select from type\All\Type 8	Add key,
RENAULT\Select from type\All\Type 9	Program key,
RENAULT\Select from type\All\Type A	Add key,
RENAULT\Select from type\All\Type B	Read PIN code,Program key,Recover backup data,
RENAULT\Select from vehicle\Trafic\Trafic III	Read PIN code,Program key,Recover backup data,
RENAULT\Select from vehicle\Clio\Clio IV.\2012-	Add key,Recover data,All key lost,Make dealer
RENAULT\Select from vehicle\Captur	Add key,Recover data,All key lost,Make dealer
RENAULT\Select from vehicle\Symbol\2013-2018	Program key,Read PIN code,Read key count,
RENAULT\Select from vehicle\Dacia\Logan\2013-	Program key,Read PIN code,Read key count,
RENAULT\Select from vehicle\Trafic\Trafic III	Program key,
RENAULT\Select from vehicle\Twingo\Twingo III.	Read PIN code,Recover backup data,Program key,

RENAULT>Select from vehicle\Espace\2015-	Program smart key,Make dealer key,
RENAULT>Select from vehicle\Espace\2015-	Program key,Make dealer key,
RENAULT>Select from vehicle\Megane\Megane	Program smart key,Make dealer key,
RENAULT>Select from vehicle\Megane\Megane	Program key,Make dealer key,
RENAULT>Select from vehicle\Scenic\Scenic	Program key,Make dealer key,
RENAULT>Select from vehicle\Scenic\Scenic	Program smart key,Make dealer key,
RENAULT>Select from vehicle\Dacia\Duster\2013-	Program key,Read PIN code,Read key count,
RENAULT>Select from vehicle\Dacia\Solenza	Add key,
RENAULT>Select from vehicle\Dacia\Lodgy\2013-	Program key,Read PIN code,Read key count,
RENAULT>Select from vehicle\Dacia\Sandero\201	Program key,Read PIN code,Read key count,
RENAULT>Select from vehicle\Trafic\Trafic III	Read PIN code,Recover backup data,Program key,
RENAULT>Select from vehicle\Koleos\2016-	Read DFLASH,Add key,Make dealer key,All
RENAULT>Select from vehicle\Koleos\2016-	Read DFLASH,Add smart key,All smart key lost,Make
RENAULT>Select from vehicle\Kadjar\2016-	Read DFLASH,Add key,Make dealer key,All
RENAULT>Select from vehicle\Kadjar\2016-\Smart	Read DFLASH,Add smart key,All smart key lost,Make
RENAULT>Select from type\Smart key\IMMO2	Program smart key,Collision recovery,
RENAULT>Select from type\Smart key\IMMO1	Program smart key,Collision recovery,
RENAULT>Select from vehicle\Fluence\2008 -	Program key,
RENAULT>Select from vehicle\Clio\1997-1999	Set IMMO unit,Initialize new immobilizer,
RENAULT>Select from vehicle\Clio\2000-2008 VIN	Program key,

RENAULT

RENAULT>Select from vehicle\Clio\2006-2012 VIN	Program smart key,
RENAULT>Select from vehicle\Clio\2006-2012 VIN	Program key,
RENAULT>Select from vehicle\Espace\2002- VIN	Program smart key,
RENAULT>Select from vehicle\Espace\2002- VIN	Program smart key,
RENAULT>Select from vehicle\Kangoo\1999-	Set IMMO unit,
RENAULT>Select from vehicle\Kangoo\1999-	Set IMMO unit,Initialize new immobilizer,
RENAULT>Select from vehicle\Kangoo\2003-2008	Program key,
RENAULT>Select from vehicle\Koleos\2008-2010	Program smart key,
RENAULT>Select from vehicle\Laguna\-	Program smart key,
RENAULT>Select from vehicle\Laguna\-	Program smart key,
RENAULT>Select from vehicle\Laguna\2007-2011	Program smart key,
RENAULT>Select from vehicle\Master\ -2003	Set IMMO unit,Initialize new immobilizer,
RENAULT>Select from vehicle\Master\2003-2010	Program key,
RENAULT>Select from vehicle\Maxity	Read BCM,Program remote,Clear remote,
RENAULT>Select from vehicle\Megane\2002-2008	Program smart key,
RENAULT>Select from vehicle\Megane\02-	Program smart key,
RENAULT>Select from vehicle\Megane\2008 -	Program key,
RENAULT>Select from vehicle\Scenic\2002-2006,	Program smart key,
RENAULT>Select from vehicle\Scenic\2006-2009,	Program smart key,
RENAULT>Select from vehicle\Scenic\2008-2011	Program key,

RENAULT\Select from vehicle\Modus\2004-2012	Program key,
RENAULT\Select from vehicle\Modus\2004-2012	Program smart key,Program remote,Clear
RENAULT\Select from vehicle\Safrane\2008- VIN	Program smart key,
RENAULT\Select from vehicle\Scala\2011-	Read BCM,Program key,Program remote,Clear
RENAULT\Select from vehicle\Trafic\2002- VIN	Program key,
RENAULT\Select from vehicle\Trafic\2002	Set IMMO unit,Initialize new immobilizer,
RENAULT\Select from vehicle\Twingo\2007 VIN	Set IMMO unit,
RENAULT\Select from vehicle\Twingo\2007 VIN	Set IMMO unit,Initialize new immobilizer,
RENAULT\Select from vehicle\Twingo\2007- VIN	Program key,
RENAULT\Select from vehicle\Velsatis\2002-2010	Program smart key,
RENAULT\Select from vehicle\Velsatis\2002-2010	Program smart key,
RENAULT\Select from vehicle\Wind\2010- VIN	Program key,
RENAULT\Select from vehicle\Safrane\ (KNMG4)	Read BCM,Program key,Program remote,Clear
RENAULT\Select from vehicle\Koleos\2010-2016	Program smart key,Collision recovery,
RENAULT\Select from vehicle\Latitude	Program key,
RENAULT\Select from vehicle\Scenic\1999-2002	Read PIN code,Program key,
RENAULT\Select from vehicle\Scenic\2008	Program key,
RENAULT\Select from vehicle\Twingo\Twingo I	Add key,
RENAULT\Select from vehicle\Dacia\Duster\2010-	Program key,
RENAULT\Select from vehicle\Velsatis\2005.	Add key,

RENAULT>Select from vehicle\Velsatis\2005-.	Add key,
RENAULT>Select from vehicle\Kangoo\Kangoo	Add key,
RENAULT>Select from vehicle\Twingo\Twingo	Add key,
RENAULT>Select from vehicle\Laguna\Laguna	Add key,
RENAULT>Select from vehicle\Megane\Megane	Add key,
RENAULT>Select from vehicle\Fluence\2009-	Add key,
RENAULT>Select from vehicle\Koleos\2008 -.	Add key,
RENAULT>Select from vehicle\Scenic\Scenic III	Add key,
RENAULT>Select from vehicle\Avantime\2001-	Add key,
RENAULT>Select from vehicle\Kangoo\Kangoo	Add key,Revise VIN code,Clear fault code,
RENAULT>Select from vehicle\Megane\Megane	Program key,
RENAULT>Select from vehicle\Dacia\Dokker\2012	Program key,Read PIN code,Read key count,
RENAULT>Select from vehicle\Dacia\Sandero	Add key,
RENAULT>Select from vehicle\Dacia\Sandero\200	Add key,
RENAULT>Select from vehicle\Dacia\Logan\2004-	Add key,
RENAULT>Select from vehicle\Dacia\LOGAN(MA1	Add key,
RENAULT>Select from vehicle\Fluence\2008 -	Program key,
RENAULT\Modify VIN code	Modify VIN code,
SUZUKI\China\Swift\2015-\Type 3\Smart key	Program smart key,
SUZUKI\China\Swift\2005-	All key lost,

SUZUKI

SUZUKI\China\Vitara\Immobilizer\Type 1	All key lost,
SUZUKI\China\Vitara\Immobilizer\Type 2	Program key,Obtain immoID,
SUZUKI\China\Alto\Immobilizer	Program key,Obtain immoID,
SUZUKI\China\SX4\Immobilizer	Program key,Obtain immoID,
SUZUKI\China\Vitara\Immobilizer\Type 3	Program key,Read immoID,Program key
SUZUKI\China\Vitara\Smart key\Type 1	Program smart key (PIN required),Program smart
SUZUKI\China\Alivio\Smart key	Program smart key (PIN required),Program smart
SUZUKI\China\Alivio\Immobilizer	Program key,Read immoID,Program key
SUZUKI\China\Liana\Immobilizer\Type 1	All key lost,
SUZUKI\China\S-Cross\Smart key	Program smart key (PIN required),Program smart
SUZUKI\China\Jimny\Immobilizer\Type 1	Program key>Delete key,Register immobiliser,
SUZUKI\Japan\Ignis\Immobilizer	Program key>Delete key,Register immobiliser,
SUZUKI\China\Liana\Immobilizer\Type 2	Program key>Delete key,Register immobiliser,
SUZUKI\China\Jimny\Immobilizer\Type 2	All key lost,
SUZUKI\China\Swift\2012-	Program smart key (PIN required),Program smart
SUZUKI\USA\XL7(USA)\2007-2009\Immobilizer	All key lost,
SUZUKI\China\Swift\2015-\Type 1	Program key,Read immoID,Program key
SUZUKI\Japan\Baleno\Immobilizer\1996-2001	Program key>Delete key,
SUZUKI\China\Kizashi\Smart key	Program smart key (PIN required),Program smart
SUZUKI\Japan\Wagon R\Immobilizer\1998-	Program key>Delete key,Register immobiliser,

SUZUKI\China\Swift\2015- \Type 2	All key lost,
SUZUKI\Japan\Swift\Immo bilizer\1996-2004	Program key,Delete key,
SUZUKI\Japan\Alto\Immob ilizer\1996-2002	Program key,Delete key,
SUZUKI\Japan\Grand Vitar\Immobilizer\1996-	Program key,Delete key,
SUZUKI\Japan\Grand Vitar\Immobilizer\2002-	Program key,Delete key,
SUZUKI\Japan\Vitara\Imm obilizer\1996-2002	Program key,Delete key,
SUZUKI\Japan\Vitara\Imm obilizer\2002-	Program key,Delete key,
SUZUKI\Japan\Jimny\Imm obilizer	Program key,Delete key,
SUZUKI\China\New Alto	Program key,Obtain immold,
SUZUKI\China\Xiao Tu\Smart key	Program smart key (PIN required),Program smart
FORD\USA\C- MAX\Immobilizer\2014-	Add key,Delete key,All key lost,
FORD\USA\Edge\Smart key\2015-2019	Add smart key,All smart key lost,
FORD\USA\Escape\Immob ilizer\2014-2019	Add key,Delete key,All key lost,
FORD\USA\Expedition\201 5-2017\Immobilizer	Delete key,Add key,Read key count,
FORD\USA\Expedition\201 5-2017\Smart key	Delete smart key,Add smart key,Read smart key
FORD\USA\Explorer\2016- 2019\Smart key	Add smart key,All smart key lost,
FORD\USA\Focus\Immobi lizer\2014-2018	Add key,Delete key,All key lost,
FORD\USA\Fusion\2013- 2019\Smart key	Add smart key,All smart key lost,
FORD\USA\F-150\2015- 2017\Smart key	Add smart key,All smart key lost,
FORD\USA\F-150\2018- 2020\Immobilizer	Add key,Delete key,Read key count,

FORD\USA\F-250\2017-2019\Immobilizer	Add key,Delete key,Read key count,
FORD\USA\F-250\2017-2019\Smart key	Add smart key,All smart key lost,
FORD\USA\F-350\2017-2019\Immobilizer	Add key,Delete key,Read key count,
FORD\USA\F-550\2017-2019\Immobilizer	Add key,Delete key,Read key count,
FORD\USA\Mustang\2015-2019\Smart key	Add smart key,All smart key lost,
FORD\USA\Ranger\2017\Immobilizer	Read key count,Add key,All key lost,
FORD\USA\Taurus\Immobilizer\2013-2018	Delete key,Add key,Read key count,
FORD\USA\Transit T250\2015-\Immobilizer	Add key,Delete key,All key lost,
FORD\USA\Transit Connect\2014-	Add key,Delete key,All key lost,
FORD\Europe\Transit Custom\2014-\Immobilizer	Key count,Delete key,Add key,
FORD\Europe\Transit\2014-\Immobilizer	Key count,Delete key,Add key,
FORD\Europe\Tourneo Custom\2014-\Immobilizer	Key count,Delete key,Add key,
FORD\Europe\Focus\2015-2016\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\C-Max\2015-	Add key,Delete key,All key lost,
FORD\Europe\Vignale\2015-\Smart key	Read key count,Add key,All key lost,
FORD\Europe\Transit Custom\2017-\Immobilizer	Read key count,Add key,All key lost,
FORD\Europe\S-Max\2015-\Smart key	Read key count,Add key,All key lost,
FORD\Europe\Mustang\2015-\Smart key	Read key count,Add key,All key lost,
FORD\Europe\Mondeo\2015-\Immobilizer	Read key count,Add key,All key lost,
FORD\Europe\Mondeo\2015-\Smart key	Read key count,Add key,All key lost,

FORD\Europe\Galaxy\2015\Smart key	Read key count,Add key,All key lost,
FORD\Africa\Transit\2014-	Key count,Delete key,Add key,
FORD\China\Explorer\2017-\Smart key	Add smart key,All smart key lost,
FORD\South America\F350\-	Key count,Delete key,
FORD\Europe\Tourneo Courier\2014-\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Transit\2013-\Immobilizer\Type 2	Key count,Delete key,Add key,
FORD\China\Remote\Type 2(Transit 2014-)	Program remote,
FORD\China\Tourneo\2014-\Immobilizer	Key count,Delete key,Add key,
FORD\Europe\Kuga\2016-2018\Smart key	Add smart key,All smart key lost,
FORD\China\Everest\Smart key\2017-	Add smart key,All smart key lost,
FORD\China\Mustang\Smart key\2017-	Add smart key,All smart key lost,
FORD\China\Raptor F250\2017-\Smart key	Add smart key,All smart key lost,
FORD\China\Everest\Immobilizer\2017-	Add key,Delete key,Read key count,
FORD\India\Aspire\2017-\Immobilizer	Add key,Delete key,Read key count,
FORD\Europe\KA\2016-2018\Immobilizer	Key count,Add key,All key lost,
FORD\USA\Expedition\2018-2019	Add smart key,All smart key lost,
FORD\USA\Explorer\2016-2019\Immobilizer	Key count,Add key,All key lost,
FORD\USA\F-150\2018-2020\Smart key	Add smart key,All smart key lost,
FORD\USA\F-350\2017-2019\Smart key	Add smart key,All smart key lost,
FORD\USA\F-650\2016-2019\Immobilizer	Delete key,Add key,Read key count,

FORD\USA\Ranger\2019-2020\Immobilizer	Add key,Delete key,Read key count,
FORD\USA\Ranger\2019-2020\Smart key	Add smart key,All smart key lost,
FORD\Europe\Transit\2017-\Immobilizer	Key count,Add key,All key lost,
FORD\Europe\Tourneo Custom\2016-\Immobilizer	Key count,Add key,All key lost,
FORD\Europe\Tourneo Connect\2015-	Add key,Delete key,All key lost,
FORD\Europe\Ranger\2016-2019\Immobilizer	Key count,Add key,All key lost,
FORD\Europe\Ranger\2019-2020\Smart key	Add smart key,All smart key lost,
FORD\USA\Focus\Smart key\2014-2018	Add smart key,All smart key lost,
FORD\USA\Escape\Smart key\2017-2018	Add smart key,All smart key lost,
FORD\China\New Mondeo\2017\Immobilizer	Add key,All key lost,Read key count,
FORD\China\New Mondeo\2017\Smart key	Add smart key,All smart key lost,
FORD\China\Escort\2017\Immobilizer	Add key,All key lost,Read key count,
FORD\China\Edge\2015-2017\Smart key	Add smart key,All smart key lost,
FORD\China\Mustang\Smart key\2017	Add smart key,All smart key lost,
FORD\China\Escape\2005-2007\Immobilizer	All key lost,Add key,Read key count,
FORD\China\Raptor F350\Immobilizer	Delete key,Add key,Read key count,
FORD\China\Transit\2000-2013\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Mondeo CHIA-X\PEPS\Smart key	Lost all smart key,Add smart key,
FORD\China\Mondeo CHIA-X\IMMO\Type	Add key,Delete key,All key lost,
FORD\China\Mondeo CHIA-X\IMMO\Type	Add key,Delete key,All key lost,

FORD\China\Focus\Classi c Focus\Type	Add key,All key lost,
FORD\China\Focus\New Focus\2011-	Add key,Delete key,All key lost,
FORD\China\Kuga\ 2015\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Ecosport\Imm obilizer	Add key,Delete key,All key lost,
FORD\China\Fiesta\IMMO\ -2013\Immobilizer	Add key,Delete key,
FORD\China\Focus\Classi c Focus\Type	Add key,Delete key,All key lost,
FORD\China\Mondeo\Imm obilizer	All key lost,Read key count,
FORD\China\Ecosport\Sm art key	All smart key lost,Add smart key,
FORD\China\Fiesta\PEPS\ Smart key	All smart key lost,Add smart key,
FORD\China\Focus\New Focus\2014-\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Explorer\201 1-\Immobilizer	Delete key,Add key,Read key count,
FORD\China\Classic Focus\Type 2\Immobilizer	Add key,Delete key,All key lost,
FORD\China\Kuga\ 2015\Smart key	Add key,Delete key,All key lost,Add smart key,Delete
FORD\China\Kuga\2016- \Smart key	Add smart key,All smart key lost,
FORD\China\Edge\ 2015\Smart key	Delete smart key,Add smart key,Read smart key
FORD\China\Raptor F150\2011-	Delete key,Add key,Read key count,
FORD\China\Raptor F150\2009-	Add key,Delete key,Read key count,Sync PCM-
FORD\China\Raptor F250\2009-	Add key,Delete key,Read key count,Sync PCM-
FORD\China\Everest\Smar t key\2017	Add smart key,All smart key lost,
FORD\China\Classic Focus\Type 1\Immobilizer	Add key,All key lost,

FORD\China\Explorer\2015-\Smart key	Add smart key,All smart key lost,
FORD\China\Taurus\2015-2016\Smart key	Add smart key,All smart key lost,
FORD\China\Everest\Immobilizer\2017	Add key,All key lost,Read key count,
FORD\China\S-MAX\IMMO\Type	Add key,Delete key,All key lost,
FORD\China\S-MAX\IMMO\Type	Add key,Delete key,All key lost,
FORD\China\Focus\New Focus\2011-2013\Smart	Add key,Delete key,All key lost,Add smart key,Delete
FORD\China\Fiesta\IMMO\2013-Immobilizer	Add key,Delete key,All key lost,
FORD\China\New Mondeo\2017-\Smart key	Add smart key,All smart key lost,Alarm unlock,
FORD\China\Taurus\2017-\Smart key	Add smart key,All smart key lost,Alarm unlock,
FORD\China\Ranger\2007-2010\Immobilizer	Read key count,Add key,All key lost,
FORD\China\Ranger\2015\Immobilizer	Add key,Delete key,All key lost,Read key
FORD\China\Ranger\2017\Immobilizer	Read key count,Add key,All key lost,Alarm
FORD\China\Escape\2008-2009\Immobilizer	Read key count,Add key,All key lost,
FORD\China\Raptor F150\2015-\Smart key	Add smart key,All smart key lost,
FORD\China\Raptor F250\2015-\Smart key	Add smart key,All smart key lost,
FORD\China\C-MAX\Smart key	Add key,Delete key,All key lost,Add smart key,Delete
FORD\China\Focus\New Focus\2014-\Smart key	Add smart key,All smart key lost,
FORD\China\Remote\Type 1	Program remote,Delete remote,
FORD\China\Edge\2015\Immobilizer	Delete key,Add key,Read key count,
FORD\China\Edge\2017-\Smart key	Add smart key,All smart key lost,Alarm unlock,

FORD\China\Escort\2017- \Immobilizer	Add key,Delete key,Read key count,Alarm unlock,
FORD\China\Raptor F150\2015-\Immobilizer	Add key,All key lost,Read key count,
FORD\China\Transit\2013- \Immobilizer\Type 1	Add key,Delete key,All key lost,
FORD\China\Fusion\2006- 2009\Immobilizer	Program key,Delete key,Key count,
FORD\China\Mustang\Imm obilizer\2011-2014	Program key,All key lost,Key count,
FORD\USA\C- MAX\Immobilizer\2013	Add key,Delete key,All key lost,
FORD\USA\C-MAX\Smart key	Add key,Delete key,All key lost,Add smart key,Delete
FORD\USA\Contour\1997- 1998\Immobilizer	All key lost,Key count,
FORD\USA\Contour\1999- 2000\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Cougar\1999- 2002\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Crown Victoria\1998-	Program key,All key lost,Key count,
FORD\USA\Crown Victoria\2003-	Program key,All key lost,Key count,
FORD\USA\Crown Victoria\2005-	Program key,All key lost,Key count,
FORD\USA\E-Series Van\2008-	Program key,All key lost,Key count,
FORD\USA\E-Series Van\2010-	Program key,All key lost,Key count,
FORD\USA\E-250 Van\Immobilizer	Program key,All key lost,Key count,
FORD\USA\E-350 Van\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Econoline\200 8-\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Edge\Immobili zer\2007-2010	Program key,All key lost,Key count,
FORD\USA\Edge\Immobili zer\2011-2014	Delete key,Add key,Read key count,

FORD\USA\Edge\Smart key\2011-2014	Delete smart key,Add smart key,Read smart key
FORD\USA\Escape\Immobilizer\2001-2004	Program key,All key lost,Key count,
FORD\USA\Escape\Immobilizer\2005-2007	Program key,All key lost,Key count,
FORD\USA\Escape\Immobilizer\2008-2012\Type 1	Program key,All key lost,Key count,
FORD\USA\Escape\Immobilizer\2008-2012\Type 2	Program key,All key lost,Key count,
FORD\USA\Escape\Immobilizer\2013	Add key,Delete key,All key lost,
FORD\USA\Escape\Smart key\2013-2016	Add key,Delete key,All key lost,Add smart key,Delete
FORD\USA\Escape Titanium\Smart key	Add smart key,All smart key lost,
FORD\USA\Excursion\2000-2005\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Expedition\1997-1998\Immobilizer	All key lost,Key count,
FORD\USA\Expedition\1999-2002\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Expedition\2003-2004\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Expedition\2005-2006\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Expedition\2007-2008\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Expedition\2009-2013\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Expedition\2014\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Explorer\1998-2001\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Explorer\2001-2003\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Explorer\2004-2005\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Explorer\2006-2010\Immobilizer	Program key,All key lost,Key count,

FORD\USA\Explorer\2010\ Immobilizer	Program key,All key lost,Key count,
FORD\USA\Explorer\2011-2015\Immobilizer	Delete key,Add key,Read key count,
FORD\USA\Explorer\2011-2015\Smart key	Delete smart key,Add smart key,Read smart key
FORD\USA\Explorer Sport Trac\2001\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Explorer Sport Trac\2001-	Program key,All key lost,Key count,
FORD\USA\Explorer Sport Trac\2006-	Program key,All key lost,Key count,
FORD\USA\Explorer Sport Trac\2010\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Explorer Sport Trac\2011-\Immobilizer	Delete key,Add key,Read key count,
FORD\USA\Explorer Sport Trac\2011-\Smart key	Delete smart key,Add smart key,Read smart key
FORD\USA\Fiesta\2014\Immobilizer	Add key,Delete key,
FORD\USA\Fiesta\2014-2019\Immobilizer	Add key,Delete key,All key lost,
FORD\USA\Fiesta\2014-2019\Smart key	All smart key lost,Add smart key,
FORD\USA\Five Hundred\2005-	Program key,All key lost,Key count,
FORD\USA\Flex\2009-2012\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Flex\2013-\Immobilizer	Delete key,Add key,Read key count,
FORD\USA\Flex\2013-2019\Smart key\Type 1	Delete smart key,Add smart key,Read smart key
FORD\USA\Focus\Immobilizer\2000-2004\Type 1	Program key,All key lost,Key count,
FORD\USA\Focus\Immobilizer\2005-2007	Program key,All key lost,Key count,
FORD\USA\Focus\Immobilizer\2008-2011	Add key,Delete key,Read key count,Sync PCM-
FORD\USA\Focus\Immobilizer\2012-2013	Add key,Delete key,All key lost,

FORD\USA\Focus\Smart key\2012-2014	Add key,Delete key,All key lost,Add smart key,Delete
FORD\USA\Ford GT\2005-2006\Immobilizer	Program key,All key lost,Key count,
FORD\USA\FreeStar\2004-2005\Immobilizer	Program key,All key lost,Key count,
FORD\USA\FreeStar\2006-2007\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Freestyle\2005-2006\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Freestyle\2007-\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Focus ST\Smart key	Add smart key,All smart key lost,
FORD\USA\Focus Titanium\Smart key	Add smart key,All smart key lost,
FORD\USA\Fusion\2006-2009\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Fusion\2010-2012\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Fusion\2013-2019\Immobilizer	Add key,All key lost,Read key count,
FORD\USA\F-150\1999-2003\Immobilizer	Program key,All key lost,Key count,
FORD\USA\F-150\2004-2008\Immobilizer\Type 1	Program key,All key lost,Key count,
FORD\USA\F-150\2009-2010\Immobilizer\Type 1	Program key,All key lost,Key count,
FORD\USA\F-150\2009-2010\Immobilizer\Type 2	Add key,Delete key,Read key count,Sync PCM-
FORD\USA\F-150\2011-2014\Immobilizer	Delete key,Add key,Read key count,
FORD\USA\F-150\2015-2017\Immobilizer	Add key,All key lost,Read key count,
FORD\USA\F-250\2008-2010\Immobilizer\Type 1	Program key,All key lost,Key count,
FORD\USA\F-250\2008-2010\Immobilizer\Type 2	Program key,All key lost,Key count,
FORD\USA\F-250\2010\Immobilizer	Program key,All key lost,Key count,

FORD\USA\F-250\2011-2016\Immobilizer\Type 1	Delete key,Add key,Read key count,
FORD\USA\F-250\2011-2016\Smart key	Delete smart key,Add smart key,Read smart key
FORD\USA\F-350\2008-2009\Immobilizer	Program key,All key lost,Key count,
FORD\USA\F-350\2010\Immobilizer	Program key,All key lost,Key count,
FORD\USA\F-350\2011-\Immobilizer	Delete key,Add key,Read key count,
FORD\USA\F-550\2011-\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Mustang\1996-1997\Immobilizer	All key lost,Key count,
FORD\USA\Mustang\1998\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Mustang\1999-2004\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Mustang\2005-2009\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Mustang\2009-2014\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Ranger\1999-2000\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Ranger\2001-2006\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Ranger\2007-2012\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Ranger\2013-\Immobilizer	Add key,Delete key,All key lost,Read key
FORD\USA\Taurus\Immobilizer\1996-1997	All key lost,Key count,
FORD\USA\Taurus\Immobilizer\1998-1999	Program key,All key lost,Key count,
FORD\USA\Taurus\Immobilizer\2000-2003	Program key,All key lost,Key count,
FORD\USA\Taurus\Immobilizer\2004-2007	Program key,All key lost,Key count,
FORD\USA\Taurus\Immobilizer\2008-2009	Program key,All key lost,Key count,

FORD

FORD\USA\Taurus\Immobilizer\2010-2012	Program key,All key lost,Key count,
FORD\USA\Taurus\Smart key\2010-2019	Delete smart key,Add smart key,Read smart key
FORD\USA\Thunderbird\2002-2005\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Transit\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Transit Connect\2010-	Program key,All key lost,Key count,
FORD\USA\Windstar\1999-2000\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Windstar\2001-2004\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Transit Courier\2014\Immobilizer	Key count,Delete key,Add key,
FORD\Europe\Tourneo Connect\2013-	Key count,Delete key,Add key,
FORD\Europe\C-Max\2010-2015\Smart	Add smart key,Delete smart key,
FORD\Europe\Focus\2011-2014\Smart key\Prox-Rem	Add smart key,Delete smart key,
FORD\Europe\Kuga\2013-2015\Smart key\Prox-Rem	Add smart key,Delete smart key,
FORD\Europe\Focus\2005-2011\Smart key	Add smart key,Delete smart key,Read smart key
FORD\Europe\Kuga\2009-2013\Smart key	Add smart key,Delete smart key,Read smart key
FORD\Europe\Kuga\2007-2009\Immobilizer	Add key,Delete key,Read key count,
FORD\Europe\Windstar\1997-1998\Immobilizer	Delete key,Add key,Key count,
FORD\Europe\Transit\2000-2007\Immobilizer\Dura-	Delete key,Add key,Key count,
FORD\Europe\Transit\1998-2000\Immobilizer\Petrol	Delete key,Add key,Key count,
FORD\Europe\Transit\1997-1998\Immobilizer\Petrol	Delete key,Add key,Key count,
FORD\Europe\Scorpio\1997\Immobilizer\Petrol-	Delete key,Add key,Key count,

FORD\Europe\Granada\1997-\Immobilizer\Petrol-	Delete key,Add key,Key count,
FORD\Europe\Galaxy\2000-2006\Immobilizer\Petrol-	Delete key,Add key,Key count,
FORD\Europe\Explorer\1997-2001\Immobilizer\Type	Delete key,Add key,Key count,
FORD\Europe\Explorer\1997-2001\Immobilizer\Type	Delete key,Add key,Key count,
FORD\Europe\Galaxy\1997-2000\Immobilizer\Petrol-	Delete key,Key count,
FORD\Europe\Windstar\1998-\Immobilizer	All key lost,Add key,Key count,
FORD\Europe\Courier\2001-	Program key,All key lost,Key count,
FORD\Europe\Courier\2001-	Program key,All key lost,Key count,
FORD\Europe\Courier\2001-2007\Immobilizer\Diesel	Program key,All key lost,Key count,
FORD\Europe\Fiesta\2001-2007\Immobilizer\Petrol(typ	Program key,All key lost,Key count,
FORD\Europe\Fiesta\2001-2007\Immobilizer\Petrol(typ	Program key,All key lost,Key count,
FORD\Europe\Fiesta\2001-2007\Immobilizer\Diesel	Program key,All key lost,Key count,
FORD\Europe\Fusion\2002-2011\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\KA\2002-2008\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\C-Max\2010\Immobilizer\Type 1	Program key,All key lost,Key count,
FORD\Europe\C-Max\2010\Immobilizer\Type 2	Program key,All key lost,Key count,
FORD\Europe\Focus\2005-2011\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Tourneo\2007-2010\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Transit Connect\2007-	Program key,All key lost,Key count,
FORD\Europe\Ranger\2012-2014\Immobilizer	Add key,Delete key,All key lost,Read key

FORD\Europe\Cougar\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Courier\1999-2001\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Escape\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Fiesta\1999-2001\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Focus\1995-1998\Immobilizer\Diesel	Program key,All key lost,Key count,
FORD\Europe\Focus\1998-2004\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Galaxy\2000-2006\Immobilizer\Petrol-	Program key,All key lost,Key count,
FORD\Europe\KA\1998-2001\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Mondeo\1997-1998\Immobilizer\Petrol-	Program key,All key lost,Key count,
FORD\Europe\Mondeo\1998-2007\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Puma\1996-2001\Immobilizer\Petrol -	Program key,All key lost,Key count,
FORD\Europe\Transit\1998-2000\Immobilizer\Diesel	Program key,All key lost,Key count,
FORD\Europe\Transit\1998-2000\Immobilizer\EPIC -	Program key,All key lost,Key count,
FORD\Europe\Transit\2000-2007\Immobilizer\Petrol	Program key,All key lost,Key count,
FORD\Europe\Transit\2000-2007\Immobilizer\Diesel	Program key,All key lost,Key count,
FORD\Europe\Transit\2000-2007\Immobilizer\Dura-	Program key,All key lost,Key count,
FORD\Europe\Transit Connect\2006\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Ranger\2012\Immobilizer	Program key,All key lost,Key count,
FORD\Europe\Ranger\2012\Manual PIN	Program key,All key lost,Key count,
FORD\Europe\Explorer\1997-2001\Immobilizer\Type	Program key,All key lost,Key count,

FORD\Europe\Courier\2008-2013\Smart key	Lost all smart key,Add smart key,
FORD\Europe\Courier\2013-\Smart key	Lost all smart key,Add smart key,
FORD\Europe\Fiesta\2008-2013\Smart key	Lost all smart key,Add smart key,
FORD\Europe\Fiesta\2013-\Smart key	Lost all smart key,Add smart key,
FORD\Europe\Galaxy\2007-2010\Smart key	Lost all smart key,Add smart key,
FORD\Europe\Galaxy\2010-2015\Smart key	Lost all smart key,Add smart key,
FORD\Europe\Mondeo\2007-2010\Smart key	Lost all smart key,Add smart key,
FORD\Europe\Mondeo\2010-2014\Smart key	Lost all smart key,Add smart key,
FORD\Europe\S-Max\2007-2010\Smart key	Lost all smart key,Add smart key,
FORD\Europe\S-Max\2010-2015\Smart key	Lost all smart key,Add smart key,
FORD\Europe\Courier\2013-\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\Ecosport\2013\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\Edge\2011-2013\Immobilizer	Delete key,Add key,Read key count,
FORD\Europe\Explorer\2011-2015\Immobilizer	Delete key,Add key,Read key count,
FORD\Europe\Courier\2008-2013\Immobilizer	Add key,Delete key,
FORD\Europe\Fiesta\2008-2013\Immobilizer	Add key,Delete key,
FORD\Europe\Transit\2007-2013\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\S-Max\2010-	Add key,Delete key,Key count,
FORD\Europe\Mondeo\2010-2014\Immobilizer	Add key,Delete key,Key count,
FORD\Europe\Galaxy\2010-2015\Immobilizer	Add key,Delete key,Key count,

FORD\Europe\Transit Connect\2013-\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\Kuga\2013-2015\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\Focus\2011-2014\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\C-Max\2010-	Add key,Delete key,All key lost,
FORD\Europe\Edge\2013-\Smart key	Read key count,Add key,All key lost,Alarm
FORD\Europe\S-Max\2007-	Add key,Delete key,All key lost,
FORD\Europe\Mondeo\2007-2010\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\Galaxy\2007-2010\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\Transit\1998-2000\Immobilizer\EPIC -	Key count,Add key,Delete key,
FORD\Europe\Scorpio\1997\Immobilizer\Petrol -	Key count,Add key,Delete key,
FORD\Europe\Puma\1996-2001\Immobilizer\Petrol -	Key count,Add key,Delete key,
FORD\Europe\Mondeo\1997-1998\Immobilizer\Petrol -	Key count,Add key,Delete key,
FORD\Europe\KA\1997-1998\Immobilizer\PATS 3	Key count,Add key,Delete key,
FORD\Europe\Granada\1997-\Immobilizer\Petrol -	Key count,Add key,Delete key,
FORD\Europe\Galaxy\2000-2006\Immobilizer\Petrol -	Key count,Add key,Delete key,
FORD\Europe\Fiesta\1997-1998\Immobilizer\Petrol(PA	Key count,Add key,Delete key,
FORD\Europe\Courier\1997-	Key count,Add key,Delete key,
FORD\Europe\Transit\1997-	Add key,Delete key,Key count,
FORD\Europe\Scorpio\1997\Immobilizer\Diesel(PATS	Add key,Delete key,Key count,
FORD\Europe\Mondeo\1997-	Add key,Delete key,Key count,

FORD\Europe\Granada\1997-	Add key,Delete key,Key count,
FORD\Europe\Fiesta\1997-1998\Immobilizer\Diesel(P	Add key,Delete key,Key count,
FORD\Europe\Fiesta\1996-1997\Immobilizer\Diesel(P	Add key,Delete key,Key count,
FORD\Europe\Courier\1997-	Add key,Delete key,Key count,
FORD\Europe\Courier\1996-	Add key,Delete key,Key count,
FORD\Europe\Kuga\2013-2015\Smart key\Immo chip	Add key,Delete key,All key lost,
FORD\Europe\Focus\2011-2014\Smart key\Immo chip	Add key,Delete key,All key lost,
FORD\Europe\C-Max\2010-2015\Smart	Add key,Delete key,All key lost,
FORD\Europe\Galaxy\2000-2006\Immobilizer\Diesel	Add key,Delete key,Key count,
FORD\Europe\Galaxy\2000-2006\Immobilizer\Petrol -	Add key,Delete key,Key count,
FORD\Australia\C-Max\Immobilizer\Type 1	Program key,All key lost,Key count,
FORD\Australia\C-Max\Immobilizer\Type 2	Program key,All key lost,Key count,
FORD\Australia\Cougar\Immobilizer	Program key,All key lost,Key count,
FORD\Australia\Courier\Petrol\1997-1998	Key count,Add key,Delete key,
FORD\Australia\Courier\Petrol\1998-2000	Program key,All key lost,Key count,
FORD\Australia\Courier\Petrol\2001-2008\Type 1	Program key,All key lost,Key count,
FORD\Australia\Courier\Petrol\2001-2008\Type 2	Program key,All key lost,Key count,
FORD\Australia\Courier\Petrol\2008-\Immobilizer	Add key,Delete key,
FORD\Australia\Courier\Petrol\2008-\Smart key	Lost all smart key,Add smart key,
FORD\Australia\Courier\Diesel\2008-\Smart key	Lost all smart key,Add smart key,

FORD\Australia\Courier\Di esel\2008-Immobilizer	Add key,Delete key,
FORD\Australia\Courier\Di esel\2001-	Program key,All key lost,Key count,
FORD\Australia\Courier\Di esel\1999-2001	Program key,All key lost,Key count,
FORD\Australia\Courier\Di esel\1997-	Add key,Delete key,Key count,
FORD\Australia\Escape ZD	Program key,All key lost,Key count,
FORD\Australia\Escape	Program key,All key lost,Key count,
FORD\Australia\Explorer\1 997-\Type 3	Program key,All key lost,Key count,
FORD\Australia\Explorer\1 997-\Type 2	Delete key,Add key,Key count,
FORD\Australia\Explorer\1 997-\Type 1	Delete key,Add key,Key count,
FORD\Australia\Fiesta\Die sel\2008-2012\Smart key	Lost all smart key,Add smart key,
FORD\Australia\Fiesta\Die sel\2008-2012\Immobilizer	Add key,Delete key,
FORD\Australia\Fiesta\Die sel\2001-2008\Immobilizer	Program key,All key lost,Key count,
FORD\Australia\Fiesta\Die sel\1999-2001	Program key,All key lost,Key count,
FORD\Australia\Fiesta\Die sel\1997-	Add key,Delete key,Key count,
FORD\Australia\Fiesta\Petr ol\2008-2012\Smart key	Lost all smart key,Add smart key,
FORD\Australia\Fiesta\Petr ol\2008-2012\Immobilizer	Add key,Delete key,
FORD\Australia\Fiesta\Petr ol\2001-2008\Type 2	Program key,All key lost,Key count,
FORD\Australia\Fiesta\Petr ol\2001-2008\Type 1	Program key,All key lost,Key count,
FORD\Australia\Fiesta\Petr ol\1998-2000	Program key,All key lost,Key count,
FORD\Australia\Fiesta\Petr ol\1997-1998	Key count,Add key,Delete key,

FORD\Australia\Focus\Diesel\2011-\Immobilizer	Add key,Delete key,All key lost,
FORD\Australia\Focus\Diesel\2005-2011\Smart key	Add smart key,Delete smart key,Read smart key
FORD\Australia\Focus\Diesel\2005-2011\Immobilizer	Delete key,Add key,Read key count,
FORD\Australia\Focus\Diesel\1998-2004	Program key,All key lost,Key count,
FORD\Australia\Focus\Diesel\1995-1998	Program key,All key lost,Key count,
FORD\Australia\Focus\Petrol\2011-\Immobilizer	Add key,Delete key,All key lost,
FORD\Australia\Focus\Petrol\2005-2011\Smart key	Add smart key,Delete smart key,Read smart key
FORD\Australia\Focus\Petrol\2005-2011\Immobilizer	Delete key,Add key,Read key count,
FORD\Australia\Focus\Petrol\1998-2004	Program key,All key lost,Key count,
FORD\Australia\Fusion	Program key,All key lost,Key count,
FORD\Australia\Galaxy\Diesel\2000-\Type 1\PATS	Add key,Delete key,Key count,
FORD\Australia\Galaxy\Petrol\2000-\V6	Add key,Delete key,Key count,
FORD\Australia\Galaxy\Petrol\2000-\NOT V6\Type	Delete key,Add key,Key count,
FORD\Australia\Galaxy\Petrol\1997-2000\NOT	Delete key,Key count,
FORD\Australia\Galaxy\Petrol\1997\NOT V6\PATS 2	Delete key,Add key,Key count,
FORD\Australia\Granada Scorpio\Diesel\1997-\PATS	Add key,Delete key,Key count,
FORD\Australia\Granada Scorpio\Petrol\Automatic\1	Delete key,Add key,Key count,
FORD\Australia\Granada Scorpio\Petrol\Manual\199	Key count,Add key,Delete key,
FORD\Australia\KA\Petrol\2002-2008	Program key,All key lost,Key count,
FORD\Australia\KA\Petrol\1998-2000	Program key,All key lost,Key count,

FORD\Australia\KA\Petrol\1997-1998	Key count,Add key,Delete key,
FORD\Australia\Maverick\2001-	Program key,All key lost,Key count,
FORD\Australia\Mondeo\Diesel\2007-\Smart key	Lost all smart key,Add smart key,
FORD\Australia\Mondeo\Diesel\2007-\Immobilizer	Add key,Delete key,All key lost,
FORD\Australia\Mondeo\Diesel\1998-\Type 1\PATS	Program key,All key lost,Key count,
FORD\Australia\Mondeo\Diesel\1997-1998\Type	Add key,Delete key,Key count,
FORD\Australia\Mondeo\Petrol\Automatic\2007-	Lost all smart key,Add smart key,
FORD\Australia\Mondeo\Petrol\Automatic\2007-	Add key,Delete key,All key lost,
FORD\Australia\Mondeo\Petrol\Automatic\1997-	Program key,All key lost,Key count,
FORD\Australia\Mondeo\Petrol\Manual\2007-\Smart	Lost all smart key,Add smart key,
FORD\Australia\Mondeo\Petrol\Manual\2007-	Add key,Delete key,All key lost,
FORD\Australia\Mondeo\Petrol\Manual\1998-\PATS	Program key,All key lost,Key count,
FORD\Australia\Mondeo\Petrol\Manual\1997-	Key count,Add key,Delete key,
FORD\Australia\Puma\Petrol\14 Zetec\1997-\PATS 3	Key count,Add key,Delete key,
FORD\Australia\Puma\Petrol\14 Zetec\1996-	Program key,All key lost,Key count,
FORD\Australia\Ranger\2012-	Add key,Delete key,All key lost,Read key
FORD\Australia\Ranger\2012	Program key,All key lost,Key count,
FORD\Australia\Transit Connect\2007-\Type 2	Add key,Delete key,All key lost,
FORD\Australia\Transit Connect\2007-\Type 1	Program key,All key lost,Key count,
FORD\Australia\Transit Connect\2007	Program key,All key lost,Key count,

FORD\Australia\Transit\Epic\1998-\Type 2	Program key,All key lost,Key count,
FORD\Australia\Transit\Epic\1998-\Type 1	Key count,Add key,Delete key,
FORD\Australia\Transit\Dura Torque\Type 2	Program key,All key lost,Key count,
FORD\Australia\Transit\Dura Torque\Type 1	Delete key,Add key,Key count,
FORD\Australia\Transit\Diesel\2007-	Add key,Delete key,All key lost,
FORD\Australia\Transit\Diesel\1998-	Program key,All key lost,Key count,
FORD\Australia\Transit\Diesel\1997-1998	Add key,Delete key,Key count,
FORD\Australia\Transit\Petrol\2007-	Add key,Delete key,All key lost,
FORD\Australia\Transit\Petrol\2000-	Program key,All key lost,Key count,
FORD\Australia\Transit\Petrol\1997-2000	Delete key,Add key,Key count,
FORD\Australia\Windstar\1998-	All key lost,Add key,Key count,
FORD\Australia\Windstar\1997-1998	Delete key,Add key,Key count,
FORD\Africa\Mondeo\1997-1998	Program key,All key lost,Key count,
FORD\Africa\Icon\2002-2008	Program key,All key lost,Key count,
FORD\Africa\Figo\2007-	Program key,All key lost,Key count,
FORD\Africa\Fiesta\2012-2014	Add key,Delete key,All key lost,
FORD\Africa\Fiesta\2002-2008	Program key,All key lost,Key count,
FORD\Africa\Bantam\2007-	Program key,All key lost,Key count,
FORD\South America\F250\Diesel(Cum	Key count,Delete key,
FORD\India\Ecosport\2012-\Immobilizer	Add key,Delete key,All key lost,

FORD\India\Fiesta\2008-\Smart key	Lost all smart key,Add smart key,
FORD\India\Fiesta\2008-\Immobilizer	Add key,Delete key,
FORD\India\Fiesta\2004-	Program key,All key lost,Key count,
FORD\India\Figo\2008-\Smart key	Lost all smart key,Add smart key,
FORD\India\Figo\2008-\Immobilizer	Add key,Delete key,
FORD\India\Figo\2004-	Program key,All key lost,Key count,
FORD\India\Fusion\1318	Program key,All key lost,Key count,
FORD\India\Mondeo\Diese \2007-\Smart key	Lost all smart key,Add smart key,
FORD\India\Mondeo\Diese \2007-\Immobilizer	Add key,Delete key,All key lost,
FORD\India\Mondeo\Diese \1998-2007	Program key,All key lost,Key count,
FORD\India\Mondeo\Diese \1997-1998	Add key,Delete key,Key count,
FORD\India\Mondeo\Petrol \Automatic\2007-	Add key,Delete key,All key lost,
FORD\India\Mondeo\Petrol \Automatic\1997-2006	Program key,All key lost,Key count,
FORD\India\Mondeo\Petrol \Manual\2007-\Smart key	Lost all smart key,Add smart key,
FORD\India\Mondeo\Petrol \Manual\2007-\Immobilizer	Add key,Delete key,All key lost,
FORD\India\Mondeo\Petrol \Manual\1998-2006	Program key,All key lost,Key count,
FORD\India\Mondeo\Petrol \Manual\1997-1998	Key count,Add key,Delete key,
FORD\South America\Ecosport\2011-	Lost all smart key,Add smart key,
FORD\South America\Ecosport\2011-	Add key,Delete key,All key lost,
FORD\South America\Ecosport\2010-	Program key,All key lost,Key count,

FORD\South America\Ecosport\2009-	Program key,All key lost,Key count,
FORD\South America\Ecosport\2003-	Program key,All key lost,Key count,
FORD\South America\Edge\2007-	Program key,All key lost,Key count,
FORD\South America\F250\Petrol	Program key,All key lost,Key count,
FORD\South America\Ranger\2012-	Add key,Delete key,All key lost,Read key
FORD\South America\Fusion\2010-	Program key,All key lost,Key count,
FORD\South America\Focus\2005-	Program key,All key lost,Key count,
FORD\Israel\Edge\2011-\Smart key	Delete key,Add key,Read smart key count,
FORD\Israel\Edge\2011-\Immobilizer	Delete key,Add key,Read key count,
FORD\Israel\Explorer\2011-\Smart key	Delete key,Add key,Read smart key count,
FORD\Israel\Explorer\2011-\Immobilizer	Delete key,Add key,Read key count,
FORD\Israel\Focus\2011-2014\Immobilizer	Add key,Delete key,All key lost,
FORD\China\HEC\Immobilizer	All key lost,Key count,Reset system,
FORD\China\PCM\Immobilizer	All key lost,Read key count,
FORD\USA\HEC\Immobilizer	All key lost,Key count,Reset system,
FORD\USA\PCM\Immobilizer	All key lost,Read key count,
FORD\China\Raptor F150\2017-\Smart key	Add smart key,All smart key lost,Alarm unlock,
FORD\India\Aspire\2017\Immobilizer	Add key,All key lost,Read key count,
FORD\India\Endeavour\2014-2017\Immobilizer	Add key,All key lost,Read key count,
FORD\India\Ecosport\2012-\Smart key	All smart key lost,Add smart key,

FORD\USA\F-150\2004-2008\Immobilizer\Type 2	Program key,All key lost,Key count,
FORD\USA\F-250\2011-2016\Immobilizer\Type 2	Add key,Delete key,Read key count,Alarm unlock,
FORD\USA\Focus\Immobilizer\2000-2004\Type 2	Program key,All key lost,Key count,
FORD\USA\Taurus X\2008-2009\Immobilizer	Program key,All key lost,Key count,
FORD\USA\Transit Connect\2010-	Program key,All key lost,Key count,
FORD\USA\Fiesta-2014\Smart key	Lost all smart key,Add smart key,
FORD\USA\F-550 SD\2008-2010\Immobilizer	Add key,Delete key,All key lost,
FORD\Europe\B-Max\2012-\Smart key	All smart key lost,Add smart key,
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\North	Program key,
NISSAN\Select from vehicle\North	Program smart key,
NISSAN\Select from vehicle\North	Program smart key,
NISSAN\Select from vehicle\North	Program smart key,
NISSAN\Select from vehicle\North	Program smart key,
NISSAN\Select from vehicle\North	Program key,
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete

NISSAN\Select from type\Smart key\New 20-	Program smart key,
NISSAN\Select from vehicle\Asia\Teana\2019-	Program smart key,
NISSAN\Select from type\Immobilizer\Electronic	Add key,Activate steering wheel lock,Add key(fixed
NISSAN\Select from type\Immobilizer\Electronic	Program key,
NISSAN\Select from type\Immobilizer\Electronic	Add key,Add key(fixed code),
NISSAN\Select from type\Immobilizer\Auto	Add key,
NISSAN\Select from type\Remote\Type 1	Add remote,Delete remote,
NISSAN\Select from type\Smart key\4-digit PIN	Program smart key,Delete smart key,Program
NISSAN\Select from type\Smart key\New 20-	Program smart key,
NISSAN\Select from type\Smart key\New 20-	Program smart key,
NISSAN\Select from type\Smart key\New 20-	Program smart key,
NISSAN\Select from type\Smart key\New 20-	Program smart key,
NISSAN\Select from type\Smart key\New 20-	Program smart key,
NISSAN\Select from type\Smart key\New 20-	Program smart key,
NISSAN\Select from type\Smart key\New 20-	Program smart key,
NISSAN\Select from type\Smart key\New 20-	Program smart key,
NISSAN\Select from type\Smart key\New 20-	Program smart key,
NISSAN\Select from type\Smart key\4-digit PIN	Program smart key,Delete smart key,
NISSAN\Select from type\Smart key\4-digit PIN	Program smart key,
NISSAN\Select from type\Smart key\4-digit PIN	Program smart key,Clear fault code,
NISSAN\Select from type\Smart key\4-digit PIN	Program smart key,

NISSAN>Select from type\Immobilizer\New 20-	Add key,
NISSAN>Select from type\Immobilizer\Activate	Activate steering wheel lock,
NISSAN>Select from type\Smart key\4-digit PIN	Activate steering wheel lock,
NISSAN>Select from type\Smart key\12-digit	Program smart key,Key count,Type 3,Type 4,
NISSAN>Select from type\Immobilizer\12-digit	Program smart key,Key count,Type 3,Type 4,
NISSAN>Select from type\Immobilizer\12-digit	Program key,Key count,
NISSAN\Read BCM code and release directional	Release steering lock,Read BCM inner code,
NISSAN>Select from type\Smart key\4-digit PIN	Read BCM inner code,Release steering
NISSAN>Select from vehicle\Asia\Sunny\Smart	Read BCM inner code,Release steering
NISSAN>Select from vehicle\Asia\350Z\2003-	Add key,Add key(fixed code),
NISSAN>Select from vehicle\Asia\New X-	Program smart key,
NISSAN>Select from vehicle\North	Program key,Clear fault code,Read BCM inner
NISSAN>Select from vehicle\Asia\Almera\N16\Di	Program key,Clear fault code,
NISSAN>Select from vehicle\Asia\350Z\Z33	Program key,Clear fault code,Read BCM inner
NISSAN>Select from vehicle\Asia\Almera\N16\P	Program key,Clear fault code,Read BCM inner
NISSAN>Select from vehicle\Asia\Almera	Program key,Clear fault code,Read BCM inner
NISSAN>Select from vehicle\Asia\Cabstar\Petrol	Program key,Clear fault code,Read BCM inner
NISSAN>Select from vehicle\Asia\Fairlady	Program key,Clear fault code,Read BCM inner
NISSAN>Select from vehicle\Asia\Maxima\A34	Program key,Clear fault code,Read BCM inner
NISSAN>Select from vehicle\Asia\Micra\K11\200	Program key,Clear fault code,Read BCM inner

NISSAN\Select from vehicle\South	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\South	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\South	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\South America\X-	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Asia\Almera	Program key,Clear fault code,
NISSAN\Select from vehicle\Asia\Cabstar\Diesel	Program key,Clear fault code,
NISSAN\Select from vehicle\Asia\Navara\D40(S	Program key,Clear fault code,
NISSAN\Select from vehicle\Asia\Primera\P12\D	Program key,Clear fault code,
NISSAN\Select from vehicle\Asia\Tiida\Diesel\2	Program key,Clear fault code,
NISSAN\Select from vehicle\Asia\X-	Program key,Clear fault code,
NISSAN\Select from vehicle\South	Program key,Clear fault code,
NISSAN\Select from vehicle\South	Program key,Clear fault code,
NISSAN\Select from vehicle\South	Program key,Clear fault code,
NISSAN\Select from vehicle\South	Program key,Clear fault code,
NISSAN\Select from vehicle\South	Program key,Clear fault code,
NISSAN\Select from vehicle\South	Program key,Clear fault code,
NISSAN\Select from vehicle\South America\X-	Program key,Clear fault code,
NISSAN\Select from vehicle\Asia\Micra\K13\Bar	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Asia\Pathfinder\R5	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Asia\Fairlady	Read BCM inner code,Program key>Delete

NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Asia\Navara\D40(S	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Asia\Qashqai\J10\P	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Asia\Qashqai\J10\	Read BCM inner code,Program key,Delete

NISSAN\Select from vehicle\Asia\Navara\D40(S	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Asia\Navara\D40(C	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Asia\Latio\2003-	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Asia\Pathfinder\R5	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Asia\X-	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Asia\Qashqai\J10\P	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Asia\Qashqai\J10\	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Asia\Teana\2010-	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete

NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\South	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Asia\370Z\Z34\Pro	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Asia\Sylphy\G11\20	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Asia\X-	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Asia\Note\E11\Prox	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Asia\Leaf	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\South America\Leaf	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Asia\Serana\C26\P	Read BCM inner code,Program smart key,

NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Asia\Cube\Proximit	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Asia\Juke\Proximity	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Asia\Micra\K13\Pro	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\South	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\South	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\North	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Asia\InterStar\X70	Program key,Clear fault code,
NISSAN\Select from vehicle\Asia\Terrano	Program key,Clear fault code,
NISSAN\Select from vehicle\Asia\Micra\K12\Bar	Program key,Clear fault code,
NISSAN\Select from vehicle\Asia>Note\E11\Bar	Program key,Clear fault code,
NISSAN\Select from vehicle\Asia\NV200\Bar	Program key,Clear fault code,
NISSAN\Select from vehicle\Asia\Tiida\Petrol	Program key,Clear fault code,
NISSAN\Select from vehicle\South	Program key,Clear fault code,
NISSAN\Select from vehicle\South	Program key,Clear fault code,
NISSAN\Select from vehicle\South	Program key,Clear fault code,
NISSAN\Select from vehicle\South	Program key,Clear fault code,

NISSAN>Select from vehicle\Asia\Micra\K12\Sm	Read key count,Program smart key,Add
NISSAN>Select from vehicle\Asia\Note\E11\Sma	Read key count,Program smart key,Add
NISSAN>Select from vehicle\South	Read key count,Program smart key,Add
NISSAN>Select from vehicle\South	Read key count,Program smart key,Add
NISSAN>Select from vehicle\Asia\Qashqai\J11\B	Program key,
NISSAN>Select from vehicle\South	Program key,
NISSAN>Select from vehicle\Asia\Qashqai\J11\P	Program smart key,
NISSAN>Select from vehicle\Asia\Teana\2013-	Program smart key,
NISSAN>Select from vehicle\North	Program smart key,
NISSAN>Select from vehicle\North	Program smart key,
NISSAN\PIN calculator	Type 1,Type 2,Type 3 (20-bit rolling code/PIN),Type
NISSAN>Select from vehicle\North	Read BCM inner code,Program key,
NISSAN>Select from vehicle\Africa\350Z\Z33	Program key,Clear fault code,Read BCM inner
NISSAN>Select from vehicle\Africa\Almera\N16\	Program key,Clear fault code,Read BCM inner
NISSAN>Select from vehicle\Africa\Almera\N16\	Program key,Clear fault code,
NISSAN>Select from vehicle\Africa\Almera	Program key,Clear fault code,Read BCM inner
NISSAN>Select from vehicle\Africa\Almera	Program key,Clear fault code,
NISSAN>Select from vehicle\Africa\Bluebird\Sylp	Read BCM inner code,Program key>Delete
NISSAN>Select from vehicle\Africa\Cabstar\Petr	Program key,Clear fault code,Read BCM inner
NISSAN>Select from vehicle\Africa\Cabstar\Dies	Program key,Clear fault code,

NISSAN

NISSAN\Select from vehicle\Africa\Cube\Bar	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\Cube\Proxim	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Africa\InterStar\X70	Program key,Clear fault code,
NISSAN\Select from vehicle\Africa\Juke\Bar	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\Juke\2011-	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Africa\Leaf	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Africa\Livina\2006-	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\Maxima\A34	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Africa\March\K12\B	Program key,Clear fault code,
NISSAN\Select from vehicle\Africa\Micra\K11\20	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Africa\Micra\K12\B	Program key,Clear fault code,
NISSAN\Select from vehicle\Africa\Micra\K12\S	Read key count,Program smart key,Add
NISSAN\Select from vehicle\Africa\Micra\K13\B	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\Micra\K13\Pr	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Africa\Navara\D40(Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\Navara\D40(Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\Navara\D40(Program key,Clear fault code,
NISSAN\Select from vehicle\Africa\Navara\D40(Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\Navara\D40(Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\NV200\Bar	Program key,Clear fault code,

NISSAN\Select from vehicle\Africa\Note\E11\Ba	Program key,Clear fault code,
NISSAN\Select from vehicle\Africa\Note\E11\Sm	Read key count,Program smart key,Add
NISSAN\Select from vehicle\Africa\NP30\Diesel	Program key,Clear fault code,
NISSAN\Select from vehicle\Africa\Pathfinder\R	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\Pathfinder\R	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\Petrol\Y61\P	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Africa\Primera\P12\	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Africa\Primera\P12\	Program key,Clear fault code,
NISSAN\Select from vehicle\Africa\Pulsar\N16	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Africa\Qashqai\J10\	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\Qashqai\J10\	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\Qashqai\J10\	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\Qashqai\J10\	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\Qashqai\J11\	Program key,
NISSAN\Select from vehicle\Africa\Qashqai\J11\	Program smart key,
NISSAN\Select from vehicle\Africa\Rogue\2008-	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Africa\Skyline\V35	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Africa\Terrano	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Africa\Tiida\Petrol	Program key,Clear fault code,
NISSAN\Select from vehicle\Africa\Tiida\Diesel\	Program key,Clear fault code,

NISSAN\Select from vehicle\Africa\X-Trail\Petrol	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Africa\X-	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia\350Z\Z33	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Australia\370Z\200	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Australia\Almera\N	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Australia\Almera\N	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia\Almera	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Australia\Almera	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia\Cabstar\P	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Australia\Cabstar\D	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia\Cube\Bar	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Australia\Cube\Pro	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Australia\Dualis\20	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Australia\Dualis\20	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Australia\Dualis\20	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Australia\InterStar\	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia\Juke\Bar	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Australia\Juke\2011	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Australia\Leaf	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Australia\Maxima\A	Program key,Clear fault code,Read BCM inner

NISSAN\Select from vehicle\Australia\March\K1	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia\Micra\K11	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Australia\Micra\K12	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia\Micra\K12	Read key count,Program smart key,Add
NISSAN\Select from vehicle\Australia\Micra\K13	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Australia\Micra\K13	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Australia\Murano\2	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Australia\Navara\D	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Australia\Navara\D	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Australia\Navara\D	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia\Navara\D	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Australia\Navara\D	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Australia\NV200\Ba	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia>Note\E11\	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia\NP30\Die	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia\Pathfinder	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Australia\Pathfinder	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Australia\Petrol\Y6	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Australia\Petrol\Y6	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Australia\Petrol\Y6	Read BCM inner code,Program key,Delete

NISSAN\Select from vehicle\Australia\Primera\P	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Australia\Primera\P	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia\Pulsar\N1	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Australia\Pulsar\B1	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Australia\Pulsar\C1	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Australia\Qashqai\J	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Australia\Qashqai\J	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Australia\Qashqai\J	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Australia\Qashqai\J	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Australia\Qashqai\J	Program key,
NISSAN\Select from vehicle\Australia\Qashqai\J	Program smart key,
NISSAN\Select from vehicle\Australia\Skyline\V	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Australia\Terrano	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Australia\Tiida\-	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia\Tiida\2000	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia\Tiida\2006	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Australia\X-	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Australia\X-	Program key,Clear fault code,
NISSAN\Select from vehicle\Australia\X-	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Australia\X-	Read BCM inner code,Program key>Delete

NISSAN\Select from vehicle\Australia\X-	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Australia\Tiida\2006	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\350Z\Z33	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Europe\370Z\Z34\S	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Europe\Almera\N16	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Europe\Almera\N16	Program key,Clear fault code,
NISSAN\Select from vehicle\Europe\Almera	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Europe\Almera	Program key,Clear fault code,
NISSAN\Select from vehicle\Europe\Armada\20	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\Cabstar\Pet	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Europe\Cabstar\Die	Program key,Clear fault code,
NISSAN\Select from vehicle\Europe\Cube\Bar	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\Cube\Proxi	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Europe\Juke\Bar	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\Juke\Proxi	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Europe\March\K13\	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Europe\Leaf	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Europe\Maxima\A3	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Europe\Micra\K11\	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Europe\Micra\K12\	Program key,Clear fault code,

NISSAN\Select from vehicle\Europe\Micra\K12\	Read key count,Program smart key,Add
NISSAN\Select from vehicle\Europe\Micra\K13\	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\Micra\K13\	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Europe\Navara\D4	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\Navara\D4	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\Navara\D4	Program key,Clear fault code,
NISSAN\Select from vehicle\Europe\Navara\D4	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\Navara\D4	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\NV200\Bar	Program key,Clear fault code,
NISSAN\Select from vehicle\Europe\Note\E11\B	Program key,Clear fault code,
NISSAN\Select from vehicle\Europe\Note\E11\S	Read key count,Program smart key,Add
NISSAN\Select from vehicle\Europe\Note\E2\Ba	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\Pathfinder\	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\Pathfinder\	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\Petrol\Y61\	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Europe\Primera\P1	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Europe\Primera\P1	Program key,Clear fault code,
NISSAN\Select from vehicle\Europe\Pulsar\N16	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Europe\Qashqai\J1	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\Qashqai\J1	Read BCM inner code,Program key,Delete

NISSAN\Select from vehicle\Europe\Qashqai\J1	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\Qashqai\J1	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\Qashqai\J1	Program key,
NISSAN\Select from vehicle\Europe\Qashqai\J1	Program smart key,
NISSAN\Select from vehicle\Europe\Quest\V28	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\Sentra\B16	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Europe\Skyline\V35	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Europe\Skyline\IPM	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Europe\Terrano	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Europe\Tiida\Petrol	Program key,Clear fault code,
NISSAN\Select from vehicle\Europe\Tiida\Diesel	Program key,Clear fault code,
NISSAN\Select from vehicle\Europe\Xterra\WD2	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Europe\Xterra\N50	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\X-	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Europe\X-	Program key,Clear fault code,
NISSAN\Select from vehicle\Europe\X-	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\X-	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Europe\X-	Program key,
NISSAN\Select from vehicle\Europe\X-	Program smart key,
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner

NISSAN\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,
NISSAN\Select from vehicle\Middle East\Almera	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Middle East\Almera	Program key,Clear fault code,
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Middle East\Leaf	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,
NISSAN\Select from vehicle\Middle	Read key count,Program smart key,Add
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program smart key,
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program key>Delete
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,

NISSAN\Select from vehicle\Middle	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,
NISSAN\Select from vehicle\Middle	Read key count,Program smart key,Add
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Middle	Read BCM inner code,Program key,Delete
NISSAN\Select from vehicle\Middle	Program key,
NISSAN\Select from vehicle\Middle	Program smart key,
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,Read BCM inner
NISSAN\Select from vehicle\Middle	Program key,Clear fault code,

MITSUBISHI\Select from vehicle\China\Eclipse	Program smart key,All smart key lost,
MITSUBISHI\Select from vehicle\Europe\Outlander\2	Program remote,
MITSUBISHI\Select from vehicle\Europe\Outlander\2	Add key,
MITSUBISHI\Select from type\Immobilizer\Type 1	All key lost,Register key ID,
MITSUBISHI\Select from type\Remote\Type 1	Program remote,
MITSUBISHI\Select from type\Smart key\Type 1	Program smart key,
MITSUBISHI\Select from type\Immobilizer\Type 2	Program key,
MITSUBISHI\Select from type\Remote\Type 2	Program remote,
MITSUBISHI\Select from type\Smart key\Type 2	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI\Select from type\Immobilizer\Type 3	Program key,
MITSUBISHI\Select from type\Remote\Type 3	Program remote,
MITSUBISHI\Select from type\Remote\Type 4	Program remote,
MITSUBISHI\Select from type\Immobilizer\Type 4	Program key,
MITSUBISHI\Select from vehicle\China\Lancer-	Program smart key,
MITSUBISHI\Select from vehicle\China\Lancer-	All key lost,Register key ID,
MITSUBISHI\Select from vehicle\China\Lancer-	Program remote,
MITSUBISHI\Select from vehicle\China\Outlander\-	Program smart key,
MITSUBISHI\Select from vehicle\China\ASX\Immobil	Program key,
MITSUBISHI\Select from vehicle\China\ASX\Remote	Program remote,
MITSUBISHI\Select from vehicle\China\Triton\-	Program key,

MITSUBISHI\Select from vehicle\China\Triton\-	Program key,
MITSUBISHI\Select from vehicle\China\Triton\-	Program remote,
MITSUBISHI\Select from vehicle\China\Triton\-	Program remote,
MITSUBISHI\Select from vehicle\China\Triton\2011-	Program key,
MITSUBISHI\Select from vehicle\China\Triton\2011-	Program key,
MITSUBISHI\Select from vehicle\China\Triton\2011-	Program remote,
MITSUBISHI\Select from vehicle\China\Triton\2011-	Program remote,
MITSUBISHI\Select from vehicle\China\Pajero	Program key,
MITSUBISHI\Select from vehicle\China\Pajero	Program remote,
MITSUBISHI\Select from type\Immobilizer\Type 5	Add key,
MITSUBISHI\Select from vehicle\China\V73\Immobilizer	Add key,
MITSUBISHI\Select from vehicle\China\V97\Immobilizer	Add key,
MITSUBISHI\Select from vehicle\China\Galant\Immo	Add key,
MITSUBISHI\Select from vehicle\China\Grandis\Immo	Add key,
MITSUBISHI\Select from vehicle\China\Pajero	Add key,
MITSUBISHI\Select from vehicle\China\Pajero	Program key,
MITSUBISHI\Select from vehicle\China\Pajero	Program remote,
MITSUBISHI\Select from vehicle\China\Pajero	Add key,
MITSUBISHI\Select from vehicle\China\Outlander\20	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI\Select from type\Immobilizer\Type 6	Program key,

MITSUBISHI>Select from type\Immobilizer\Type 7	All key lost,
MITSUBISHI>Select from type\Immobilizer\Type 8	Add key,
MITSUBISHI>Select from type\Immobilizer\Type 9	All key lost,Key count,
MITSUBISHI>Select from type\Immobilizer\Type 10	All key lost,Key count,
MITSUBISHI>Select from type\Smart key\Type 3	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI>Select from type\Smart key\Type 4	All key lost,Add smart key,Key count,Read PIN
MITSUBISHI>Select from type\Remote\Type 5	Program remote,
MITSUBISHI>Select from type\Remote\Type 6	Program remote,
MITSUBISHI>Select from type\Remote\Type 7	Program remote,
MITSUBISHI>Select from type\Remote\Type 8	Program remote,
MITSUBISHI>Select from type\Immobilizer\Type 11	Program key,
MITSUBISHI>Select from vehicle\China\Mirage\With	All key lost,Add smart key,Key count,Read PIN
MITSUBISHI>Select from vehicle\China\Mirage\Witho	Add key,Program remote,
MITSUBISHI>Select from type\Immobilizer\Type 12	Program key,
MITSUBISHI>Select from type\Immobilizer\Type 13	Program key,
MITSUBISHI>Select from vehicle\China\Lancer\Immo	Program key,
MITSUBISHI>Select from vehicle\China\Lancer\Rem	Program remote,
MITSUBISHI>Select from vehicle\China\Outlander\-	Program key,
MITSUBISHI>Select from vehicle\China\Outlander\-	Program remote,
MITSUBISHI>Select from vehicle\Australia\3000gt	Add key,Immobiliser ECU reset,

MITSUBISHI\Select from vehicle\Australia\Airtrek	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Australia\ASX\With	Program key,
MITSUBISHI\Select from vehicle\Australia\Colt	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Australia\Challenge	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Australia\Express\1	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Australia\Express	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Australia\EVO\Type	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Australia\EVO\Type	Program key,
MITSUBISHI\Select from vehicle\Australia\Galant	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Australia\Lancer\19	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Australia\Lancer\20	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Australia\Lancer(C	Program key,
MITSUBISHI\Select from vehicle\Australia\Lancer	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Australia\Lancer(sp	Program key,
MITSUBISHI\Select from vehicle\Australia\Lancer	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Australia\Lancer	Program key,
MITSUBISHI\Select from vehicle\Australia\Magna\19	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Australia\Mirage\19	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Australia\Mirage\-	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Australia\Mirage\20	All key lost,Program smart key,Read PIN code,Unlock

MITSUBISHI\Select from vehicle\Australia\Nimbus\1	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Australia\Nimbus\1	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Australia\CJ	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ	Program key,
MITSUBISHI\Select from vehicle\Australia\CJ	Program key,
MITSUBISHI\Select from vehicle\Australia\Outlander	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Australia\Outlander	All key lost,Program remote,
MITSUBISHI\Select from vehicle\Australia\Outlander	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI\Select from vehicle\Australia\Pajero\19	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Australia\Pajero\20	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Australia\Pajero	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Australia\Star	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Australia\Trion	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Australia\Trion	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Australia\Trion	Program key,
MITSUBISHI\Select from vehicle\Australia\Verada\19	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Africa\Lancer\2006-	Program key,
MITSUBISHI\Select from vehicle\Africa\L200	Add key,Reset immobilizer,

MITSUBISHI\Select from vehicle\Africa\Outlander\20	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Africa\Pajero\1999-	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Africa\Shogun\2001	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\America\USA\Diam	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\America\USA\Eclip	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\America\USA\Eclip	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\USA\Ende	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\America\USA\Ende	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\USA\EVO	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\America\USA\Gala	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\America\USA\Gala	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\USA\Gala	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\America\USA\Gala	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\America\USA\Gala	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\America\USA\Gala	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\America\USA\Gala	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\America\USA\Lanc	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\America\USA\Lanc	Program key,
MITSUBISHI\Select from vehicle\America\USA\Mirag	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI\Select from vehicle\America\USA\Mont	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\America\USA\Mont	Add key,Reset immobilizer,

MITSUBISHI\Select from vehicle\America\USA\Mont	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\America\USA\Outla	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\America\USA\Outla	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\America\USA\Outla	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\USA\Outla	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI\Select from vehicle\America\USA\Outla	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI\Select from vehicle\America\USA\Outla	Program key,
MITSUBISHI\Select from vehicle\America\USA\RVR\	Program key,
MITSUBISHI\Select from vehicle\America\USA\RVR\	Program key,
MITSUBISHI\Select from vehicle\America\South	Program key,
MITSUBISHI\Select from vehicle\America\South	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\America\South	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\America\South	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\South	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\America\South	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\South	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\America\South	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\America\South	All key lost,Key count,
MITSUBISHI\Select from vehicle\America\South	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\America\South	Program key,

MITSUBISHI

MITSUBISHI\Select from vehicle\America\South	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\America\South	Program key,
MITSUBISHI\Select from vehicle\America\South	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\America\South	Program key,
MITSUBISHI\Select from vehicle\America\South	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI\Select from vehicle\America\South	Program key,
MITSUBISHI\Select from vehicle\America\South	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\3000gt	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\ASX\Witho	Program key,
MITSUBISHI\Select from vehicle\Europe\Carisma	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\Colt Lander	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\Eclipse	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\EVO\Type	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\EVO\Type	Program key,
MITSUBISHI\Select from vehicle\Europe\Galant	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\Galant\199	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\Grandis	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\I-miev	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\L200	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\L200[CAN]	Program key,

MITSUBISHI\Select from vehicle\Europe\L400	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\Lancer	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\Lancer	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\Lancer	Program key,
MITSUBISHI\Select from vehicle\Europe\Lancer[CA	Program key,
MITSUBISHI\Select from vehicle\Europe\Lancer	Program key,
MITSUBISHI\Select from vehicle\Europe\Mirage\201	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI\Select from vehicle\Europe\Magnum	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\Outlander(Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\Outlander\2	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI\Select from vehicle\Europe\Outlander\-	Program key,
MITSUBISHI\Select from vehicle\Europe\Pajero\199	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\Pajero	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\Shogun	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\Sigma	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Europe\Space	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Japan\Carism	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Colt\19	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Eclipse\	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Galant[Add key,Reset immobilizer,

MITSUBISHI\Select from vehicle\Asia\Japan\Galant[Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer\	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer\	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Lancer	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\L200\1	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Monter	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Monter	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Monter	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Monter	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Nativa\	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero\	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero\	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Pajero	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Shogun	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobilizer,

MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\Space	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Japan\3000	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Asia\Israel\Carisma	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\Eclipse	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\Eclipse	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\Endeav	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\Galant\1	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\Grandis	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\GT3000	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\L200\20	Program key,
MITSUBISHI\Select from vehicle\Asia\Israel\L400	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\Lancer\c	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\Lancer\c	Program key,
MITSUBISHI\Select from vehicle\Asia\Israel\Mirage	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\Magun	Add key,Immobiliser ECU reset,

MITSUBISHI\Select from vehicle\Asia\Israel\Nativa	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\Outland	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\Outland	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI\Select from vehicle\Asia\Israel\Pajero	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\Sigma	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\Spacew	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\Spacew	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI\Select from vehicle\Asia\Israel\Space\S	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Israel\Strada	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Other\Delica\I	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\EVO 8	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Other\EVO 9	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Other\EVO10\I	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\EVO10\	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\Grandis	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Other\Lancer\	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Other\Lancer\	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\L200	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Asia\Other\L200	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\L200	Program key,

MITSUBISHI\Select from vehicle\Asia\Other\L200	All key lost,
MITSUBISHI\Select from vehicle\Asia\Other\Outland	Program key,
MITSUBISHI\Select from vehicle\Asia\Other\Pajero\	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Greece\Carisma\19	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\Colt\1996-	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\Colt	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\Galant\199	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\Lancer\199	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\Lancer	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\L200\1999-	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\Pajero\199	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\Pajero	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\Pajero	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\Pajero	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\Space	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\Space	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\Space	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\Space	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Greece\3000gt\199	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\Middle East\Eclipse	Add key,Immobiliser ECU reset,

MITSUBISHI\Select from vehicle\Middle East\Eclipse	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Middle	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Middle	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Middle	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Middle	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Middle	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Middle	Program key,
MITSUBISHI\Select from vehicle\Middle East\L200\	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Middle East\Magna	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Middle East\Nativa	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Middle	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Middle	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Middle East\Strada	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Middle	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Middle East\Sigma	Add key,Immobiliser ECU reset,
MITSUBISHI\Select from vehicle\Australia\Outlander	Program remote,Add key,
MITSUBISHI\Select from vehicle\Australia\Outlander	Program smart key,
MITSUBISHI\Select from vehicle\Australia\Outlander	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI\Select from vehicle\America\USA\Gala	Add key,Reset immobilizer,
MITSUBISHI\Select from vehicle\America\USA\Gala	All key lost,Key count,

MITSUBISHI\Select from vehicle\China\Attrage\-	All key lost,
MITSUBISHI\Select from vehicle\China\Attrage\-	Program remote,
MITSUBISHI\Select from vehicle\China\Phantom\Wit	All key lost,
MITSUBISHI\Select from vehicle\China\Phantom\Wit	Program remote,
MITSUBISHI\Select from vehicle\China\Phantom\Wit	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI\Select from vehicle\China\Outlander\20	Add key,
MITSUBISHI\Select from vehicle\China\Outlander\20	Program remote,
MITSUBISHI\Register key ID and VIN to engine	Register key ID to engine,Register VIN to
MITSUBISHI\Help (Mitsubishi's PIN)	Help (Mitsubishi's PIN),
MITSUBISHI\Select from vehicle\China\Attrage\-	All key lost,Program smart key,Read PIN code,Unlock
MITSUBISHI\Select from vehicle\China\Attrage\2015	All smart key lost,Program smart key,
MITSUBISHI\Select from vehicle\China\Triton\2017-	Program smart key,Turn ignition on forcibly,Turn
MITSUBISHI\Select from vehicle\Europe\ASX\With	All key lost,Read PIN code,Program smart
MITSUBISHI\Select from vehicle\Australia\ASX\With	All key lost,Read PIN code,Program smart
MITSUBISHI\Select from vehicle\China\ASX\Smart	All key lost,Read PIN code,Program smart
MITSUBISHI\Select from vehicle\Europe\Outlander\2	Program remote,
MITSUBISHI\Select from vehicle\Europe\Outlander\2	Add key,
MITSUBISHI\Select from vehicle\Europe\Outlander\-	Program remote,
MITSUBISHI\Select from vehicle\Europe\Outlander\-	Program smart key,
HONDA\Select from vehicle\Middle	Add one key,All key lost,Reset key,

HONDA\Select from vehicle\USA\Accord\2014-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\USA\Accord\2016\	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\USA\Crv\2015-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\USA\Crv\2015-	Add remote>Delete remote,
HONDA\Select from vehicle\USA\Civic\2014-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\USA\Civic\2014-	Add remote>Delete remote,
HONDA\Select from vehicle\USA\Fit\2014-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\USA\Fit\2014-	Add remote>Delete remote,
HONDA\Select from vehicle\USA\Hrv\2016\Mec	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\USA\Hrv\2016\Rem	Add remote>Delete remote,
HONDA\Select from type\Immobilizer\16-Pin	Add one key,All key lost,Reset key,
HONDA\Select from type\Immobilizer\16-Pin	Add one key,All key lost,Reset key,
HONDA\Select from type\Smart key\Knob type	Add one key,All key lost,Detect smart key,
HONDA\Select from type\Smart key\Button type	Add one key,All key lost,
HONDA\Select from type\Remote\IMMO9	Add remote>Delete remote,
HONDA\Select from type\Immobilizer\16-Pin	Add key,All key lost,Reset immobiliser,
HONDA\Select from type\Immobilizer\16-Pin	Reset immo,Reset ECM,
HONDA\Select from type\Immobilizer\16-Pin	Immo type,
HONDA\Select from type\Smart key\Button type	Add one key,All key lost,
HONDA\Select from type\Smart key\Button type	Add one smart key,All smart key lost,

HONDA>Select from type\Immobilizer\3-Pin	Search IMMO type,
HONDA>Select from type\Immobilizer\3-Pin	Add one key,All key lost,Reset key,
HONDA>Select from type\Immobilizer\3-Pin	Add one key,All key lost,Reset key,
HONDA>Select from type\Immobilizer\3-Pin	Add key,All key lost,Reset immobiliser,
HONDA>Select from type\Immobilizer\3-Pin	Reset immo,Reset ECM,
HONDA>Select from vehicle\Europe\S2000\200	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Europe\S2000\200	Read key count,All key lost,
HONDA>Select from vehicle\Europe\Legend\200	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Europe\Legend\199	Reset immo,Reset ECM,
HONDA>Select from vehicle\Europe\Jazz\2008-	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Europe\Jazz\2008	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Europe\Insight\201	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Europe\Insight\199	Read key count,All key lost,
HONDA>Select from vehicle\Europe\Hrv\2000-	Read key count,All key lost,
HONDA>Select from vehicle\Europe\Hrv\2000	Add key,All key lost,Reset immobiliser,
HONDA>Select from vehicle\Europe\Frv	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Europe\Element\20	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Europe\Crz\2010-	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Europe\Crv\2013-	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Europe\Crv\2007-	Add one key,All key lost,Reset key,

HONDA\Select from vehicle\Europe\Crv\2002-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Europe\Crv\2001	Read key count,All key lost,
HONDA\Select from vehicle\Europe\Crv\-\2001	Add key,All key lost,Reset immobiliser,
HONDA\Select from vehicle\Europe\Civic\2006-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Europe\Civic\2001-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Europe\City\2008-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Europe\Accord\200	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Europe\Accord\200	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Europe\Accord\-	Add key,All key lost,Reset immobiliser,
HONDA\Select from vehicle\Middle	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\India\Mobilo	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\India\Jazz	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\India\Crv\2007-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\India\Crv\-\2006	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\India\Civic	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\India\City	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\India\Brio	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\India\Accord\2008-	Add key,All key lost,Reset immobiliser,
HONDA\Select from vehicle\India\Accord\2003-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\India\Accord\1997-	Read key count,All key lost,

HONDA>Select from vehicle\India\Amaze	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\S2000	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\Prelude\1	Reset immo,Reset ECM,
HONDA>Select from vehicle\Australia\Odyssey\	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\Odyssey\	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\Odyssey\	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\Odyssey\	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\Odyssey\	Reset immo,Reset ECM,
HONDA>Select from vehicle\Australia\Odyssey\	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\Odyssey\	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\NSX\Type	Reset immo,Reset ECM,
HONDA>Select from vehicle\Australia\NSX\Type	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\MDX\200	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\Legend\2	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\Legend\2	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\Legend\1	Reset immo,Reset ECM,
HONDA>Select from vehicle\Australia\Legend\1	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\Jazz\2008	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\Jazz\2002	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\Australia\Integra\20	Add one key,All key lost,Reset key,

HONDA

HONDA\Select from vehicle\Australia\Integral\19	Reset immo,Reset ECM,
HONDA\Select from vehicle\Australia\Insight\20	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Australia\Insight\20	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Australia\Hrv\1999-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Australia\Crv\2007-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Australia\Crv\2002-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Australia\Crv\1999-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Australia\Crv\1999-	Add key,All key lost,Reset immobiliser,
HONDA\Select from vehicle\Australia\Crv\1997-	Reset immo,Reset ECM,
HONDA\Select from vehicle\Australia\Crv\1997-	Add key,All key lost,Reset immobiliser,
HONDA\Select from vehicle\Australia\Civic type	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Australia\Civic\200	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Australia\Civic\199	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Australia\Civic\199	Reset immo,Reset ECM,
HONDA\Select from vehicle\Australia\City\2009-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Australia\Accord\20	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Australia\Accord\20	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Australia\Accord\20	Add key,All key lost,Reset immobiliser,
HONDA\Select from vehicle\Australia\Accord\19	Reset immo,Reset ECM,
HONDA\Select from vehicle\Australia\Accord\19	Add key,All key lost,Reset immobiliser,

HONDA\Select from vehicle\Asia\Stepwagon\-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Stream\Remot	Add remote,Delete remote,
HONDA\Select from vehicle\Asia\Stream\Mecha	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Stream\Mecha	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\S2000\2007-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Odyssey\2008	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Odyssey\1999	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Integra\2002	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Jazz\Mechani	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Jazz\Mechani	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Hrv\2014-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Fit\2007-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Fit\2007	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\ElySION\2005-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia>Edit\2006-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Crv\2006-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Crv\2002-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Civic type	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Civic type	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Civic\2006-	Add one key,All key lost,Reset key,

HONDA\Select from vehicle\Asia\Civic\2005	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\City\Mechanic	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\City\Mechanic	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Airwave\2006-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Accord\2008-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Asia\Accord\1998-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Africa\Jazz\2009-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Africa\Jazz\2006-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\Africa\Brio	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\South	Reset immo,Reset ECM,
HONDA\Select from vehicle\South	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\South	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\South	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\South	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\South	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\USA\Accord\1998-	Read key count,All key lost,
HONDA\Select from vehicle\USA\Accord\2003-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\USA\Accord\2008-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\USA\Accord\2008-	Add remote,Delete remote,
HONDA\Select from vehicle\USA\Accord\2013-	Add one key,All key lost,Reset key,

HONDA>Select from vehicle\USA\Crv\2002-	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\USA\Crv\2007-	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\USA\Crv\2007-	Add remote>Delete remote,
HONDA>Select from vehicle\USA\Crz\2013	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\USA\Civic\2001-	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\USA\Civic\2006-	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\USA\Civic\2006-	Add remote>Delete remote,
HONDA>Select from vehicle\USA\Crosstour\201	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\USA\Crosstour\201	Add remote>Delete remote,
HONDA>Select from vehicle\USA\Element\2003	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\USA\Fit\2007-2008	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\USA\Fit\2009-2013	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\USA\Insight\2000-	Read key count,All key lost,
HONDA>Select from vehicle\USA\Insight\2010-	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\USA\Odyssey\1998	Read key count,All key lost,
HONDA>Select from vehicle\USA\Odyssey\2003	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\USA\Odyssey\2011	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\USA\Odyssey\2011	Add remote>Delete remote,
HONDA>Select from vehicle\USA\Pilot\2005-	Add one key,All key lost,Reset key,
HONDA>Select from vehicle\USA\Pilot\2009-	Add one key,All key lost,Reset key,

HONDA\Select from vehicle\USA\Pilot\2009-	Add remote,Delete remote,
HONDA\Select from vehicle\USA\Prelude	Read key count,All key lost,
HONDA\Select from vehicle\USA\Ridgeline\200	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\USA\S2000\2000-	Read key count,All key lost,
HONDA\Select from vehicle\USA\S2000\2006-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\USA\Xrv\2010-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\USA\Xrv\2010-	Add remote,Delete remote,
HONDA\Select from vehicle\USA\Veze\2010-	Add one key,All key lost,Reset key,
HONDA\Select from vehicle\USA\Veze\2010-	Add remote,Delete remote,
HONDA\Select from type\Immobilizer\16-Pin	Read key count,All key lost,
HONDA\Select from vehicle\Asia\Accord\2018-	Add one smart key,All smart key lost,
HONDA\Select from vehicle\Asia\Crider\Keyless	Add one smart key,All smart key lost,
HONDA\Select from vehicle\Asia\Envix\Keyless-	Add one smart key,All smart key lost,
HONDA\Select from vehicle\Asia\Fit\2018-	Add one smart key,All smart key lost,
HONDA\Select from vehicle\Asia\Inspire\Keyles	Add one smart key,All smart key lost,
KIA\Select from vehicle\China\KX3(KC)\201	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\KX	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\Forte(TDC)\2	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\Forte(TDC)\2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX1\2018-	Program remote,

KIA\Select from vehicle\China\K3(YDC)\20	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K3(YD)\2014	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\Sportage(KM	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\Sportage	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\K5(TFC)\201	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\K5(TFC)\201	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\K2(QBC)\20	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Forte/Forte	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\K5	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\AMANTI(GH)\	Program key,Read key count,Read PIN code(46

KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Forte/Forte	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\K5(TFC)\201	Program smart key,ECM neutral mode,ESCL neutral
KIA\Select from vehicle\China\K5	Program smart key,ECM neutral mode,ESCL neutral
KIA\Select from vehicle\China\Sportage(KM	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\K2(QBC)\20	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\K4(PFC)\201	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\K5(TFC)\201	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\K3(YDC)\20	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\K3(YD)\2014	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\KX3(KC)\201	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\KX3(KC)\201	Program smart key,ECM neutral mode,SMK neutral

KIA\Select from vehicle\China\Sportage(KM	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KM	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KM	Program remote,
KIA\Select from vehicle\China\Sportage	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\Sportage	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\Sportage	Program smart key,ECM neutral mode,ESCL neutral
KIA\Select from vehicle\China\K2(QBC)\20	Program remote,
KIA\Select from vehicle\China\K3(YD)\2014	Program remote,
KIA\Select from vehicle\China\K3(YDC)\20	Program remote,
KIA\Select from vehicle\China\K5(TFC)\201	Program remote,
KIA\Select from vehicle\China\K5(TFC)\201	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,

KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\China\Optima	Program remote,
KIA\Select from type\Immobilizer\Type 3(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 4(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 5(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type 6(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type	Program key,Read key count,Read PIN code(46
KIA\Select from type\Immobilizer\Type	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Smart key\China\Type 1(with slot	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from type\Smart key\China\Type 2(with slot	Program smart key,ECM neutral mode,ESCL neutral
KIA\Select from type\Smart key\China\Type 4(without	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from type\Smart key\China\Type 3(with slot	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from type\Smart key\China\Type 5(without	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from type\Smart key\China\Type 6(without	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from type\Remote\16 PIN\Type	Program remote,
KIA\Select from type\Remote\16 PIN\Type	Program remote,
KIA\Read PIN code	Read PIN code(46 chip),Read PIN
KIA\Select from type\Remote\16 PIN\Type	Program remote,
KIA\Select from type\Remote\16 PIN\Type	Program remote,
KIA\Select from type\Remote\16 PIN\Type	Program remote,

KIA\Select from vehicle\China\K2(QBC)\20	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX5(QLC)\2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX7(QMC)\2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX5(QLC)\2	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from type\Remote\10 PIN\Type	Program remote,
KIA\Select from type\Remote\20 PIN\Type	Program remote,
KIA\Select from vehicle\China\Optima	Program remote,
KIA\Select from vehicle\China\Sportage(KM	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KM	Program remote,
KIA\Select from vehicle\China\Sportage(KM	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KM	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\Sportage(KM	Program remote,
KIA\Select from vehicle\China\Sportage(KM	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,

KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\K4(PFC)\201	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K4(PFC)\201	Program remote,
KIA\Select from vehicle\China\K3(YDC)\20	Program remote,
KIA\Select from vehicle\USA\Forte/Forte	Program remote,
KIA\Select from vehicle\China\KX3(KC)\201	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\KX3(KC)\201	Program remote,
KIA\Select from vehicle\China\KX5(QLC)\2	Program remote,
KIA\Select from vehicle\China\KX7(QMC)\2	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46

KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\China\K5(JFC)\201	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K5(JFC)\201	Program remote,
KIA\Select from vehicle\China\K5(JFC)\201	Program smart key,ECM neutral mode,SMK neutral

KIA\Select from vehicle\China\K5 HEV(JFC	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\China\K5 HEV(JFC	Program remote,
KIA\Select from vehicle\China\K5 HEV(JFC	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\Sportage	Program remote,
KIA\Select from vehicle\China\Sportage	Program remote,
KIA\Select from vehicle\China\Forte(TDC)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\Forte(TDC)\2	Program remote,
KIA\Select from vehicle\China\Forte(TDC)\2	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\Rio(LCC)\20	Program remote,
KIA\Select from vehicle\China\Rio(JBC)\20	Program remote,
KIA\Select from vehicle\China\Cerato(LDC)	Program remote,
KIA\Select from vehicle\China\Soul(AMC)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\Soul(AMC)\2	Program remote,
KIA\Select from vehicle\China\Soul(AMC)\2	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\Soul(AMC)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\China\Soul(AMC)\2	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,

KIA

KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,

KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,ESCL neutral
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral

KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,ESCL neutral
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,

KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General area\Soul	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,ESCL neutral

KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,ESCL neutral
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\General	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\General	Program remote,
KIA\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\AMANTI(GH)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\AMANTI(GH)\	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Borrego(HM)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Borrego(HM)\	Program remote,
KIA\Select from vehicle\USA\Borrego(HM)\	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Cadenza(VG)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Cadenza(VG)\	Program remote,
KIA\Select from vehicle\USA\Cadenza(VG)\	Program smart key,ECM neutral mode,SMK neutral

KIA\Select from vehicle\USA\Forte(YD)\201	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Forte(YD)\201	Program remote,
KIA\Select from vehicle\USA\Forte(YD)\201	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\K900(KH)\201	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Optima	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Optima	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Optima	Program remote,
KIA\Select from vehicle\USA\Optima	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Optima	Program remote,
KIA\Select from vehicle\USA\Optima(JF)\20	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Optima(JF)\20	Program remote,
KIA\Select from vehicle\USA\Optima(JF)\20	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Optima(JFA)\	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Optima(JFA)\	Program remote,
KIA\Select from vehicle\USA\Optima(JFA)\	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Optima(MG)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Optima(MG)\2	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Optima(MG)\2	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Optima(MG)\2	Program remote,
KIA\Select from vehicle\USA\Optima(MG)\2	Program key,Read key count,Read PIN code(46

KIA\Select from vehicle\USA\Optima(MG)\2	Program remote,
KIA\Select from vehicle\USA\Optima(MG)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Optima(MG)\2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Optima(MG)\2	Program remote,
KIA\Select from vehicle\USA\Optima(MG)\2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Optima(MG)\2	Program remote,
KIA\Select from vehicle\USA\OPTIMA(MS)\	Program remote,
KIA\Select from vehicle\USA\OPTIMA(MS)\	Program remote,
KIA\Select from vehicle\USA\Optima	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Optima	Program remote,
KIA\Select from vehicle\USA\Optima	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Optima	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Optima	Program remote,
KIA\Select from vehicle\USA\Optima	Program smart key,ECM neutral mode,ESCL neutral
KIA\Select from vehicle\USA\RIO(BC)\2003	Program remote,
KIA\Select from vehicle\USA\RIO(JB)\2006-	Program remote,
KIA\Select from vehicle\USA\Rio(UB)\2012-	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Rio(UB)\2012-	Program remote,
KIA\Select from vehicle\USA\Rio(UB)\2012-	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Rondo(UN)\20	Program key,Read key count,Read PIN code(46

KIA\Select from vehicle\USA\Rondo(UN)\20	Program remote,
KIA\Select from vehicle\USA\Sedona(VQ)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Sedona(VQ)\2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sedona(YP)\2	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sedona(YP)\2	Program remote,
KIA\Select from vehicle\USA\Sedona(YP)\2	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Sorento(BL)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Sorento(BL)\2	Program remote,
KIA\Select from vehicle\USA\Sorento(BL)\2	Program remote,
KIA\Select from vehicle\USA\Sorento(UMA)	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sorento(UMA)	Program remote,
KIA\Select from vehicle\USA\Sorento(UMA)	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Sorento(XM)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Sorento(XM)\	Program remote,
KIA\Select from vehicle\USA\Sorento(XM)\	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Sorento(XM)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Sorento(XM)\	Program remote,
KIA\Select from vehicle\USA\Sorento(XM)\	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Soul EV(PS	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Soul(AM)\201	Program key,Read key count,Read PIN code(46

KIA\Select from vehicle\USA\Soul(AM)\201	Program remote,
KIA\Select from vehicle\USA\Soul(AM)\201	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Soul(AM)\201	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Soul(AM)\201	Program remote,
KIA\Select from vehicle\USA\Soul(PS)\201	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Soul(PS)\201	Program remote,
KIA\Select from vehicle\USA\Soul(PS)\201	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Spectra(LD)\2	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Spectra(LD)\2	Program remote,
KIA\Select from vehicle\USA\Spectra(LD)\2	Program remote,
KIA\Select from vehicle\USA\Sportage(KM)	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Sportage(KM)	Program remote,
KIA\Select from vehicle\USA\Sportage(KM)	Program remote,
KIA\Select from vehicle\USA\Sportage(QL)\	Program key,ECM neutral mode,Read key count,
KIA\Select from vehicle\USA\Sportage(QL)\	Program remote,
KIA\Select from vehicle\USA\Sportage(SL)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Sportage(SL)\	Program remote,
KIA\Select from vehicle\USA\Sportage(SL)\	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\USA\Sportage(SL)\	Program key,Read key count,Read PIN code(46
KIA\Select from vehicle\USA\Sportage(SL)\	Program remote,

KIA\Select from vehicle\USA\Sporage(SL)\	Program smart key,ECM neutral mode,ESCL neutral
KIA\Select from type\Immobilizer\Type 7(K)	Program key,ECM neutral mode,Read key count,
KIA\Select from type\Immobilizer\Type	Program key,neutral mode,
KIA\Select from type\Immobilizer\Type	Program key,neutral mode,
KIA\Select from type\Smart key\General area\Type	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from type\Smart key\General area\Type	Program smart key,ECM neutral mode,ESCL neutral
KIA\Select from type\Smart key\General area\Type	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from type\Smart key\General area\Type	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from type\Smart key\USA\Type 1(with slot	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from type\Smart key\USA\Type 2(with slot	Program smart key,ECM neutral mode,ESCL neutral
KIA\Select from type\Smart key\USA\Type 3(without	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from type\Smart key\USA\Type 4(without	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from type\Remote\16 PIN\Type	Program remote,
KIA\Select from vehicle\USA\Sporage(QL)\	Program smart key,ECM neutral mode,SMK neutral
KIA\Select from vehicle\China\KX7(QMC)\2	Program smart key,ECM neutral mode,SMK neutral
CHRYSLER\Select from vehicle\Asia\Pacifica\2017\	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Asia\Pacifica\2018\	Add smart key,Delete smart key,Key count,
CHRYSLER\Select from vehicle\Asia\300C\2019-	Add smart key,Delete smart key,Key count,
CHRYSLER\Select from vehicle\Asia\300\2019-	Add smart key,Delete smart key,Key count,
CHRYSLER\Select from vehicle\Asia\300\2018\Sma	Add smart key,Delete smart key,Key count,

CHRYSLER\Select from vehicle\Asia\300C\2018\S	Add smart key,Delete smart key,Key count,
CHRYSLER\Select from vehicle\North	Add smart key,Delete smart key,Key count,
CHRYSLER\Select from vehicle\North	Add smart key,Delete smart key,Key count,
CHRYSLER\Select from vehicle\North	Add smart key,Delete smart key,Key count,
CHRYSLER\Select from vehicle\North	Add smart key,Delete smart key,Key count,
CHRYSLER\Select from vehicle\North	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\North	Add smart key,Delete smart key,Key count,
CHRYSLER\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Asia\300C\2015-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Asia\300\2015-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Africa\300C\2015-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Africa\300\2015-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Australia\300C\201	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Australia\300\2015-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Europe\300C\2015-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Europe\300\2015-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,

CHRYSLER\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\North	Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\North	Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Asia\300\2015-	Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Asia\300C\2015-	Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Europe\300\2015-	Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Europe\300C\2015-	Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\South	Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\South	Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Middle	Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Middle	Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Australia\300\2015-	Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Australia\300C\201	Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Africa\300\2015-	Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Africa\300C\2015-	Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\North	Add smart key,Delete smart key,Key count,
CHRYSLER\Select from vehicle\Asia\Grand	Add smart key,Delete smart key,Key count,
CHRYSLER\Select from vehicle\Australia\300\2018-	Add smart key,Delete smart key,Key count,
CHRYSLER\Select from vehicle\Australia\300\2019-	Add smart key,Delete smart key,Key count,
CHRYSLER\Select from vehicle\Middle	Add smart key,Delete smart key,Key count,

CHRYSLER\Select from vehicle\Middle	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from type\Immobilizer\Type	Add new key,Add old key,Add remote,Check key
CHRYSLER\Select from type\Immobilizer\Type	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from type\Immobilizer\Type	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from type\Immobilizer\Type	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from type\Immobilizer\Type	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from type\Smart key\Type	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from type\Remote\Type 4(CAN)	Add remote,Read PIN code,
CHRYSLER\Select from type\Remote\Type 3(VPW)	Add remote,
CHRYSLER\Select from type\Remote\Type 2(VPW)	Add remote,
CHRYSLER\Select from type\Smart key\Type	Add smart key,Delete smart key,Key count,Read
CHRYSLER\Select from type\Immobilizer\Type	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from type\IMMO-Fobik	Read PIN code,Sync smart key,Add key,Delete
CHRYSLER\Select from vehicle\Asia\300\2011-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Asia\Fremont\201	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Asia\300M\1998-	Add remote,
CHRYSLER\Select from vehicle\Asia\Concorde\199	Add remote,
CHRYSLER\Select from vehicle\Asia\LHS\1999-	Add remote,
CHRYSLER\Select from vehicle\Asia\PT	Add remote,
CHRYSLER\Select from vehicle\Asia\Sebring\2001-	Add remote,

CHRYSLER\Select from vehicle\Asia\Town &	Add remote,Clear remote,
CHRYSLER\Select from type\Remote\Type 1(VPW)	Add remote,
CHRYSLER\Select from type\Remote\Type 5(VPW)	Add remote,Clear remote,
CHRYSLER\Select from type\Remote\Type 6(VPW)	Add remote,
CHRYSLER\Select from type\Remote\Type 7(VPW)	Add remote,
CHRYSLER\Select from type\Remote\Type 8(VPW)	Add remote,
CHRYSLER\Select from vehicle\Asia\200\2014-	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from type\Immobilizer\Type	Add key,Delete key,
CHRYSLER\Select from type\Immobilizer\Type	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from type\Smart key\Type	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from type\Smart key\Type	Sync smart function,
CHRYSLER\Select from type\Smart key\Type	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\North	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\North	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\North	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\North	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\North	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\North	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\North	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,

CHRYSLER\Select from vehicle\North	Add new key,Add old key,Add remote>Delete
CHRYSLER\Select from vehicle\North	Add key>Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\North	Read PIN code,Add key>Delete key,Key count,
CHRYSLER\Select from vehicle\North	Read PIN code,Add key>Delete key,Key
CHRYSLER\Select from vehicle\North	Read PIN code,Add new key>Delete key,Key
CHRYSLER\Select from vehicle\North	Add smart key>Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\North	Add key>Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\North	Add remote,
CHRYSLER\Select from vehicle\North	Add key>Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\North	Add remote,
CHRYSLER\Select from vehicle\North	Add key>Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\North	Add key>Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\North	Add remote,
CHRYSLER\Select from vehicle\North	Add key>Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\North	Add remote,
CHRYSLER\Select from vehicle\North	Add key>Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\North	Add remote,
CHRYSLER\Select from vehicle\North	Add key>Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\North	Add key>Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\North	Add remote,

CHRYSLER\Select from vehicle\North	Add key,Delete key,
CHRYSLER\Select from vehicle\North America\PT	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\North America\PT	Add remote,
CHRYSLER\Select from vehicle\North America\PT	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\North	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\North	Add remote,
CHRYSLER\Select from vehicle\North	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\North	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\North	Add remote,
CHRYSLER\Select from vehicle\North	Add key,Delete key,
CHRYSLER\Select from vehicle\North	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\North	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\North	Sync smart function,
CHRYSLER\Select from vehicle\North	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\North	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\North	Add key,Delete key,
CHRYSLER\Select from vehicle\Asia\300\2005-	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Asia\300\2006-	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\Asia\300\2008\FOB	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\300\2009-	Read PIN code,Add key,Delete key,Key

CHRYSLER\Select from vehicle\Asia\300\2011-	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Asia\300C\2005-	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Asia\300C\2006-	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\Asia\300C\2008\FO	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\300C\2009-	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Asia\300C\2011-	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Asia\300C\2011-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Asia\300M\1998-	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Asia\300M\2001-	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Asia\300M\2001-	Add remote,
CHRYSLER\Select from vehicle\Asia\300M\2004-	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Asia\Aspen\2007-	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\Asia\Concorde\199	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Asia\Concorde\200	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Asia\Concorde\200	Add remote,
CHRYSLER\Select from vehicle\Asia\LHS\1999-	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Asia\Neon\2000\lm	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Asia\Neon\2001-	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Asia\Neon\2001-	Add remote,
CHRYSLER\Select from vehicle\Asia\Pacifica\2004-	Add key,Delete key,

CHRYSLER\Select from vehicle\Asia\PT	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Asia\PT	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Asia\Sebring\2001-	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Asia\Sebring\2007-	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Asia\Town &	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Asia\Town &	Add key,Delete key,
CHRYSLER\Select from vehicle\Asia\Town &	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Town &	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Asia\Town &	Sync smart function,
CHRYSLER\Select from vehicle\Asia\Voyager\2001-	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Asia\Voyager\2004-	Add key,Delete key,
CHRYSLER\Select from vehicle\Asia\Grand	Add key,Delete key,
CHRYSLER\Select from vehicle\Asia\Grand	Add remote,
CHRYSLER\Select from vehicle\Asia\Grand	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Asia\Grand	Sync smart function,
CHRYSLER\Select from vehicle\Europe\200\2011-	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Europe\200\2014-	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Europe\300\2005-	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Europe\300\2006-	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\Europe\300\2008\F	Read PIN code,Add key,Delete key,Key count,

CHRYSLER\Select from vehicle\Europe\300\2009-	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Europe\300\2011-	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Europe\300\2011-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Europe\300C\2005-	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Europe\300C\2006-	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\Europe\300C\2008\	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\300C\2009-	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Europe\300C\2011-	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Europe\300C\2011-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Europe\300M\1998	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Europe\300M\1998	Add remote,
CHRYSLER\Select from vehicle\Europe\300M\2001	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Europe\300M\2001	Add remote,
CHRYSLER\Select from vehicle\Europe\Aspen\200	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\Europe\Concorde\1	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Europe\Concorde\1	Add remote,
CHRYSLER\Select from vehicle\Europe\Concorde\2	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Europe\Concorde\2	Add remote,
CHRYSLER\Select from vehicle\Europe\LHS\1999-	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Europe\LHS\1999-	Add remote,

CHRYSLER\Select from vehicle\Europe\Neon\2000\	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Europe\Neon\2001-	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Europe\Neon\2001-	Add remote,
CHRYSLER\Select from vehicle\Europe\Pacifica\20	Add key,Delete key,
CHRYSLER\Select from vehicle\Europe\PT	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Europe\PT	Add remote,
CHRYSLER\Select from vehicle\Europe\PT	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Europe\Sebring\20	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Europe\Sebring\20	Add remote,
CHRYSLER\Select from vehicle\Europe\Sebring\20	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Europe\Town &	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Europe\Town &	Add remote,
CHRYSLER\Select from vehicle\Europe\Town &	Add key,Delete key,
CHRYSLER\Select from vehicle\Europe\Town &	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Town &	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Europe\Town &	Sync smart function,
CHRYSLER\Select from vehicle\Europe\Voyager\20	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Europe\Voyager\20	Add key,Delete key,
CHRYSLER\Select from vehicle\Europe\Grand	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Europe\Grand	Add remote,

CHRYSLER

CHRYSLER\Select from vehicle\Europe\Grand	Add key,Delete key,
CHRYSLER\Select from vehicle\Europe\Grand	Add remote,
CHRYSLER\Select from vehicle\Europe\Grand	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Europe\Grand	Sync smart function,
CHRYSLER\Select from vehicle\Europe\300M\2004	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Europe\Voyager\20	Add remote,
CHRYSLER\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\South	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\South	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\South	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\South	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\South	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\South	Add smart key,Delete smart key,Read PIN code,

CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\South	Add remote,
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\South	Add remote,
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\South	Add remote,
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\South	Add remote,
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\South	Add remote,
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\South	Add remote,
CHRYSLER\Select from vehicle\South	Add key,Delete key,
CHRYSLER\Select from vehicle\South America\PT	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\South America\PT	Add remote,
CHRYSLER\Select from vehicle\South America\PT	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\South	Add remote,

CHRYSLER\Select from vehicle\South	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\South	Add remote,
CHRYSLER\Select from vehicle\South	Add key,Delete key,
CHRYSLER\Select from vehicle\South	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\South	Sync smart function,
CHRYSLER\Select from vehicle\South	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\South	Add key,Delete key,
CHRYSLER\Select from vehicle\South	Add key,Delete key,
CHRYSLER\Select from vehicle\South	Add remote,
CHRYSLER\Select from vehicle\South	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\South	Sync smart function,
CHRYSLER\Select from vehicle\South	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Middle	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Middle	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Middle	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key

CHRYSLER\Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Middle	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Middle	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Middle	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Middle	Add remote,
CHRYSLER\Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Middle	Add remote,
CHRYSLER\Select from vehicle\Middle	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Middle	Add remote,
CHRYSLER\Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Middle	Add remote,
CHRYSLER\Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Middle	Add remote,
CHRYSLER\Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN

CHRYSLER\Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Middle	Add remote,
CHRYSLER\Select from vehicle\Middle	Add key,Delete key,
CHRYSLER\Select from vehicle\Middle East\PT	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Middle East\PT	Add remote,
CHRYSLER\Select from vehicle\Middle East\PT	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Middle	Add remote,
CHRYSLER\Select from vehicle\Middle	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Middle East\Town	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Middle East\Town	Add remote,
CHRYSLER\Select from vehicle\Middle East\Town	Add key,Delete key,
CHRYSLER\Select from vehicle\Middle East\Town	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Middle East\Town	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Middle East\Town	Sync smart function,
CHRYSLER\Select from vehicle\Middle	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Middle	Add key,Delete key,
CHRYSLER\Select from vehicle\Middle East\Grand	Add key,Delete key,
CHRYSLER\Select from vehicle\Middle East\Grand	Add remote,
CHRYSLER\Select from vehicle\Middle East\Grand	Read PIN code,Add key,Delete key,Key count,

CHRYSLER\Select from vehicle\Middle East\Grand	Sync smart function,
CHRYSLER\Select from vehicle\Middle	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Australia\200\2011-	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Australia\200\2014-	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Australia\300\2005-	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Australia\300\2006-	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\Australia\300\2008\	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\300\2009-	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Australia\300\2011-	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Australia\300\2011-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Australia\300C\200	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Australia\300C\200	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\Australia\300C\200	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\300C\200	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Australia\300C\201	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Australia\300C\201	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Australia\300M\199	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Australia\300M\199	Add remote,
CHRYSLER\Select from vehicle\Australia\300M\200	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Australia\300M\200	Add remote,

CHRYSLER\Select from vehicle\Australia\Aspen\20	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\Australia\Concorde\	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Australia\Concorde\	Add remote,
CHRYSLER\Select from vehicle\Australia\Concorde\	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Australia\Concorde\	Add remote,
CHRYSLER\Select from vehicle\Australia\LHS\1999	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Australia\LHS\1999	Add remote,
CHRYSLER\Select from vehicle\Australia\Neon\200	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Australia\Neon\200	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Australia\Neon\200	Add remote,
CHRYSLER\Select from vehicle\Australia\Pacifica\2	Add key,Delete key,
CHRYSLER\Select from vehicle\Australia\PT	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Australia\PT	Add remote,
CHRYSLER\Select from vehicle\Australia\PT	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Australia\Sebring\2	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Australia\Sebring\2	Add remote,
CHRYSLER\Select from vehicle\Australia\Sebring\2	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Australia\Town &	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Australia\Town &	Add remote,
CHRYSLER\Select from vehicle\Australia\Town &	Add key,Delete key,

CHRYSLER\Select from vehicle\Australia\Town &	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Town &	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Australia\Town &	Sync smart function,
CHRYSLER\Select from vehicle\Australia\Voyager\2	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Australia\Voyager\2	Add key,Delete key,
CHRYSLER\Select from vehicle\Australia\Grand	Add key,Delete key,
CHRYSLER\Select from vehicle\Australia\Grand	Add remote,
CHRYSLER\Select from vehicle\Australia\Grand	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Australia\Grand	Sync smart function,
CHRYSLER\Select from vehicle\Australia\300M\200	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Africa\200\2011-	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Africa\200\2014-	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from vehicle\Africa\300\2005-	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Africa\300\2006-	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\Africa\300\2008\FO	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\300\2009-	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Africa\300\2011-	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Africa\300\2011-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Africa\300C\2005-	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\Africa\300C\2006-	Add key,Delete key,Key count,Add remote,Read

CHRYSLER\Select from vehicle\Africa\300C\2008\F	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\300C\2009-	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Africa\300C\2011-	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Africa\300C\2011-	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from vehicle\Africa\300M\1998-	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Africa\300M\1998-	Add remote,
CHRYSLER\Select from vehicle\Africa\300M\2001-	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Africa\300M\2001-	Add remote,
CHRYSLER\Select from vehicle\Africa\Aspen\2007-	Add key,Delete key,Key count,Add remote,Read
CHRYSLER\Select from vehicle\Africa\Concorde\19	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Africa\Concorde\19	Add remote,
CHRYSLER\Select from vehicle\Africa\Concorde\20	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Africa\Concorde\20	Add remote,
CHRYSLER\Select from vehicle\Africa\LHS\1999-	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Africa\LHS\1999-	Add remote,
CHRYSLER\Select from vehicle\Africa\Neon\2000\I	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Africa\Neon\2001-	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Africa\Neon\2001-	Add remote,
CHRYSLER\Select from vehicle\Africa\Pacifica\200	Add key,Delete key,
CHRYSLER\Select from vehicle\Africa\PT	Add key,Delete key,Key count,Read PIN

CHRYSLER\Select from vehicle\Africa\PT	Add remote,
CHRYSLER\Select from vehicle\Africa\PT	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Africa\Sebring\2001	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Africa\Sebring\2001	Add remote,
CHRYSLER\Select from vehicle\Africa\Sebring\2007	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from vehicle\Africa\Town &	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Africa\Town &	Add remote,
CHRYSLER\Select from vehicle\Africa\Town &	Add key,Delete key,
CHRYSLER\Select from vehicle\Africa\Town &	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Town &	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Africa\Town &	Sync smart function,
CHRYSLER\Select from vehicle\Africa\Voyager\200	Add key,Delete key,Key count,Read PIN
CHRYSLER\Select from vehicle\Africa\Voyager\200	Add key,Delete key,
CHRYSLER\Select from vehicle\Africa\Grand	Add key,Delete key,
CHRYSLER\Select from vehicle\Africa\Grand	Add remote,
CHRYSLER\Select from vehicle\Africa\Grand	Read PIN code,Add key,Delete key,Key count,
CHRYSLER\Select from vehicle\Africa\Grand	Sync smart function,
CHRYSLER\Select from vehicle\Africa\300M\2004-	Add new key,Add old key,Add remote,Delete
CHRYSLER\Select from vehicle\North	Add smart key,Delete smart key,Read PIN code,
CHRYSLER\Select from type\Immobilizer\Type	Key count,Program key,Delete key,Program

CHRYSLER\Select from vehicle\North	Key count,Program key,Delete key,Program
CHRYSLER\Select from vehicle\North	Key count,Program key,Delete key,Program
CHRYSLER\Select from vehicle\Asia\Cirrus\2007-	Key count,Program key,Delete key,Program
CHRYSLER\Select from vehicle\Asia\Neon\2005-	Key count,Program key,Delete key,Program
CHRYSLER\Select from vehicle\Europe\Cirrus\2007	Key count,Program key,Delete key,Program
CHRYSLER\Select from vehicle\Europe\Neon\2005-	Key count,Program key,Delete key,Program
CHRYSLER\Select from vehicle\South	Key count,Program key,Delete key,Program
CHRYSLER\Select from vehicle\South	Key count,Program key,Delete key,Program
CHRYSLER\Select from vehicle\Australia\Cirrus\200	Key count,Program key,Delete key,Program
CHRYSLER\Select from vehicle\Australia\Neon\200	Key count,Program key,Delete key,Program
CHRYSLER\Select from vehicle\Middle	Key count,Program key,Delete key,Program
CHRYSLER\Select from vehicle\Middle	Key count,Program key,Delete key,Program
CHRYSLER\Select from vehicle\Africa\Cirrus\2007-	Key count,Program key,Delete key,Program
CHRYSLER\Select from vehicle\Africa\Neon\2005-	Key count,Program key,Delete key,Program
CHRYSLER\Select from vehicle\Asia\200\2011-	Read PIN code,Add new key,Delete key,Key
CHRYSLER\Select from type\Smart key\Type	Read PIN code,Add key,Delete key,
CHRYSLER\Select from type\Smart key\Type	Read PIN code,Add smart key,Delete smart key,
CHRYSLER\Select from type\Smart key\Type	Read PIN code,Add key,Delete key,
CHRYSLER\Select from type\Smart key\Type	Read PIN code,Add key,Delete key,
CHRYSLER\Select from type\Remote\Type 9(VPW)	Program remote,

CHRYSLER\Select from vehicle\Asia\Town &	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\North	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Europe\Town &	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\South	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Middle East\Town	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Australia\Town &	Read PIN code,Add key,Delete key,Key
CHRYSLER\Select from vehicle\Africa\Town &	Read PIN code,Add key,Delete key,Key
HYUNDAI\Select from vehicle\China\Encino\2018\	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\Encino\2018\	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Encino\2018\	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2010-	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\Sonata(NF)\	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Tucson(JM)\	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Tucson(JM)\	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Tucson(JM)\	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Mistra(CF)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\Sonata(NFC)	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\I30(FDC)\20	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\Verna(RBC/	Program key,Read key count,Read PIN code(46

HYUNDAI\Select from vehicle\China\Elantra	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\Elantra	Program smart key,ECM neutral mode,ESCL neutral
HYUNDAI\Select from vehicle\China\Sonata(NFC)	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\IX35\2010-	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\Elantra	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\IX35\2014-	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\Verna(RBC/	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\IX25(GC)\20	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\Sonata	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\New	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\New	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\Mistra(CF)\2	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\HD	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,ESCL neutral
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program smart key,
HYUNDAI\Select from vehicle\General	Program smart key,
HYUNDAI\Select from vehicle\General	Program smart key,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\New	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\Sonata	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\Sonata	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2010-	Program remote,
HYUNDAI\Select from vehicle\China\Verna(RBC/	Program remote,
HYUNDAI\Select from vehicle\China\New	Program remote,
HYUNDAI\Select from vehicle\China\Sonata	Program remote,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\China\I30(FDC)\20	Program remote,
HYUNDAI\Select from vehicle\China\New	Program remote,
HYUNDAI\Select from vehicle\General	Program remote,

HYUNDAI\Select from vehicle\China\Elantra(AD)\	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra(AD)\	Program remote,
HYUNDAI\Select from vehicle\China\Tucson(JM)\	Program remote,
HYUNDAI\Select from type\Immobilizer\Type 1(K)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Immobilizer\Type 2(K)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Immobilizer\Type 3(K)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Immobilizer\Type	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from type\Immobilizer\Type	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Smart key\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from type\Smart key\General	Program smart key,ECM neutral mode,ESCL neutral
HYUNDAI\Select from type\Smart key\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from type\Smart key\General	Program smart key,
HYUNDAI\Select from type\Smart key\General	Program smart key,
HYUNDAI\Select from type\Smart key\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from type\Smart key\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from type\Smart key\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from type\Remote\16 PIN\Type	Program remote,
HYUNDAI\Select from type\Remote\16 PIN\Type	Program remote,
HYUNDAI\Select from vehicle\China\Elantra	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Read PIN code	Read PIN code(46 chip),Read PIN

HYUNDAI\Select from vehicle\China\Verna(RC)\	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from type\Remote\16 PIN\Type	Program remote,
HYUNDAI\Select from type\Remote\16 PIN\Type	Program remote,
HYUNDAI\Select from type\Remote\16 PIN\Type	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(AD)\	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\Verna(RBC/	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Remote\10 PIN\Type	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2017-	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from type\Smart key\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\Accent(MC)\	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Accent(MC)\	Program remote,
HYUNDAI\Select from vehicle\China\Elantra	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra	Program remote,
HYUNDAI\Select from vehicle\China\Elantra	Program remote,
HYUNDAI\Select from vehicle\China\Elantra	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\Elantra(HDC	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Elantra(HDC	Program remote,
HYUNDAI\Select from vehicle\China\Elantra(HDC	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\New	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\New	Program remote,

HYUNDAI\Select from vehicle\China\New	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\Elantra\2004	Program remote,
HYUNDAI\Select from vehicle\China\IX25(GC)\20	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\IX25(GC)\20	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2014-	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\IX35\2014-	Program remote,
HYUNDAI\Select from vehicle\China\IX35\2017-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Mistra(CF)\2	Program remote,
HYUNDAI\Select from vehicle\China\Sonata(LFC)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Sonata(LFC)	Program remote,
HYUNDAI\Select from vehicle\China\Sonata(LFC)	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\China\Sonata(NFC)	Program remote,
HYUNDAI\Select from vehicle\China\Sonata(NF)\	Program remote,
HYUNDAI\Select from vehicle\China\New	Program remote,
HYUNDAI\Select from vehicle\China\New	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Verna(RBC/	Program remote,
HYUNDAI\Select from vehicle\China\Verna(RBC/	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\China\Verna(RBC/	Program remote,
HYUNDAI\Select from vehicle\China\Verna\2016-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\China\Verna\2016-	Program remote,

HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General area\ccent	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General area\ccent	Program remote,
HYUNDAI\Select from vehicle\General area\ccent	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,

HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program remote,

HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General area\H-	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General area\H-	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\H-	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General area\H-	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General area\H-	Program key,ECM neutral mode,Read key count,

HYUNDAI>Select from vehicle\General area\H-	Program remote,
HYUNDAI>Select from vehicle\General area\H-	Program key,Read key count,Read PIN code(46
HYUNDAI>Select from vehicle\General area\H-	Program remote,
HYUNDAI>Select from vehicle\General area\H-	Program remote,
HYUNDAI>Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI>Select from vehicle\General	Program remote,
HYUNDAI>Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI>Select from vehicle\General	Program remote,
HYUNDAI>Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI>Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI>Select from vehicle\General	Program remote,
HYUNDAI>Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI>Select from vehicle\General	Program remote,
HYUNDAI>Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI>Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI>Select from vehicle\General	Program remote,
HYUNDAI>Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI>Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI>Select from vehicle\General	Program remote,
HYUNDAI>Select from vehicle\General	Program key,Read key count,Read PIN code(46

HYUNDAI

HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral

HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General area\ix35	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General area\New	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General area\New	Program remote,
HYUNDAI\Select from vehicle\General area\New	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General area\New	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General area\New	Program remote,

HYUNDAI\Select from vehicle\General area\New	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\New	Program remote,
HYUNDAI\Select from vehicle\General area\New	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General area\New	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General area\New	Program remote,
HYUNDAI\Select from vehicle\General area\New	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46

HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,

HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\General	Program remote,

HYUNDAI\Select from vehicle\General	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\General	Program remote,
HYUNDAI\Select from vehicle\General	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Accent(LC)\20	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Accent(LC)\20	Program remote,
HYUNDAI\Select from vehicle\USA\Accent(MC)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Accent(MC)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Accent(RB)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Accent(RB)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Attitude(Mexic	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Azera(HG)\20	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Azera(HG)\20	Program remote,
HYUNDAI\Select from vehicle\USA\Azera(HG)\20	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Azera(TG)\20	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Azera(TG)\20	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Azera(TG)\20	Program remote,
HYUNDAI\Select from vehicle\USA\Azera(TG)\20	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Azera(TG)\20	Program remote,

HYUNDAI\Select from vehicle\USA\Elantra	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Elantra	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Elantra	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Elantra	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Elantra	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Elantra	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(AD)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Elantra(AD)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(AD)\2	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Elantra(ADA)\	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Elantra(ADA)\	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(ADA)\	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Elantra(HD)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Elantra(HD)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(MD)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Elantra(MD)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(MD)\2	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Elantra(UD)\2	Program key,Read key count,Read PIN code(46

HYUNDAI\Select from vehicle\USA\Elantra(UD)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Elantra(UD)\2	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Elantra(XD)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Elantra(XD)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Entourage	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Entourage	Program remote,
HYUNDAI\Select from vehicle\USA\Equus(VI)\201	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Equus(VI)\201	Program smart key,
HYUNDAI\Select from vehicle\USA\Genesis	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Genesis	Program remote,
HYUNDAI\Select from vehicle\USA\Genesis	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Genesis(BH)\	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Genesis(BH)\	Program remote,
HYUNDAI\Select from vehicle\USA\Genesis(BH)\	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Genesis(BH)\	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Genesis(BH)\	Program remote,
HYUNDAI\Select from vehicle\USA\Genesis(BH)\	Program smart key,
HYUNDAI\Select from vehicle\USA\Genesis(DH)\	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Santafe	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Santafe	Program smart key,ECM neutral mode,SMK neutral

HYUNDAI\Select from vehicle\USA\Santafe	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Santafe	Program remote,
HYUNDAI\Select from vehicle\USA\Santafe	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\New	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\New	Program remote,
HYUNDAI\Select from vehicle\USA\New	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Santafe	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Santafe	Program remote,
HYUNDAI\Select from vehicle\USA\Santafe	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Santafe(SM)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Santafe(SM)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Sonata	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Sonata	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Sonata	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Sonata(LFA)\	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Sonata(LFA)\	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Sonata(LFA)\	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata(LFA)\	Program smart key,ECM neutral mode,SMK neutral

HYUNDAI\Select from vehicle\USA\Sonata(NF)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Sonata(NF)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Sonata(NF)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata(YF)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Sonata(YF)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Sonata(YF)\2	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Tiburon(GK)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Tiburon(GK)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Tucson	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Tucson(LM)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Tucson(LM)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Tucson(LM)\2	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Tucson(JM)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Tucson(JM)\2	Program key,Read key count,Read PIN code(46
HYUNDAI\Select from vehicle\USA\Tucson(JM)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Tiburon(TL)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Veloster(FS)\2	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from vehicle\USA\Veloster(FS)\2	Program remote,
HYUNDAI\Select from vehicle\USA\Veloster(FS)\2	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\Veracruz(ix55(Program key,Read key count,Read PIN code(46

HYUNDAI\Select from vehicle\USA\Veracruz\ix55(Program remote,
HYUNDAI\Select from vehicle\USA\Veracruz\ix55(Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from vehicle\USA\XG(XG)\2001-	Program remote,
HYUNDAI\Select from type\Remote\16	Program remote,
HYUNDAI\Select from type\Immobilizer\Type6(CA	Program key,neutral mode,
HYUNDAI\Select from type\Immobilizer\Type7(CA	Program key,neutral mode,
HYUNDAI\Select from type\Immobilizer\Type8(K)	Program key,ECM neutral mode,Read key count,
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,ESCL neutral
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from type\Smart	Program smart key,
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,ESCL neutral
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from type\Smart	Program smart key,
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from type\Smart	Program smart key,ECM neutral mode,SMK neutral
HYUNDAI\Select from type\Smart key\General	Program smart key,ECM neutral mode,SMK neutral

	HYUNDAI\Select from vehicle\China\Verna\2016-	Program smart key,ECM neutral mode,SMK neutral
	TOYOTA\Select from vehicle\China\86\2011-	Add smart key,Delete smart key,Generate LKE,
	TOYOTA\Select from vehicle\China\86\2011-	Key count,Add key,Delete key,Add remote,Delete
	TOYOTA\Select from vehicle\China\Camry\2000-	Add master key,Add valet key,Delete key,Clear fault
	TOYOTA\Select from vehicle\China\Camry\2004-	Add master key,Add valet key,Delete key,Clear fault
	TOYOTA\Select from vehicle\China\Reiz\Mechan	Add key,Delete key,All key lost,Immobiliser ECU
	TOYOTA\Select from vehicle\China\Crown\-	Add key,Delete key,All key lost,Immobiliser ECU
	TOYOTA\Select from vehicle\China\Camry\2004-	Add key,Delete key,Program immo
	TOYOTA\Select from vehicle\China\Prado\2010-	Add smart key,Delete smart key,Reset
	TOYOTA\Select from vehicle\China\Crown\2009-	Add master key,Add valet key,Delete key,
	TOYOTA\Select from vehicle\China\Rav4\Smart	Add smart key,Delete smart key,Reset
	TOYOTA\Select from vehicle\China\Reiz\Mechan	Add key,Delete key,Program immo
	TOYOTA\Select from vehicle\China\Corolla\2012	Program remote,Delete remote,
	TOYOTA\Select from vehicle\China\Camry\2004-	Add key,Delete key,Program immo
	TOYOTA\Select from vehicle\China\Crown\-	Add key,Delete key,Program immo
	TOYOTA\Select from vehicle\China\Crown\-	Add key,Delete key,Program immo
	TOYOTA\Select from vehicle\China\Reiz\Mechan	Add key,Delete key,Program immo
	TOYOTA\Select from vehicle\China\Camry\2004-	Add smart key,Delete smart key,Reset
	TOYOTA\Select from vehicle\China\Reiz\Smart	Add smart key,Delete smart key,Reset
	TOYOTA\Select from vehicle\China\Camry\2004-	Program remote,Delete remote,

TOYOTA\Select from vehicle\China\Vios\Mechan	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Corolla\2012	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Camry\2004-	Remote program method,
TOYOTA\Select from vehicle\China\Avanza\Mec	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Vios\Mechan	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Yaris\Smart	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Levin\Mecha	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Prado\2009-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from type\All smart key lost\All	Backup EEPROM data,Generate SKE,Bind
TOYOTA\Select from type\PEPS\Type 2(Crown	Program remote,Add smart key,Immobiliser ECU
TOYOTA\Select from type\PEPS\Type 3	Add smart key,Delete smart key,Reset
TOYOTA\Select from type\IMMO\Type	Reset IMMO(8A AKL),Add key,Delete key,Program
TOYOTA\Select from type\IMMO\Type	Add key,
TOYOTA\Select from type\IMMO\Type 6	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Corolla	Add key,Delete key,Program immo
TOYOTA\Select from type\IMMO\Type	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from type\IMMO\Type 1("4C")	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from type\IMMO\Type	Add key,Delete key,Program immo
TOYOTA\Select from type\IMMO\Type 7(Toyota	Read key count,Add key,Program
TOYOTA\Select from type\Remote\Type 1	Program remote,Delete remote,

TOYOTA\Select from type\Remote\Type 2	Program remote,Delete remote,
TOYOTA\Select from type\PEPS\Type 1	Add smart key,Delete smart key,Reset smart key,
TOYOTA\Select from type\Remote\Type 3	Program remote,
TOYOTA\Select from type\IMMO\Type	Reset G IMMO(AKL),Reset DOT IMMO(AKL),
TOYOTA\Select from vehicle\China\Avanza\All	Reset G IMMO(AKL),Reset DOT IMMO(AKL),
TOYOTA\Select from vehicle\China\Corolla	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Corolla	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Corolla	Program remote,Add smart key,Immobiliser ECU
TOYOTA\Select from vehicle\USA\4Runner\1999	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\USA\4Runner\2003	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\4Runner\2003	Remote program method,
TOYOTA\Select from vehicle\USA\4Runner\2009	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\4Runner\2009	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\4Runner\2009	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\4Runner\2009	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\4Runner\2009	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\86\2016-	Add smart key,Delete smart key,Remote control
TOYOTA\Select from vehicle\USA\86\2016-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Allion\2006-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Alphard\2006-	Add smart key,Delete smart key,Reset

TOYOTA\Select from vehicle\USA\Avalon\2005-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Avalon\2005-	Add smart key,Delete smart key,Reset smart key,
TOYOTA\Select from vehicle\USA\Avalon\2013-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Avalon	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Avanza\2012-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Avenxis\1997-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Avenxis\2009-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Avenxis\2009-	Remote program method,
TOYOTA\Select from vehicle\USA\Avenxis\2009-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Avenxis\2012-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Avenxis\2012-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Axio\2003\Sm	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Aygo\2005-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Aygo\2005-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Aygo\2005-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Camry\1998-	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\USA\Camry\1998-	Remote program method,
TOYOTA\Select from vehicle\USA\Camry\2004\I	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\USA\Camry\2004\I	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Camry\2006-	Add master key,Add valet key,Delete key,Clear fault

TOYOTA\Select from vehicle\USA\Camry\2006-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2006-	Remote program method,
TOYOTA\Select from vehicle\USA\Camry\2006-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Camry\2006-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2006-	Remote program method,
TOYOTA\Select from vehicle\USA\Camry\2006-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Camry\2006-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2006-	Remote program method,
TOYOTA\Select from vehicle\USA\Camry\2006-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Camry\2006-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2006-	Remote program method,
TOYOTA\Select from vehicle\USA\Camry\2006-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Camry\2012-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Camry\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2012-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Camry\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Camry\2012-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Camry\2012-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Celsior\2000-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Corolla\2001-	Add master key,Add valet key,Delete key,Clear fault

TOYOTA\Select from vehicle\USA\Corolla\2001-	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2001-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Corolla\2001-	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2007-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Corolla\2009\I	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Corolla\2009\I	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Corolla\2009\I	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Corolla\2009\I	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Corolla\2010-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Corolla\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Corolla\2010-	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2010-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Corolla\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Corolla\2010-	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2010-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Corolla\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Corolla\2010-	Remote program method,
TOYOTA\Select from vehicle\USA\Corolla\2010-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Corolla\2015-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Corolla\2015-	Add smart key,Delete smart key,Reset

TOYOTA\Select from vehicle\USA\Crown\2003-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Crown\2003-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Crown\2003-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Crown\2003-	Program remote,Add smart key,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Echo\2003-	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\USA\Estima\2006-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\FJ	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\FJ	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\FJ	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\FJ	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\FJ	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\FJ	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Fieler\2006-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Fortuner\2005	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Fortuner\2005	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Hiace-	Remote program method,
TOYOTA\Select from vehicle\USA\Hiace\2005-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Hiace\2005-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Hiace\2005-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Highlander\20	Add master key,Add valet key,Delete key,Clear fault

TOYOTA\Select from vehicle\USA\Highlander\20	Remote program method,
TOYOTA\Select from vehicle\USA\Highlander\20	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Highlander\20	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Highlander\20	Remote program method,
TOYOTA\Select from vehicle\USA\Highlander\20	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Highlander\20	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Highlander\20	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Highlander\20	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Highlander\20	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Highlander\20	Remote program method,
TOYOTA\Select from vehicle\USA\Highlander\20	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Highlander	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Highlander	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Hilux\2004-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Hilux\2008-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Hilux\2008-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Hilux\2008-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\IQ\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\IQ\2008-	Remote program method,
TOYOTA\Select from vehicle\USA\IQ\2008-	Add key,Delete key,Program immo

TOYOTA\Select from vehicle\USA\IQ\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\IQ\2008-	Remote program method,
TOYOTA\Select from vehicle\USA\IQ\2008-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\IQ\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\IQ\2012-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\IQ\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\IQ\2012-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Innova\2003-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Innova\2010\I	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Innova\2010\I	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Kluger\2003-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Kluger\2006-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Kluger\2006-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Kluger\2009-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Kluger\2009-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Kluger\2009-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Kluger\2012-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Kluger\2012-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Land	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\USA\Land	Remote program method,

TOYOTA\Select from vehicle\USA\Land	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Land	Remote program method,
TOYOTA\Select from vehicle\USA\Land	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Land	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Land	Remote program method,
TOYOTA\Select from vehicle\USA\Land	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Land	Remote program method,
TOYOTA\Select from vehicle\USA\Land	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Land	Remote program method,
TOYOTA\Select from vehicle\USA\Land	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Land	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Land Cruiser	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Land Cruiser	Remote program method,
TOYOTA\Select from vehicle\USA\Land Cruiser	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Land Cruiser	Remote program method,
TOYOTA\Select from vehicle\USA\Land Cruiser	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Land Cruiser	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Land Cruiser	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Land Cruiser	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\MR2	Add master key,Add valet key,Delete key,Clear fault

TOYOTA\Select from vehicle\USA\Mark x\-	Remote program method,
TOYOTA\Select from vehicle\USA\Mark x\2005-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Mark x\2005-	Remote program method,
TOYOTA\Select from vehicle\USA\Mark x\2005-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Mark x\2007-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Mark x\2007-	Remote program method,
TOYOTA\Select from vehicle\USA\Mark x\2010-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Mark x\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Mark x\2010-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Mark x\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Matrix\2005-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Matrix\2010-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Matrix\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Matrix\2010-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Matrix\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Matrix\2016-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Mitri\2016(Sm	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Mr2\1999-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\New Verso	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\New Verso	Add key,Delete key,Program immo

TOYOTA\Select from vehicle\USA\New Verso	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\New Verso	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\New Verso	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Prado\2002-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Prado\2002-	Remote program method,
TOYOTA\Select from vehicle\USA\Prado\2009\M	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Prado\2009\M	Remote program method,
TOYOTA\Select from vehicle\USA\Prado\2009\M	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Prado\2009\M	Remote program method,
TOYOTA\Select from vehicle\USA\Prado	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Premio\2006\	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Premio\2006\	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Premio\2007-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Previa\2001-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Previa\2001-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Prius\2003\S	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Prius\2004-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Prius\2004-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Prius\2004-	Remote program method,
TOYOTA\Select from vehicle\USA\Prius\2004-	Add smart key,Delete smart key,Reset

TOYOTA

TOYOTA\Select from vehicle\USA\Prius\2010-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Prius\2010-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Prius C\2012-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Prius C\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Prius C\2012-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Prius C\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Prius C\2012-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Prius	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Prius	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Prius V\2012-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Rav4\2001-	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\USA\Rav4\2001-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Rav4\2006-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Rav4\2006-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Rav4\2006-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Rav4\2009-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Rav4\2009-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Rav4\2009-	Remote program method,
TOYOTA\Select from vehicle\USA\Rav4\2009-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Rav4\2009-	Remote program method,

TOYOTA\Select from vehicle\USA\Rav4\2009-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Rav4\2009-	Remote program method,
TOYOTA\Select from vehicle\USA\Rav4\2009-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Rav4\2009-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Rav4	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Rav4	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Rumion\2006-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Sequoia\2000	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\USA\Sequoia\2000	Remote program method,
TOYOTA\Select from vehicle\USA\Sequoia\2007	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\USA\Sequoia\2007	Remote program method,
TOYOTA\Select from vehicle\USA\Sequoia\2007	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Sequoia\2007	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sequoia\2007	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Sequoia\2007	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sequoia\2007	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Sequoia\2007	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\-	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\USA\Sienna\-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Sienna\-	Remote program method,

TOYOTA\Select from vehicle\USA\Sienna\2010-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Sienna\2010-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Sienna\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\2010-	Remote program method,
TOYOTA\Select from vehicle\USA\Sienna\2010-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Sienna\2010-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\2010-	Remote program method,
TOYOTA\Select from vehicle\USA\Sienna\2010-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Sienna\2012-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Sienna\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\2012-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Sienna\2012-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Sienna\2012-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Solara\1999-	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\USA\Solara\1999-	Remote program method,
TOYOTA\Select from vehicle\USA\Solara\1999-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Solara\1999-	Remote program method,
TOYOTA\Select from vehicle\USA\Solara\2004-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Tacoma\2004-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Tacoma\2004-	Program remote,Delete remote,

TOYOTA\Select from vehicle\USA\Tacoma\2004-	Remote program method,
TOYOTA\Select from vehicle\USA\Tacoma\2004-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Tacoma\2004-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tacoma\2004-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Tacoma\2004-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tacoma\2016-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Tarago\2002-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Tarago\2009-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Tarago\2009-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Tundra\2000-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tundra\2007-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Tundra\2007-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tundra\2007-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Tundra\2007-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tundra\2007-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Tundra\2007-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Tundra\2007-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Tundra\2007-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Urban	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Vanguard\200	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Venza\2008-	Remote program method,
TOYOTA\Select from vehicle\USA\Venza\2008-	Add key,Delete key,All key lost,Immobiliser ECU

TOYOTA\Select from vehicle\USA\Venza\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Venza\2008-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Venza\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Venza\2008-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Venza\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Venza\2008-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Verso\-	Remote program method,
TOYOTA\Select from vehicle\USA\Vigo\2005-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Vigo\2010\Me	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Vigo\2010\Me	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Vios\-	Remote program method,
TOYOTA\Select from vehicle\USA\Vios\2008-	Remote program method,
TOYOTA\Select from vehicle\USA\Voxy\Smart	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\USA\Yaris\2000	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2001-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Yaris\2001-	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2001-	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\USA\Yaris\2006-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Yaris\2006-	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2006-	Add smart key,Delete smart key,Reset

TOYOTA\Select from vehicle\USA\Yaris\2008-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Yaris\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2008-	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2008-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Yaris\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2008-	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2008-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Yaris\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2008-	Remote program method,
TOYOTA\Select from vehicle\USA\Yaris\2012\Me	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\USA\Yaris\2012\Me	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2012\Me	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Yaris\2012\Me	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2012\Me	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Yaris\2012\Me	Program remote,Delete remote,
TOYOTA\Select from vehicle\USA\Yaris\2014\Me	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\USA\Yaris\2014\Me	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\86\2016\Sm	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Alphard\-	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\China\Alphard\-	Add smart key,Delete smart key,Reset

TOYOTA\Select from vehicle\China\Alphard\2005	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Alphard\2005	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Alphard\2005	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Alphard\2005	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Corolla\2012	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Corolla\2012	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Corolla\2007	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Corolla\2001	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\China\Corolla\2001	Remote program method,
TOYOTA\Select from vehicle\China\EZ\-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\EZ\2012-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\EZ\2012-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\FJ Cruiser\-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\FJ Cruiser\-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\FJ Cruiser\-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\FJ Cruiser\-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\FJ	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\FJ	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Fortuner\200	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Fortuner\200	Add key,Delete key,Program immo

TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Fortuner/Hilu	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Hiace\-	Remote program method,
TOYOTA\Select from vehicle\China\Hiace\2006-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Hiace\2006-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Hiace\2006-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Hiace\2015-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Hiace\2015-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Hiace\2015-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Highlander\2	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Highlander\2	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Highlander\2	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Highlander\2	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Highlander\2	Add smart key,Delete smart key,Reset

TOYOTA\Select from vehicle\China\Hilux\Mecha	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Hilux\Mecha	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Hilux\Mecha	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Land	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\China\Land	Remote program method,
TOYOTA\Select from vehicle\China\Land	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Land	Remote program method,
TOYOTA\Select from vehicle\China\Land	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Land	Remote program method,
TOYOTA\Select from vehicle\China\Land	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Land	Remote program method,
TOYOTA\Select from vehicle\China\Land	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Land Cruiser	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Land Cruiser	Remote program method,
TOYOTA\Select from vehicle\China\Land Cruiser	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Land Cruiser	Remote program method,
TOYOTA\Select from vehicle\China\Land Cruiser	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Land Cruiser	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Land Cruiser	Remote program method,
TOYOTA\Select from vehicle\China\Land Cruiser	Add smart key,Delete smart key,Reset

TOYOTA\Select from vehicle\China\Land Cruiser	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Land Cruiser	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Levin\Mecha	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Levin\Smart	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Previa\2001-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Previa\2001-	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Previa	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Prius/Tarago	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Prius/Tarago	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Prius/Tarago	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Prius/Tarago	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Prius/Tarago	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Prius\Mecha	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Prius\Mecha	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Prius\Mecha	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Prius\Smart	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Prius+/Prius	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Prius	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Prius	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Prius	Add smart key,Delete smart key,Reset

TOYOTA\Select from vehicle\China\Prius	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Prius	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Prius	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Prius	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Prius	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Rav4\Mecha	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Rav4\Mecha	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Rav4\Mecha	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Rav4\Mecha	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Rav4	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Sequoia\200	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\China\Sequoia\200	Remote program method,
TOYOTA\Select from vehicle\China\Sequoia\200	Add master key,Add valet key,Delete key,Clear fault
TOYOTA\Select from vehicle\China\Sequoia\200	Remote program method,
TOYOTA\Select from vehicle\China\Sequoia\200	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Sequoia\200	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Sequoia\200	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Sequoia\200	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Sequoia\200	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Sequoia\200	Program remote,Delete remote,

TOYOTA\Select from vehicle\China\Sienna\Mech	Add master key,Add valet key,Delete key,
TOYOTA\Select from vehicle\China\Sienna\Mech	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Sienna\Mech	Remote program method,
TOYOTA\Select from vehicle\China\Sienna\Mech	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Sienna\Mech	Remote program method,
TOYOTA\Select from vehicle\China\Sienna\Mech	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Sienna\Mech	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Sienna\Mech	Remote program method,
TOYOTA\Select from vehicle\China\Sienna\Smar	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Tundra\2000	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Tundra\2007	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Tundra\2007	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Tundra\2007	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Tundra\2007	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Tundra\2007	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Tundra\2007	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Venza\Mech	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Venza\Mech	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Venza\Mech	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Venza\Mech	Program remote,Delete remote,

TOYOTA\Select from vehicle\China\Venza\Mech	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Venza\Mech	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Venza\Smart	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Yaris\2008-	Add key,Delete key,All key lost,Immobiliser ECU
TOYOTA\Select from vehicle\China\Yaris\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Yaris\2008-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Yaris\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Yaris\2008-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Yaris\2008-	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Yaris\2013-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Yaris\2013-	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Yaris\2013-	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Yaris\2013-	Program remote,Delete remote,
TOYOTA\Select from vehicle\China\Zelas\Mecha	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Zelas\Mecha	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Zelas\Smart	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Vios\Mechan	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Vios\Mechan	Add key,Delete key,Program immo
TOYOTA\Select from vehicle\China\Vios\Smart	Add smart key,Delete smart key,Reset
TOYOTA\Select from vehicle\China\Camry\2004-	Program remote,Delete remote,

	TOYOTA\Select from vehicle\China\Camry\2004-	Remote program method,
	TOYOTA\Select from vehicle\China\Camry\2004-	Program remote,Delete remote,
	TOYOTA\Select from vehicle\China\Camry\2004-	Remote program method,
	TOYOTA\Select from vehicle\China\Crown\-	Add smart key,Delete smart key,Reset smart key,
	TOYOTA\Select from vehicle\China\Crown\2009-	Add smart key,Delete smart key,Reset
	TOYOTA\Select from vehicle\China\Crown\2009-	Program remote,Add smart key,Immobiliser ECU
	TOYOTA\Select from vehicle\China\Crown\2009-	Program remote,Delete remote,
	TOYOTA\Select from vehicle\China\Avalon\Smar	Add smart key,Delete smart key,
	TOYOTA\Select from vehicle\USA\Frz\2013	Read key count,Add key,Program
	TOYOTA\Select from vehicle\USA\Corolla\2015-	Add key,Delete key,Program immo
	TOYOTA\Select from vehicle\USA\Corolla\2015-	Program remote,Delete remote,
BMW	BMW\Select from type\CAS1\CAS2\CAS3	Program/delete key,Disable and
	BMW\Select from type\CAS4\CAS4+\Method	Generate ignition key,Disable key,Enable
	BMW\Select from type\FEM/BDC	Read key data,Preprocess FEM/BDC,Make dealer
	BMW\Select from type\Motor	Add key,
	BMW\Select from type\CAS4\CAS4+\Method	Make dealer key,Disable/enable
	BMW\Select from type\BDC2	Enable key,Disable key,
	TRUMPCHI\GS5\Immobilizer	Add key,Delete key,Read key count,
	TRUMPCHI\GS5\Smart key	All smart key lost,
	TRUMPCHI\GA5\Immobilizer	Add key,Delete key,Read key count,

TRUMPCHI

TRUMPCHI\GA5\Smart key	All smart key lost,
TRUMPCHI\GA3(GA3S)\Immobilizer	Add key,Read key count,All key
TRUMPCHI\GA8\Immobilizer	Add key,Read key count,All key
TRUMPCHI\GS4\2015-2020\Immobilizer	Add key,Read key count,All key
TRUMPCHI\GA6\Immobilizer	Add key,Read key count,All key
TRUMPCHI\Extended electric	Add key,Delete key,Read key count,
TRUMPCHI\GA3(GA3S)\Smart key	All smart key lost,
TRUMPCHI\GA6\Smart key	All smart key lost,
TRUMPCHI\GA8\Smart key	All smart key lost,
TRUMPCHI\GS4\2015-2020\Smart key	All smart key lost,
TRUMPCHI\GS8\Smart key	All smart key lost,
TRUMPCHI\GS8\Immobilizer	Add key,Delete key,Read key count,
TRUMPCHI\GA4\Immobilizer	Add key,Read key count,All key
TRUMPCHI\GA4\Smart key	All smart key lost,
TRUMPCHI\GS3\Immobilizer	Add key,Delete key,Read key count,
TRUMPCHI\GS3\Smart key	All smart key lost,
TRUMPCHI\GS7\Smart key	All smart key lost,
TRUMPCHI\GE3\Smart key	All smart key lost,
TRUMPCHI\GM8\Smart key	All smart key lost,
TRUMPCHI\New energy vehicles\Immobilizer	Add key,Read key count,All key

	TRUMPCHI\GA3S(PHEV)\ Smart key	All smart key lost,
	TRUMPCHI\GS4(PHEV)\S mart key	All smart key lost,
MASERATI	MASERATI\Flip key\Immobilizer	Program key,Backup immo data,Program remote,Make
	MASERATI\Smart key(- 2016)\Read PIN code	Read PIN code,
	MASERATI\Smart key(- 2016)\Smart key	Add smart key,Delete smart key,
	MASERATI\Smart key(2016-)\Smart key	Add smart key,Delete smart key,Backup immo
	VOLVO\S60\2010- 2019\Smart key[insert	Add key,All key lost,Read CEM data,Identify & unlock
	VOLVO\S60\2010- 2019\Keyless-go[button	Add smart key,Delete smart key,Read CEM
	VOLVO\S80\2009- 2016\Keyless-go[button	Add smart key,Delete smart key,Read CEM
	VOLVO\XC60\2009- 2018\Keyless-go[button	Add smart key,Delete smart key,Read CEM
	VOLVO\S80\2009- 2016\Smart key[insert	Add key,All key lost,Read CEM data,Identify & unlock
	VOLVO\XC60\2009- 2018\Smart key[insert	Add key,All key lost,Read CEM data,Identify & unlock
	VOLVO\S40\2004- 2012\Smart key	Add smart key,Delete smart key,Unlock
	VOLVO\S40\2004- 2012\Immobilizer	Add key,Delete key,Identify key ID,Unlock key,Identify
	VOLVO\S80\2007- 2009\Smart key[insert	Add key,Delete key,Read CEM data,Identify & unlock
	VOLVO\V40\2012- 2018\Smart key[insert	Add key,Delete key,Read CEM data,Identify & unlock
	VOLVO\C30\2007- 2013\Immobilizer	Add key,Delete key,Identify key ID,Unlock key,Identify
	VOLVO\C30\2007- 2013\Smart key	Add smart key,Delete smart key,Unlock
	VOLVO\V40\2012- 2018\Keyless-go[button	Add smart key,Delete smart key,Read CEM
	VOLVO\S80\2007- 2009\Keyless-go[button	Add smart key,Delete smart key,Read CEM

VOLVO

VOLVO\V60\2011-2017\Smart key[insert	Add key,All key lost,Read CEM data,Identify & unlock
VOLVO\V60\2011-2017\Keyless-go[button	Add smart key,Delete smart key,Read CEM
VOLVO\XC60\2006-2009\Smart key[insert	Add key,Delete key,Read CEM data,Identify & unlock
VOLVO\XC60\2006-2009\Keyless-go[button	Add smart key,Delete smart key,Read CEM
VOLVO\XC90\2005-\Flip key	Add key,Delete key,Identify key ID,Unlock key,
VOLVO\S80\2005-2007\Flip key	Add key,Delete key,Identify key ID,Unlock key,
VOLVO\C70\2007-2013\Immobilizer	Add key,Delete key,Identify key ID,Unlock key,Identify
VOLVO\C70\2007-2013\Smart key	Add smart key,Delete smart key,Unlock
VOLVO\V70\2009-2016\Smart key[insert	Add key,All key lost,Read CEM data,Identify & unlock
VOLVO\V70\2009-2016\Keyless-go[button	Add smart key,Delete smart key,Read CEM
VOLVO\XC70\2010-2016\Smart key[insert	Add key,All key lost,Read CEM data,Identify & unlock
VOLVO\XC70\2010-2016\Keyless-go[button	Add smart key,Delete smart key,Read CEM
VOLVO\XC70\2007-2010\Smart key[insert	Add key,Delete key,Read CEM data,Identify & unlock
VOLVO\XC70\2007-2010\Keyless-go[button	Add smart key,Delete smart key,Read CEM
VOLVO\XC70\2006\Flip key	Add key,Delete key,Identify key ID,Unlock key,
VOLVO\V70\2006-2008\Flip key	Add key,Delete key,Identify key ID,Unlock key,
VOLVO\XC40\2020-\Smart key	Add smart key,All smart key lost,Read CEM
VOLVO\S90\2017-\Smart key	Add smart key,All smart key lost,Read CEM
VOLVO\XC60\2018-\Smart key	Add smart key,All smart key lost,Read CEM
VOLVO\XC90\2015-\Smart key	Add smart key,All smart key lost,Read CEM

	VOLVO\S60\2020-\Smart key	Add smart key,All smart key lost,Read CEM
	VOLVO\V60\2018-\Smart key	Add smart key,All smart key lost,Read CEM
	VOLVO\V90\2016-\Smart key	Add smart key,All smart key lost,Read CEM
	CITROEN\Select from vehicle\C4\Immobilizer\Typ	Program key,
	CITROEN\Select from vehicle\Triomphe\Immobiliz	Program key,
	CITROEN\Select from vehicle\C5(China)\Immobili	Program key,
	CITROEN\Select from vehicle\Quatre\Immobilizer	Program key,
	CITROEN\Select from vehicle\C4L\Immobilizer	Program key,
	CITROEN\Select from vehicle\C4L\Smart key	All smart key lost,
	CITROEN\Select from vehicle\C3-XR\Smart key	All smart key lost,
	CITROEN\Read PIN code	Type 1,Type 2,Type 3,Type 4 (K line),
	CITROEN\Select from type\Immobilizer\Type 1	Program key,
	CITROEN\Select from type\Smart key\Type 1	All smart key lost,
	CITROEN\Select from type\Immobilizer\Type 3	Program key,
	CITROEN\Select from type\Immobilizer\Type 2	Program key,
	CITROEN\Select from vehicle\Berlingo\Immobilize	Program key,
	CITROEN\Select from vehicle\C1\Immobilizer	Program key,
	CITROEN\Select from vehicle\C2\Immobilizer\Typ	Program key,
	CITROEN\Select from vehicle\C3\Immobilizer\Typ	Program key,
	CITROEN\Select from vehicle\C5\Immobilizer\Typ	Program key,

CITROEN

CITROEN>Select from vehicle\C8\Immobilizer\Typ	Program key,
CITROEN>Select from vehicle\Dispatch\Immobiliz	Program key,
CITROEN>Select from vehicle\Jumpy\Immobilizer\	Program key,
CITROEN>Select from vehicle\Nemo\Immobilizer\	Program key,
CITROEN>Select from vehicle\Picasso\Immobilize	Program key,
CITROEN>Select from vehicle\Relay\Immobilizer	Program key,
CITROEN>Select from vehicle\Relay2\Immobilizer	Program key,
CITROEN>Select from vehicle\Synergie\Immobiliz	Program key,
CITROEN>Select from vehicle\Xsara(China)\Immo	Program key,
CITROEN>Select from vehicle\Xsara\Immobilizer\	Program key,
CITROEN>Select from vehicle\Xantia\Immobilizer\	Program key,
CITROEN>Select from vehicle\Berlingo\Immobilize	Program key,
CITROEN>Select from vehicle\C2\Immobilizer\Typ	Program key,
CITROEN>Select from vehicle\C3\Immobilizer\Typ	Program key,
CITROEN>Select from vehicle\C5\Immobilizer\Typ	Program key,
CITROEN>Select from vehicle\C6\Immobilizer	Program key,
CITROEN>Select from vehicle\C8\Immobilizer\Typ	Program key,
CITROEN>Select from vehicle\Dispatch\Immobiliz	Program key,
CITROEN>Select from vehicle\Evasion\Immobilize	Program key,
CITROEN>Select from vehicle\Jumpy\Immobilizer\	Program key,

CITROEN\Select from vehicle\Nemo\Immobilizer\	Program key,
CITROEN\Select from vehicle\Relay3\Immobilizer	Program key,
CITROEN\Select from vehicle\Synergie\Immobiliz	Program key,
CITROEN\Select from vehicle\Xsara\Immobilizer\	Program key,
CITROEN\Select from vehicle\Xantia\Immobilizer\	Program key,
CITROEN\Select from vehicle\C3-XR\Immobilizer	Program key,
CITROEN\Select from vehicle\C6(China)\2016-	Program key,
CITROEN\Select from vehicle\Elysee\2012-	Program key,
CITROEN\Select from vehicle\C4\Smart key	All smart key lost,
CITROEN\Select from vehicle\C6(China)\2016-	All smart key lost,
CITROEN\Select from vehicle\C-	All smart key lost,
CITROEN\Select from type\Immobilizer\Type 4	Read key/remote count,Program immo
CITROEN\Select from vehicle\C-	Read key/remote count,Program immo
CITROEN\Select from vehicle\C-	Read key/remote count,Program immo
CITROEN\Select from vehicle\C4\Immobilizer\Typ	Program key,
CITROEN\Select from type\Replace engine	Replace engine ECU,
CITROEN\Select from type\Immobilizer\Type 5	Program key,Decoder programming,Program
CITROEN\Select from vehicle\Berlingo\Immobilize	Program key,Decoder programming,Program
CITROEN\Select from vehicle\C5\Immobilizer\Typ	Program key,Decoder programming,Program
CITROEN\Select from vehicle\Dispatch\Immobiliz	Program key,Decoder programming,Program

	CITROEN\Select from vehicle\Elysee\-	Program key,Decoder programming,Program
	CITROEN\Select from vehicle\Evasion\Immobilize	Program key,Decoder programming,Program
	CITROEN\Select from vehicle\Jumpy\Immobilizer\	Program key,Decoder programming,Program
	CITROEN\Select from vehicle\Synergie\Immobiliz	Program key,Decoder programming,Program
	CITROEN\Select from vehicle\Xsara\Immobilizer\	Program key,Decoder programming,Program
	CITROEN\Select from vehicle\Xantia\Immobilizer\	Program key,Decoder programming,Program
PORSCHE	PORSCHE\Cayenne\Cayenne 2010-\Smart key	Program smart key,Make dealer key,
	PORSCHE\Macan\Macan Smart key	Program smart key,Make dealer key,
	PORSCHE\Macan\Macan S\Smart key	Program smart key,Make dealer key,
	PORSCHE\Macan\Macan Turbo\Smart key	Program smart key,Make dealer key,
	PORSCHE\Cayenne\Cayenne GTS 2010-\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 911\Carrera S\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 911\Carrera Targa 4\Smart	Program smart key,Make dealer key,
	PORSCHE\New 911\Turbo\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 718\Cayman\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 718\Boxster\Smart key	Program smart key,Make dealer key,
	PORSCHE\New 718\Boxster S\Smart key	Program smart key,Make dealer key,
	PORSCHE\Panamera\Panamera\Smart key	Program smart key,Make dealer key,
	PORSCHE\Panamera\Panamera 4\Smart key	Program smart key,Make dealer key,
	PORSCHE\Panamera\Panamera S\Smart key	Program smart key,Make dealer key,

PORSCHE\Cayenne\ 2010\Immobilizer	Program key,
PORSCHE\Cayenne\ 2010\Read PIN code	Engine,
PORSCHE\Cayman\2005- 2011\Immobilizer	Program key,Program smart key (without PIN),
PORSCHE\Boxter\2005- 2011\Immobilizer	Program key,Program smart key (without PIN),
PORSCHE\997\2005- 2010\Immobilizer	Program key,Program smart key (without PIN),
PORSCHE\911\2005- 2010\Immobilizer	Program key,Program smart key (without PIN),
PEUGEOT>Select from vehicle\308\Immobilizer\Ty	Program key,
PEUGEOT>Select from vehicle\3008\Immobilizer	Program key,
PEUGEOT>Select from vehicle\307\Immobilizer\Ty	Program key,
PEUGEOT>Select from vehicle\308S\Immobilizer	Program key,
PEUGEOT\Read PIN code	Type 1,Type 2,Type 3,Type 4 (K line),
PEUGEOT>Select from vehicle\4007\Petrol\Smart	All smart key lost,
PEUGEOT>Select from type\Immobilizer\Type 1	Program key,
PEUGEOT>Select from vehicle\207\Immobilizer\Ty	Program key,
PEUGEOT>Select from vehicle\307\Immobilizer\Ty	Program key,
PEUGEOT>Select from vehicle\508\Smart key	All smart key lost,
PEUGEOT>Select from vehicle\508\Immobilizer	Program key,
PEUGEOT>Select from vehicle\408\408(T73)\Immo	Program key,
PEUGEOT>Select from vehicle\408\408(T93)\Immo	Program key,
PEUGEOT>Select from type\Smart key\Type 1	All smart key lost,

PEUGEOT

PEUGEOT>Select from type\Immobilizer\Type 3	Program key,
PEUGEOT>Select from type\Immobilizer\Type 2	Program key,
PEUGEOT>Select from vehicle\1007\Immobilizer\T	Program key,
PEUGEOT>Select from vehicle\206\Immobilizer	Program key,
PEUGEOT>Select from vehicle\406(VF38)\Immobilizer	Program key,
PEUGEOT>Select from vehicle\607\Immobilizer\Ty	Program key,
PEUGEOT>Select from vehicle\807\Immobilizer\Ty	Program key,
PEUGEOT>Select from vehicle\Partner\Immobilizer	Program key,
PEUGEOT>Select from vehicle\1007\Immobilizer\T	Program key,
PEUGEOT>Select from vehicle\207\Immobilizer\Ty	Program key,
PEUGEOT>Select from vehicle\207CC\Immobilizer	Program key,
PEUGEOT>Select from vehicle\407\Immobilizer	Program key,
PEUGEOT>Select from vehicle\5008\Immobilizer	Program key,
PEUGEOT>Select from vehicle\607\Immobilizer\Ty	Program key,
PEUGEOT>Select from vehicle\807\Immobilizer\Ty	Program key,
PEUGEOT>Select from vehicle\Expert\2007-	Program key,
PEUGEOT>Select from vehicle\Partner\Immobilizer	Program key,
PEUGEOT>Select from vehicle\Rcz\Immobilizer	Program key,
PEUGEOT>Select from vehicle\208\Immobilizer	Program key,
PEUGEOT>Select from vehicle\2008\Immobilizer	Program key,

PEUGEOT>Select from vehicle\301\Immobilizer	Program key,
PEUGEOT>Select from type\Immobilizer\Type 4	Read key/remote count,Program immo
PEUGEOT>Select from vehicle\4007\Petrol\Immobi	Read key/remote count,Program immo
PEUGEOT>Select from vehicle\4007\Diesel\Immobi	Read key/remote count,Program immo
PEUGEOT>Select from vehicle\3008\Smart key	All smart key lost,
PEUGEOT>Select from vehicle\4008\Smart	All smart key lost,
PEUGEOT>Select from vehicle\5008\Smart key	All smart key lost,
PEUGEOT>Select from vehicle\4008\Immobilizer\T	Program key,
PEUGEOT>Select from vehicle\1007\Immobilizer\T	Add key,Delete key,Immobiliser ECU
PEUGEOT>Select from vehicle\4008(China)\Smart	All smart key lost,
PEUGEOT>Select from vehicle\4008(China)\Immo	Program key,
PEUGEOT>Select from vehicle\308\Immobilizer\Ty	Program key,
PEUGEOT>Select from type\Replace engine	Replace engine ECU,
PEUGEOT>Select from vehicle\4008\Immobilizer\T	Read key/remote count,Program immo
PEUGEOT>Select from vehicle\Boxer\Immobilizer	Key info.,Program key,Read pin code,Make
PEUGEOT>Select from type\Immobilizer\Type 5	Program key,Decoder programming,Program
PEUGEOT>Select from vehicle\106\Immobilizer	Program key,Decoder programming,Program
PEUGEOT>Select from vehicle\306\Immobilizer	Program key,Decoder programming,Program
PEUGEOT>Select from vehicle\406(VF37)\Immobilizer	Program key,Decoder programming,Program
PEUGEOT>Select from vehicle\806\Immobilizer	Program key,Decoder programming,Program

	PEUGEOT\Select from vehicle\Expert\-	Program key,Decoder programming,Program
	PEUGEOT\Select from vehicle\Partner\Immobilizer	Program key,Decoder programming,Program
	PEUGEOT\Select from vehicle\Ranch\Immobilizer	Program key,Decoder programming,Program
JAGUAR	JAGUAR\Select from vehicle\XF\2013-\Smart	Add smart key,All smart key lost,
	JAGUAR\Select from vehicle\XF\2012\Smart key	Add smart key,All smart key lost,
	JAGUAR\Select from vehicle\XJ\Smart key	Add smart key,All smart key lost,
	JAGUAR\Select from vehicle\F-type\Smart key	Add smart key,All smart key lost,
	JAGUAR\Select from vehicle\S-Type\Immobilizer	All key lost,
	JAGUAR\Select from vehicle\XF\2012\Smart	Delete smart key,Add smart key,
	JAGUAR\Select from vehicle\S-Type\Remote	Program remote>Delete remote,
	JAGUAR\Select from vehicle\X-	All key lost,
	JAGUAR\Select from vehicle\SOVERIGN\Immob	All key lost,
	JAGUAR\Select from vehicle\XJ6\2003-	All key lost,
	JAGUAR\Select from vehicle\XJ8\2003-	All key lost,
	JAGUAR\Select from vehicle\XJR\2004-	All key lost,
	JAGUAR\Select from vehicle\XK\2006-	Program remote,Remote count,
	JAGUAR\Select from vehicle\XKR\2006-	Program remote,Remote count,
	JAGUAR\Select from type\Immobilizer\Type 1	All key lost,
	JAGUAR\Select from type\Smart key\Type 1	Delete smart key,Add smart key,
	JAGUAR\Select from type\Smart key\Type 2	Add smart key,All smart key lost,

JAGUAR>Select from type\Smart key\Type 3	Add smart key,All smart key lost,
JAGUAR>Select from type\Smart key\Type 4	Add smart key,All smart key lost,
JAGUAR>Select from type\Remote\Type 1	Program remote,Remote count,
JAGUAR>Select from type\Remote\Type 2	Program remote>Delete remote,
JAGUAR>Select from vehicle\Jaguar(2015-	Add smart key,
JAGUAR>Select from vehicle\Jaguar(2015-	Add smart key,
JAGUAR>Select from vehicle\Jaguar(2015-	Write-to-start,Read key ID,
JAGUAR>Select from vehicle\Jaguar(2015-	Write smart key(via OBD),Identify smart key,
JAGUAR>Select from vehicle\Jaguar	Copy and add smart key,Identify smart
LAND ROVER>Select from vehicle\Range	Add smart key,All smart key lost,
LAND ROVER>Select from vehicle\Discovery	Generate LKE,Program key,Read VIN code,
LAND ROVER>Select from vehicle\Freelander 2\Smart	Program old smart key,Read VIN
LAND ROVER>Select from vehicle\Old	Program remote,
LAND ROVER>Select from vehicle\Discovery4\Smart	Add smart key,All smart key lost,
LAND ROVER>Select from vehicle\Evoque\Smart key	Add smart key,All smart key lost,
LAND ROVER>Select from vehicle\Freelander 2\Smart	Add smart key,All smart key lost,
LAND ROVER>Select from vehicle\Range	Generate LKE,Program key,Read VIN code,
LAND ROVER>Select from vehicle\Range	Program key,
LAND ROVER>Select from vehicle\Freelander	Add old key,Add new key,Reset engine ECU,
LAND ROVER>Select from vehicle\Freelander\Smart	Program old smart key,Read VIN

LAND ROVER	LAND ROVER\Select from vehicle\Freelander\Remote	Program remote,
	LAND ROVER\Select from vehicle\Defender\Remote\2	Program remote,
	LAND ROVER\Select from type\Immobilizer\Type 1	Add old key,Add new key,Reset engine ECU,
	LAND ROVER\Select from type\Immobilizer\Type 2	Generate LKE,Program key,Read VIN code,
	LAND ROVER\Select from type\Immobilizer\Type 3	Program key,
	LAND ROVER\Select from type\Smart key\Type 1	Program old smart key,Read VIN
	LAND ROVER\Select from type\Smart key\Type 2	Add smart key,All smart key lost,
	LAND ROVER\Select from type\Remote\Type 1	Program remote,
	LAND ROVER\Select from vehicle\Land Rover(2015-	Add smart key,
	LAND ROVER\Select from vehicle\Land Rover(2015-	Add smart key,
	LAND ROVER\Select from vehicle\Land Rover(2015-	Write-to-start,Read key ID,
	LAND ROVER\Select from vehicle\Land Rover(2015-	Write smart key(via OBD),Identify smart key,
	LAND ROVER\Select from vehicle\Land Rover	Copy and add smart key,Identify smart
	LINCOLN\MKC\Smart key\~2017	Add smart key,All smart key lost,
	LINCOLN\MKZ\Smart key\2013-2017	Add smart key,All smart key lost,
LINCOLN\Navigator\Immobilizer\2010-2014	Add key,All key lost,	
LINCOLN\MKS\Smart key	Delete smart key,Add smart key,Read smart key	
LINCOLN\MKT\Smart key	Delete smart key,Add smart key,Read smart key	
LINCOLN\MKX\Smart key\2011-2015	Delete smart key,Add smart key,Read smart key	
LINCOLN\Town Car\2005-2010\Immobilizer	Program key,	

LINCOLN

LINCOLN\MKX\Smart key\2016-2017	Add smart key,All smart key lost,
LINCOLN\Continental\Smart key\2017	Add smart key,All smart key lost,
LINCOLN\Navigator\Remote	Program remote,Delete remote,
LINCOLN\Aviator\2003-2005\Immobilizer	Program key,All key lost,Key count,
LINCOLN\Blackwood\2002\Immobilizer	Program key,All key lost,Key count,
LINCOLN\Continental\Immobilizer\1998-2002	Program key,All key lost,Key count,
LINCOLN\LS\2000-2006\Immobilizer	Program key,All key lost,Key count,
LINCOLN\Mark LT\2005-2007\Immobilizer	Program key,All key lost,Key count,
LINCOLN\Mark LT\2008\Immobilizer	Program key,All key lost,Key count,
LINCOLN\Mark VIII\1997-1998\Immobilizer	Delete key,Key count,
LINCOLN\MKS\Immobilizer	Program key,All key lost,Key count,
LINCOLN\MKX\Immobilizer\Petrol\2007-2010	Program key,All key lost,Key count,
LINCOLN\MKX\Immobilizer\Petrol\2010-2012	Program key,All key lost,Key count,
LINCOLN\MKX\Immobilizer\Hybrid	Program key,All key lost,Key count,
LINCOLN\MKZ\Immobilizer\2007-2010	Program key,All key lost,Key count,
LINCOLN\MKZ\Immobilizer\2010-2013	Program key,All key lost,Key count,
LINCOLN\MKZ\Immobilizer\2013-	Add key,All key lost,Read key count,
LINCOLN\MKZ\Smart key\2011-	Delete smart key,Add smart key,Read smart key
LINCOLN\Navigator\Immobilizer\1997-1998	All key lost,Key count,
LINCOLN\Navigator\Immobilizer\1999-2002	Program key,All key lost,Key count,

	LINCOLN\Navigator\Immobilizer\2003-2004	Program key,All key lost,Key count,
	LINCOLN\Navigator\Immobilizer\2005-2006	Program key,All key lost,Key count,
	LINCOLN\Navigator\Immobilizer\2007-2009	Program key,All key lost,Key count,
	LINCOLN\Navigator\Smart key\2015	Delete smart key,Add smart key,Read smart key
	LINCOLN\Town Car\1998-2002\Immobilizer	Program key,All key lost,Key count,
	LINCOLN\Town Car\2003-2004\Immobilizer	Program key,All key lost,Key count,
	LINCOLN\Zephyr\2006\Immobilizer	Program key,All key lost,Key count,
	LINCOLN\PCM IMMO\Immobilizer	All key lost,Read key count,
	LINCOLN\Navigator\Smart key\2018-2019	Add smart key,All smart key lost,Alarm unlock,
	LINCOLN\Nautilus\Smart key\2018-2019	Add smart key,All smart key lost,Alarm unlock,
	LINCOLN\MKC\Smart key\2017-	Add smart key,All smart key lost,Alarm unlock,
	LINCOLN\MKZ\Smart key\2017-	Add smart key,All smart key lost,Alarm unlock,
	LINCOLN\MKX\Smart key\2017-	Add smart key,All smart key lost,Alarm unlock,
	LINCOLN\Continental\Smart key\2017-	Add smart key,All smart key lost,Alarm unlock,
LAMBORGHINI	LAMBORGHINI\LP560\Remote	Program remote,Delete remote,
	LAMBORGHINI\LP570\Remote	Program remote,Delete remote,
	LAMBORGHINI\LP580\Key (smart key) programming	Backup immo data,Make dealer key,Learn key,Clear
	LAMBORGHINI\LP610\Key (smart key) programming	Backup immo data,Make dealer key,Learn key,Clear
	LAMBORGHINI\LP700\Key (smart key) programming	Backup immo data,Make dealer key,Learn key,Clear
	LEXUS\Select from vehicle\ES240\Smart key	Add smart key,Delete smart key,

LEXUS>Select from vehicle\CT200H\2012-	Add smart key,Delete smart key,
LEXUS>Select from vehicle\ES250\2012-\Smart	Add smart key,Delete smart key,
LEXUS>Select from vehicle\ES350\Smart key	Add smart key,Delete smart key,
LEXUS>Select from vehicle\RX270\Smart key	Add smart key,Delete smart key,
LEXUS>Select from vehicle\IS300\Smart key	Smart key registration,Delete smart
LEXUS>Select from vehicle\GS300\2006-	Smart key registration,Delete smart
LEXUS>Select from vehicle\ES200\Smart key	Add smart key,Delete smart key,
LEXUS\All smart key lost\All key lost	Backup EEPROM data,Generate SKE,Bind
LEXUS>Select from vehicle\CT200H\2010\Sma	Add smart key,Delete smart key,Reset
LEXUS>Select from vehicle\ES300\2002-	Add master key,Add valet key,Delete key,Clear fault
LEXUS>Select from vehicle\ES300\2002-	Remote program method,
LEXUS>Select from vehicle\ES300H\2012-	Add smart key,Delete smart key,Reset
LEXUS>Select from vehicle\ES330\2003-	Add key,Delete key,All key lost,Immobiliser ECU
LEXUS>Select from vehicle\GS300\1998-	Program remote,Delete remote,
LEXUS>Select from vehicle\GS300\2002-	Add master key,Add valet key,Delete key,Clear fault
LEXUS>Select from vehicle\GS300\2002-	Program remote,Delete remote,
LEXUS>Select from vehicle\GS300\2006-	Add smart key,Delete smart key,Reset
LEXUS>Select from vehicle\GS350\2006-	Add smart key,Delete smart key,Reset
LEXUS>Select from vehicle\GS350\2006-	Smart key registration,Delete smart
LEXUS>Select from vehicle\GS350\2009-	Add smart key,Delete smart key,Reset

LEXUS\Select from vehicle\GS430\2001-	Add master key,Add valet key,Delete key,Clear fault
LEXUS\Select from vehicle\GS430\2001-	Program remote,Delete remote,
LEXUS\Select from vehicle\GS430\2005-	Smart key registration,Delete smart
LEXUS\Select from vehicle\GS430\2006-	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\GS450H\2007-	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\GS450H\2008-	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\GS460\2008-	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\GX460\2003-	Add key,Delete key,All key lost,Immobiliser ECU
LEXUS\Select from vehicle\GX460\2010-	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\GX470\2003-	Add key,Delete key,All key lost,Immobiliser ECU
LEXUS\Select from vehicle\GX470\2003-	Program remote,Delete remote,
LEXUS\Select from vehicle\GX470\2003-	Remote program method,
LEXUS\Select from vehicle\HS250H\2008-	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\IS200\Mechanical	Remote program method,
LEXUS\Select from vehicle\IS250\2006-	Smart key registration,Delete smart
LEXUS\Select from vehicle\IS250\2011\Smart	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\IS250\2012-	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\IS250\2014-\Smart	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\IS250C\2009-	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\IS300\Mechanical	Add master key,Add valet key,Delete key,Clear fault

LEXUS

LEXUS\Select from vehicle\IS300\Mechanical	Program remote,Delete remote,
LEXUS\Select from vehicle\IS350\2006-	Smart key registration,Delete smart
LEXUS\Select from vehicle\IS250\2014-	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\LS400\1998-	Program remote,Delete remote,
LEXUS\Select from vehicle\LS430\2001-	Add master key,Add valet key,Delete key,Clear fault
LEXUS\Select from vehicle\LS430\2001-	Program remote,Delete remote,
LEXUS\Select from vehicle\LS430\2001-	Remote program method,
LEXUS\Select from vehicle\LS430\2001-	Add key,Delete key,All key lost,Immobiliser ECU
LEXUS\Select from vehicle\LS430\2001-	Program remote,Delete remote,
LEXUS\Select from vehicle\LS430\2001-	Remote program method,
LEXUS\Select from vehicle\LS430\2001-	Smart key registration,Delete smart
LEXUS\Select from vehicle\LS460\2007-	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\LS460\2013-\Smart	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\LS460H\2007-	Remote program method,
LEXUS\Select from vehicle\LS460H\2007-	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\LS460H\2008-	Remote program method,
LEXUS\Select from vehicle\LX470\2001-	Add master key,Add valet key,Delete key,Clear fault
LEXUS\Select from vehicle\LX470\2003-	Add key,Delete key,All key lost,Immobiliser ECU
LEXUS\Select from vehicle\LX470\2003-	Program remote,Delete remote,
LEXUS\Select from vehicle\LX470\2003-	Remote program method,

LEXUS\Select from vehicle\LX570\2008-	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\RX300\1999-	Program remote,Delete remote,
LEXUS\Select from vehicle\RX300\2003-	Add key,Delete key,All key lost,Immobiliser ECU
LEXUS\Select from vehicle\RX300\2003-	Program remote,Delete remote,
LEXUS\Select from vehicle\RX300\2003-	Remote program method,
LEXUS\Select from vehicle\RX330\2004-	Add key,Delete key,All key lost,Immobiliser ECU
LEXUS\Select from vehicle\RX330\2004-	Program remote,Delete remote,
LEXUS\Select from vehicle\RX330\2004-	Remote program method,
LEXUS\Select from vehicle\RX350\2007-	Add key,Delete key,All key lost,Immobiliser ECU
LEXUS\Select from vehicle\RX350\2007-	Program remote,Delete remote,
LEXUS\Select from vehicle\RX350\2007-	Remote program method,
LEXUS\Select from vehicle\RX350\2010-	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\RX400H\2005-	Add key,Delete key,All key lost,Immobiliser ECU
LEXUS\Select from vehicle\RX400H\2005-	Program remote,Delete remote,
LEXUS\Select from vehicle\RX400H\2005-	Remote program method,
LEXUS\Select from vehicle\RX450H\2010-	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\RX450H\2012\Sma	Add smart key,Delete smart key,Reset
LEXUS\Select from vehicle\SC430\2002-	Add key,Delete key,All key lost,Immobiliser ECU
LEXUS\Select from vehicle\SC430\2002-	Program remote,Delete remote,
LEXUS\Select from vehicle\SC430\2002-	Remote program method,

	LEXUS\Select from type\IMMO\Type 1	Add master key,Add valet key,Delete key,Clear fault
	LEXUS\Select from type\IMMO\Type 2	Add key,Delete key,All key lost,Immobiliser ECU
	LEXUS\Select from type\Remote	Program remote,Delete remote,
	LEXUS\Select from type\PEPS\Type 1	Add smart key,Delete smart key,Reset
	LEXUS\Select from type\PEPS\Type 2	Smart key registration,Delete smart
	LEXUS\Select from vehicle\IS250C\2009-	Add smart key,Delete smart key,Reset smart key,
	LEXUS\Select from vehicle\RX300\1999-	Add master key,Add valet key,Delete key,Clear fault
	LEXUS\Select from vehicle\RX300\2016-	Add smart key,Delete smart key,Reset
	LEXUS\Select from type\PEPS\Type 3	Add smart key,Delete smart key,Reset
DS	DS\Select from vehicle\DS4\Smart key	All smart key lost,
	DS\Read PIN code	Type 1,Type 2,Type 3,Type 4 (K line),
	DS\Select from type\Immobilizer\Type 1	Program key,
	DS\Select from type\Smart key\Type 1	All smart key lost,
	DS\Select from type\Immobilizer\Type 3	Program key,
	DS\Select from type\Immobilizer\Type 2	Program key,
	DS\Select from vehicle\DS5\Immobilizer\Ty	Program key,
	DS\Select from vehicle\DS5\Immobilizer\Ty	Program key,
	DS\Select from vehicle\DS3\Immobilizer	Program key,
	DS\Select from vehicle\DS4\Immobilizer	Program key,
	DS\Select from vehicle\DS5\Immobilizer\Ty	Program key,

DS\Select from vehicle\DS6\Immobilizer	Program key,
DS\Select from vehicle\DS5\Smart key	All smart key lost,
DS\Select from vehicle\DS6\Smart key	All smart key lost,
DS\Select from type\Immobilizer\Type 4	Read key/remote count,Program immo
DS\Select from type\Replace engine	Replace engine ECU,
SUBARU\Select from type\Immobilizer\Type 1	All key lost,
SUBARU\Select from type\Smart key\Type C	Add smart key,Delete smart key,Register smart
SUBARU\Select from type\Smart key\Type	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from type\Immobilizer\Type	Add key,Delete key,Check key count,Register
SUBARU\Select from type\Remote\Type 1	Add remote,Clear remote,
SUBARU\Select from type\Immobilizer\Type 3	Add key,Read PIN code,
SUBARU\Select from type\Immobilizer\Type 4	Key count,Add key,
SUBARU\Select from type\Immobilizer\Type 5	Key count,Add key,Delete key,Add remote,Delete
SUBARU\Select from type\Smart key\Type 3	Key count,Add key,Delete key,Add remote,Delete
SUBARU\Select from type\Smart key\Type 4	Key count,Add key,
SUBARU\Select from type\Remote\Type 2	Add remote,
SUBARU\Select from type\Remote\Type 3	Add remote,
SUBARU\Select from type\Immobilizer\Type	Check key count,Add key,All key lost,Delete
SUBARU\Select from type\Smart key\Type 5	Add smart key,Delete smart key,Generate LKE,
SUBARU\Select from vehicle\China\B4\2009-	Add smart key,Delete smart key,Key count,Read

SUBARU\Select from vehicle\China\Baja\2005-	All key lost,
SUBARU\Select from vehicle\China\Brz\2013-	Key count,Add key,Delete key,Add remote,Delete
SUBARU\Select from vehicle\China\Brz\2013-	Add smart key,Delete smart key,Generate LKE,
SUBARU\Select from vehicle\China\Crosstrek\20	Check key count,Add key,All key lost,Delete
SUBARU\Select from vehicle\China\Crosstrek\20	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\China\Forester\201	Check key count,Add key,All key lost,Delete
SUBARU\Select from vehicle\China\Forester\201	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\China\Impreza\With	All key lost,
SUBARU\Select from vehicle\China\Impreza\With	Check key count,Add key,All key lost,Delete
SUBARU\Select from vehicle\China\Impreza\With	Add smart key,Delete smart key,Key count,Read
SUBARU\Select from vehicle\China\Impreza\With	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\China\Legacy\With	All key lost,
SUBARU\Select from vehicle\China\Legacy\With	Add smart key,Delete smart key,Key count,Read
SUBARU\Select from vehicle\China\Levorg\2015-	Add smart key,Delete smart key,Check key
SUBARU\Select from vehicle\China\Outback\Wit	All key lost,
SUBARU\Select from vehicle\China\Outback\Wit	Add key,Read PIN code,
SUBARU\Select from vehicle\China\Sti	All key lost,
SUBARU\Select from vehicle\China\Tribeca\With	All key lost,
SUBARU\Select from vehicle\China\Tribeca\With	Key count,Add key,Delete key,Add remote,Delete
SUBARU\Select from vehicle\China\Tribeca\With	Add smart key,Delete smart key,Generate LKE,

SUBARU>Select from vehicle\China\XV\2013-	Check key count,Add key,All key lost,Delete
SUBARU>Select from vehicle\China\XV\2013-	Reset PEPS,Add smart key,Delete smart
SUBARU>Select from vehicle\China\XV	Check key count,Add key,All key lost,Delete
SUBARU>Select from vehicle\China\XV	Reset PEPS,Add smart key,Delete smart
SUBARU>Select from vehicle\China\WRX\-	All key lost,
SUBARU>Select from vehicle\China\WRX\2014-	Check key count,Add key,All key lost,Delete
SUBARU>Select from vehicle\China\WRX\2014-	Reset PEPS,Add smart key,Delete smart
SUBARU>Select from vehicle\China\Liberty\2009-	Add smart key,Delete smart key,Key count,Read
SUBARU>Select from vehicle\China\Liberty\2014-	Add smart key,Delete smart key,Key count,Read
SUBARU>Select from vehicle\China\Liberty\2014-	All key lost,
SUBARU>Select from vehicle\China\Forester\201	Add smart key,Delete smart key,Check key
SUBARU>Select from vehicle\China\Outback\Wit	Add smart key,Delete smart key,Check key
SUBARU>Select from vehicle\Africa\Forester\199	Program key,
SUBARU>Select from vehicle\Africa\Outback\199	Program key,
SUBARU>Select from vehicle\Africa\Trezia\2010-	Add smart key,Delete smart key,Reset
SUBARU>Select from vehicle\Asia\Baja\2002-	Program key,
SUBARU>Select from vehicle\Asia\Forester\1997-	Program key,
SUBARU>Select from vehicle\Asia\Forester\2002-	Program key,
SUBARU>Select from vehicle\Asia\Forester\2013-	Program key,
SUBARU>Select from vehicle\Asia\Impreza\2000-	Program key,

SUBARU>Select from vehicle\Asia\Impreza\2007-	Program key,
SUBARU>Select from vehicle\Asia\Impreza\2007-	Add remote,
SUBARU>Select from vehicle\Asia\Impreza\2007-	Program key,
SUBARU>Select from vehicle\Asia\Impreza\2011-	Program key,
SUBARU>Select from vehicle\Asia\Impreza\2013-	Add key,Delete key,Check key count,Register
SUBARU>Select from vehicle\Asia\Legacy\2003-	Program key,
SUBARU>Select from vehicle\Asia\Legacy\2011-	Reset PEPS,Add smart key,Delete smart
SUBARU>Select from vehicle\Asia\Outback\1996-	Program key,
SUBARU>Select from vehicle\Asia\Outback\2003-	Program key,
SUBARU>Select from vehicle\Asia\Sedan\Mecha	Program key,
SUBARU>Select from vehicle\Asia\Tribeca\2006-	Program key,
SUBARU>Select from vehicle\Australia\Brz\2012-	Read key count,Add key,Program
SUBARU>Select from vehicle\Australia\Brz\2012-	Reset PEPS,Add smart key,Delete smart
SUBARU>Select from vehicle\Australia\Brz\2012-	Add smart key,Delete smart key,Generate LKE,
SUBARU>Select from vehicle\Australia\Crosstrek	Add key,Delete key,Check key count,Register
SUBARU>Select from vehicle\Australia\Crosstrek	Reset PEPS,Add smart key,Delete smart
SUBARU>Select from vehicle\Australia\Crosstrek	Add smart key,Delete smart key,Check key
SUBARU>Select from vehicle\Australia\Forester\1	Program key,
SUBARU>Select from vehicle\Australia\Forester\2	Program key,
SUBARU>Select from vehicle\Australia\Forester\2	Program key,

SUBARU\Select from vehicle\Australia\Forester\2	Add smart key,Delete smart key,Register smart
SUBARU\Select from vehicle\Australia\Forester\2	Register engine ECM,
SUBARU\Select from vehicle\Australia\Forester\2	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\Australia\Forester\2	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\Australia\Forester\2	Add smart key,Delete smart key,Check key
SUBARU\Select from vehicle\Australia\Impreza\2	Program key,
SUBARU\Select from vehicle\Australia\Impreza\2	Add smart key,Delete smart key,Register smart
SUBARU\Select from vehicle\Australia\Impreza\2	Register engine ECM,
SUBARU\Select from vehicle\Australia\Impreza\2	Program key,
SUBARU\Select from vehicle\Australia\Impreza\2	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\Australia\Impreza\2	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\Australia\Levorg\20	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\Australia\Liberty\19	Program key,
SUBARU\Select from vehicle\Australia\Liberty\20	Program key,
SUBARU\Select from vehicle\Australia\Liberty\20	Program key,
SUBARU\Select from vehicle\Australia\Liberty\20	Add smart key,Delete smart key,Register smart
SUBARU\Select from vehicle\Australia\Liberty\20	Register engine ECM,
SUBARU\Select from vehicle\Australia\Liberty\20	Add key,Read PIN code,
SUBARU\Select from vehicle\Australia\Liberty\20	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\Australia\Liberty\20	Add key,Delete key,Check key count,Register

SUBARU

SUBARU\Select from vehicle\Australia\Outback\1	Program key,
SUBARU\Select from vehicle\Australia\Outback\1	Program key,
SUBARU\Select from vehicle\Australia\Outback\2	Program key,
SUBARU\Select from vehicle\Australia\Outback\2	Program key,
SUBARU\Select from vehicle\Australia\Outback\2	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\Australia\Outback\2	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\Australia\Outback\2	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\Australia\Tribeca\2	Program key,
SUBARU\Select from vehicle\Australia\Tribeca\2	Add remote,
SUBARU\Select from vehicle\Australia\Wrx\2014-	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\Australia\Wrx\2014-	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\Europe\Baja\2002-	Program key,
SUBARU\Select from vehicle\Europe\Crosstrek	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\Europe\Crosstrek	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\Europe\Forester\19	Program key,
SUBARU\Select from vehicle\Europe\Forester\20	Program key,
SUBARU\Select from vehicle\Europe\Forester\20	Program key,
SUBARU\Select from vehicle\Europe\Forester\20	Register engine ECM,
SUBARU\Select from vehicle\Europe\Forester\20	Add smart key,Delete smart key,Register smart
SUBARU\Select from vehicle\Europe\Forester\20	Add key,Delete key,Check key count,Register

SUBARU\Select from vehicle\Europe\Forester\20	Program key,
SUBARU\Select from vehicle\Europe\Impreza\19	Program key,
SUBARU\Select from vehicle\Europe\Impreza\20	Program key,
SUBARU\Select from vehicle\Europe\Impreza\20	Program key,
SUBARU\Select from vehicle\Europe\Impreza\20	Program key,
SUBARU\Select from vehicle\Europe\Impreza\20	Add smart key,Delete smart key,Register smart
SUBARU\Select from vehicle\Europe\Impreza\20	Register engine ECM,
SUBARU\Select from vehicle\Europe\Impreza\20	Add smart key,Delete smart key,Register smart
SUBARU\Select from vehicle\Europe\Impreza\20	Register engine ECM,
SUBARU\Select from vehicle\Europe\Impreza\20	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\Europe\Justy\2008-	Program key,Delete key,Register immobiliser,
SUBARU\Select from vehicle\Europe\Legacy\200	Program key,
SUBARU\Select from vehicle\Europe\Legacy\200	Program key,
SUBARU\Select from vehicle\Europe\Legacy\200	Program key,
SUBARU\Select from vehicle\Europe\Legacy\200	Add remote,
SUBARU\Select from vehicle\Europe\Legacy\201	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\Europe\Levorg\201	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\Europe\Outback\19	Program key,
SUBARU\Select from vehicle\Europe\Outback\19	Program key,
SUBARU\Select from vehicle\Europe\Outback\20	Program key,

SUBARU\Select from vehicle\Europe\Outback\20	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\Europe\Sedan\Mec	Program key,
SUBARU\Select from vehicle\Europe\STi\2014-	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\Europe\Tribeca\200	Program key,
SUBARU\Select from vehicle\Europe\Tribeca\200	Program key,
SUBARU\Select from vehicle\Europe\Wrx\2014-	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\Middle	Add smart key,Delete smart key,Register smart
SUBARU\Select from vehicle\Middle	Register engine ECM,
SUBARU\Select from vehicle\Middle	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\Middle	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\Middle	Add smart key,Delete smart key,Register smart
SUBARU\Select from vehicle\Middle	Register engine ECM,
SUBARU\Select from vehicle\Middle	Add smart key,Delete smart key,Register smart
SUBARU\Select from vehicle\Middle	Register engine ECM,
SUBARU\Select from vehicle\USA\Ascent\2018-	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\USA\Crosstrek	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\USA\Forester\2018	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\USA\Impreza\2005-	Program key,
SUBARU\Select from vehicle\USA\Impreza\2005-	Add remote,
SUBARU\Select from vehicle\USA\Impreza\2017-	Add key,Delete key,Check key count,Register

SUBARU\Select from vehicle\USA/Canada\Asce	Add smart key,Delete smart key,Check key
SUBARU\Select from vehicle\USA/Canada\Brz\2	Read key count,Add key,Program
SUBARU\Select from vehicle\USA/Canada\Brz\2	Add smart key,Delete smart key,Generate LKE,
SUBARU\Select from vehicle\USA/Canada\Cross	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\USA/Canada\Cross	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\USA/Canada\Cross	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\USA/Canada\Cross	Add smart key,Delete smart key,Check key
SUBARU\Select from vehicle\USA/Canada\Fores	Program key,
SUBARU\Select from vehicle\USA/Canada\Fores	Add remote,
SUBARU\Select from vehicle\USA/Canada\Fores	Program key,
SUBARU\Select from vehicle\USA/Canada\Fores	Add remote,
SUBARU\Select from vehicle\USA/Canada\Fores	Program key,
SUBARU\Select from vehicle\USA/Canada\Fores	Add remote,
SUBARU\Select from vehicle\USA/Canada\Fores	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\USA/Canada\Fores	Reset PEPS,Add smart key,Delete smart
SUBARU\Select from vehicle\USA/Canada\Impre	Program key,
SUBARU\Select from vehicle\USA/Canada\Impre	Add remote,
SUBARU\Select from vehicle\USA/Canada\Impre	Program key,
SUBARU\Select from vehicle\USA/Canada\Impre	Add remote,
SUBARU\Select from vehicle\USA/Canada\Impre	Add key,Delete key,Check key count,Register

SUBARU\Select from vehicle\USA/Canada\Impre	Add smart key,Delete smart key,Check key
SUBARU\Select from vehicle\USA/Canada\Lega	Program key,
SUBARU\Select from vehicle\USA/Canada\Lega	Add remote,
SUBARU\Select from vehicle\USA/Canada\Lega	Program key,
SUBARU\Select from vehicle\USA/Canada\Lega	Add remote,
SUBARU\Select from vehicle\USA/Canada\Lega	Add key,Read PIN code,
SUBARU\Select from vehicle\USA/Canada\Lega	Add remote,
SUBARU\Select from vehicle\USA/Canada\Lega	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\USA/Canada\Lega	Add smart key,Delete smart key,Check key
SUBARU\Select from vehicle\USA/Canada\Lega	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\USA/Canada\Outb	Program key,
SUBARU\Select from vehicle\USA/Canada\Outb	Add remote,
SUBARU\Select from vehicle\USA/Canada\Outb	Program key,
SUBARU\Select from vehicle\USA/Canada\Outb	Add remote,
SUBARU\Select from vehicle\USA/Canada\Outb	Add key,Read PIN code,
SUBARU\Select from vehicle\USA/Canada\Outb	Add remote,
SUBARU\Select from vehicle\USA/Canada\Outb	Add smart key,Delete smart key,Check key
SUBARU\Select from vehicle\USA/Canada\Outb	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\USA/Canada\Outb	Add key,Delete key,Check key count,Register
SUBARU\Select from vehicle\USA/Canada\Tribe	Program key,

	SUBARU\Select from vehicle\USA/Canada\Tribe	Add remote,
	SUBARU\Select from vehicle\USA/Canada\Tribe	Program key,
	SUBARU\Select from vehicle\USA/Canada\Tribe	Add remote,
	SUBARU\Select from vehicle\USA/Canada\Tribe	Program key,
	SUBARU\Select from vehicle\USA/Canada\Tribe	Add remote,
	SUBARU\Select from vehicle\USA/Canada\Wrx\2	Program key,
	SUBARU\Select from vehicle\USA/Canada\Wrx\2	Add remote,
	SUBARU\Select from vehicle\USA/Canada\Wrx\2	Program key,
	SUBARU\Select from vehicle\USA/Canada\Wrx\2	Add remote,
	SUBARU\Select from vehicle\USA/Canada\Wrx\2	Add key,Delete key,Check key count,Register
	SUBARU\Select from vehicle\USA/Canada\Wrx\2	Add key,Delete key,Check key count,Register
	SUBARU\Select from vehicle\USA/Canada\Wrx\2	Add smart key,Delete smart key,Check key
BENTLEY	BENTLEY\Flying Spur\2012 \Immobilizer	Learn key,Read PIN code,
	BENTLEY\Mulsanne\6.8 liter\Immobilizer/Smart key	Backup immo data,Make dealer key,Learn key,Clear
FERRARI	FERRARI\458\Immobilizer	Program key,Backup immo data,Program remote,Make
	FERRARI\F12\Immobilizer	Program key,Backup immo data,Program remote,Make
	FERRARI\F149\Immobilizer	Program key,Backup immo data,Program remote,Make
	LUXGEN\Select from vehicle\Big 7 SUV\Smart	Program smart key,PIN initialization,Program
	LUXGEN\Select from vehicle\5 SEDAN\Smart	Program smart key,PIN initialization,Program
	LUXGEN\Select from vehicle\Big 7 MPV\Smart	Program smart key,PIN initialization,Program

LUXGEN	LUXGEN>Select from vehicle\MASTER	Program smart key,PIN initialization,Program
	LUXGEN>Select from vehicle\U6 SUV\Smart key	Program smart key,PIN initialization,Program
	LUXGEN>Select from vehicle\Big 7	Program smart key,PIN initialization,Program
	LUXGEN>Select from vehicle\Big 7	Program smart key,PIN initialization,Program
	LUXGEN>Select from vehicle\5	Program smart key,PIN initialization,Program
	BAIC\Immobilizer\D50	Check key count,Add key,Delete key,
	BAIC\Immobilizer\X25	Program key,Delete key,
	BAIC\Immobilizer\X35	Program key,Delete key,
	BAIC\Immobilizer\X55	Program key,Delete key,
	BAIC\Immobilizer\X65	Program key,Delete key,
	BAIC\Immobilizer\E series	Program key,Delete key,Check key
	BAIC\Immobilizer\D20	Program key,Delete key,Check key
	BAIC\Immobilizer\BJ40	Program key,
	BAIC\Immobilizer\BJ80	Program key,
	BAIC\Immobilizer\S3	Program key,Delete key,Reset PIN code,Reset
	BAIC\Smart key\BJ80	Program smart key,
	BAIC\Smart key\CC(C60F)	Program smart key,
	BAIC\Smart key\D280	Program smart key,
	BAIC\Smart key\D50(C50E)	Program smart key,
	BAIC\Smart key\D60	Program smart key,

BAIC

BAIC\Smart key\D61	Program smart key,
BAIC\Smart key\D70(C70G)	Program smart key,
BAIC\Smart key\D80(C80G)	Program smart key,
BAIC\Smart key\X55	Program smart key,
BAIC\Smart key\X65	Program smart key,
BAIC\Immobilizer\S50	Program key,Delete key,
BAIC\Immobilizer\S3L	Program key,Delete key,Reset PIN code,Reset
BAIC\Immobilizer\S2	Program key,Delete key,Reset PIN code,Reset
BAIC\Immobilizer\H2	Program key,Delete key,Reset PIN code,Reset
BAIC\Immobilizer\H6	Program key,Delete key,Reset PIN code,Reset
BAIC\Smart key\BJ40	Program smart key,
BAIC\Smart key\H3	Program smart key,Program ESCL,
BAIC\Smart key\H3F	Program smart key,Program ESCL,
BAIC\Smart key\S3L	Program smart key,
BAIC\Smart key\S6	Program smart key,
BAIC\Smart key\H2	Program smart key,
BAIC\Remote\BJ40L	Program remote,
BAIC\Remote\S6	Program remote,
BAIC\Immobilizer\BJ40LT ype 1	Read key count,Program key,Delete key,
BAIC\Immobilizer\EX200	Program key,Delete key,

	BAIC\Immobilizer\EX260	Program key,Delete key,
	BAIC\Immobilizer\EU220	Add key,Delete key,
	BAIC\Immobilizer\EU260	Add key,Delete key,
	BAIC\Immobilizer\EV150	Program key,Delete key,
	BAIC\Immobilizer\EV150	Program key,Delete key,
	BAIC\Immobilizer\EV160	Program key,Delete key,
	BAIC\Immobilizer\EV200	Program key,Delete key,
	BAIC\Smart key\S50	Program smart key,
	BAIC\Smart key\S5	Program smart key,Program ESCL,
	BAIC\Smart key\D230	Program smart key,
	BAIC\Immobilizer\BJ20\Ty pe 1	Program key,
	BAIC\Smart key\BJ20	Program smart key,
BAOJUN	BAOJUN\BAOJUN\Immobilizer\560	Check key count,Program key,Delete key,Reset
	BAOJUN\BAOJUN\Immobilizer\330	Check key count,Program key,Delete key,
	BAOJUN\BAOJUN\Smart key\560	Add key,All key lost,Key count,
	BAOJUN\BAOJUN\Immobilizer\310	Check key count,Program key,Delete key,Reset
	BAOJUN\BAOJUN\Immobilizer\730	Check key count,Program key,Delete key,Reset
	BAOJUN\BAOJUN\Immobilizer\630	Read key count,Program key,Delete key,Program
	BAOJUN\BAOJUN\Immobilizer\610	Read key count,Program key,Delete key,Program
	BAOJUN\BAOJUN\Immobilizer\510	Check key count,Program key,Delete key,Reset

	BAOJUN\BAOJUN\Smart key\730	Add key,All key lost,Key count,
	BAOJUN\BAOJUN\Smart key\510	Add key,All key lost,
	BAOJUN\BAOJUN\Smart key\310 Wagon	Add key,All key lost,
	BAOJUN\BAOJUN\Immobilizer\530	Check key count,Program key,Delete key,Reset
YEMA AUTO	YEMA AUTO\T70\IMMO	Add key,Delete key,Replace ECM,Replace
	YEMA AUTO\T70\PEPS	Program smart key,Program
	YEMA AUTO\T70\BCM	Program remote,Read key count,
QOROS	QOROS\Smart key	Program 1 smart key,Program 2 smart keys,
	BYD\Smart key\Surui	Read key data,Clear & program working
	BYD\Smart key\Sirui	Read key data,Clear & program working
	BYD\Smart key\Qin	Read key data,Clear & program working
	BYD\Smart key\Tang	Read key data,Clear & program working
	BYD\Smart key\S7	Read key data,Clear & program working
	BYD\Smart key\G5	Read key data,Clear & program working
	BYD\Smart key\G6	Read key data,Clear & program working
	BYD\Smart key\L3	Read key data,Clear & program working
	BYD\Smart key\F3	Read key data,Clear & program working
	BYD\Smart key\S6	Read key data,Clear & program working
	BYD\Smart key\VA	Read key data,Clear & program working
	BYD\Smart key\E6A	Read key data,Clear & program working

BYD

BYD\Smart key\E6B	Read key data,Clear & program working
BYD\Smart key\E6Y	Read key data,Clear & program working
BYD\Smart key\F0	Read key data,Clear & program working
BYD\Smart key\G3	Read key data,Clear & program working
BYD\Smart key\M6	Read key data,Clear & program working
BYD\Smart key\F3R	Read key data,Clear & program working
BYD\Smart key\Song	Read key data,Clear & program working
BYD\Smart key\Qin EV	Read key data,Clear & program working
BYD\Smart key\New F3	Read key data,Clear & program working
BYD\Smart key\Yuan	Read key data,Clear & program working
BYD\Smart key\E5	Read key data,Clear & program working
BYD\Smart key\F3CK	Read key data,Clear & program working
BYD\Smart key\F6	Read key data,Clear & program working
BYD\Smart key\G3R	Read key data,Clear & program working
BYD\Smart key\K9A	Read key data,Clear & program working
BYD\Smart key\K9B	Read key data,Clear & program working
BYD\Smart key\S8	Read key data,Clear & program working
JAC\IMMO\Refine S3\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Benjoy\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Tongyue\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete

JAC\IMMO\Heyue RS\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Heyue sedan\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Yueyue\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Sunray\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Refine S3\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Tongyue\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Heyue RS\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Heyue sedan\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Yueyue\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Heyue A30\MT\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Sunray\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Refine S5\IMMO	Read key count,Add old key,Add new key,Delete
JAC\IMMO\Heyue A30\CVT\Smart PEPS	Read key count,Learn ESCL,Add key,Program
JAC\Remote\16 PIN\Heyue\Type 1	Program remote,
JAC\Remote\16 PIN\Tongyue	Program remote,
JAC\Remote\16 PIN\Benjoy	Program remote,
JAC\Remote\16 PIN\Sunray	Program remote,
JAC\Remote\16 PIN\Three-ring remote	Program remote,
JAC\Remote\16 PIN\Refine M5	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine S2	Program remote,Delete remote,Remote count,

JAC

JAC\Remote\16 PIN\Refine S3	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine S5	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine HeChang	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Heyue A30(CVT)	Program remote,Delete remote,Remote count,
JAC\IMMO\Refine S5\PEPS	Program ESCL,Add old key,Add new key,Delete
JAC\Remote\16 PIN\Refine M3	Program remote,
JAC\Remote\16 PIN\IEV5(EV)	Program remote,
JAC\IMMO\Refine S2\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Refine S2\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Refine M3\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\IMMO\Heyue A30\CVT\UAES IMMO	Clear fault code,Read key count,Add key,Detect
JAC\Remote\10 PIN\Type 1	Program remote,
JAC\Remote\10 PIN\Type 2	Program remote,
JAC\IMMO\Refine S3\IMMO	Read key count,Add old key,Add new key,Delete
JAC\IMMO\Refine A60\PEPS	Program ESCL,Add old key,Add new key,Delete
JAC\IMMO\Refine S2\PEPS	Program ESCL,Add old key,Add new key,Delete
JAC\IMMO\Refine S2 mini\IMMO	Read key count,Add old key,Add new key,Delete
JAC\IMMO\Refine S3\PEPS	Program ESCL,Add old key,Add new key,Delete
JAC\IMMO\Refine S5\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
JAC\IMMO\Refine S5\UAES IMMO	Clear fault code,Read key count,Add key,Detect

JAC\IMMO\Refine S7\IMMO	Read key count,Add old key,Add new key,Delete
JAC\IMMO\Refine S7\PEPS	Program ESCL,Add old key,Add new key,Delete
JAC\IMMO\Refine M4\IMMO	Read key count,Add old key,Add new key,Delete
JAC\IMMO\Refine M5\PEPS	Program ESCL,Add old key,Add new key,Delete
JAC\IMMO\Sunray\IMMO	Read key count,Add old key,Add new key,Delete
JAC\Remote\16 PIN\Refine M4	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine S2 mini	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\Refine S7	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\6S EV	Program remote,Delete remote,Remote count,
JAC\Remote\16 PIN\He Yue\Type 2	Program remote,
ZOTYE\A1\IMMO\Shangha i Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset
ZOTYE\Z100\IMMO\Shang hai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset
ZOTYE\Z300\IMMO\Shang hai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset
ZOTYE\Langyue\IMMO\Sh anghai Industrial Traffic	Clear fault code,Reset PIN code,Program key,Reset
ZOTYE\Langjun\IMMO\Sh anghai Industrial Traffic	Clear fault code,Reset PIN code,Program key,Reset
ZOTYE\Z300\IMMO\Lianch uang IMMO	Clear fault code,Read key count,Add key,Delete
ZOTYE\Domy X5\Remote	Remote count,Program remote,Delete remote,
ZOTYE\SR7\Remote	Remote count,Program remote,Delete remote,
ZOTYE\T600\Remote	Remote count,Program remote,Delete remote,
ZOTYE\Z500\Remote	Remote count,Program remote,Delete remote,

ZOTYE

ZOTYE\Z700\Remote	Remote count,Program remote,Delete remote,
ZOTYE\Z100\Remote	Delete remote,Program remote,
ZOTYE\Langyue\Remote	Delete remote,Program remote,
ZOTYE\Langjun\Remote	Delete remote,Program remote,
ZOTYE\Domy X5\PEPS	Program complete system,Program complete
ZOTYE\T600\PEPS\Naen(Magotan-type key)	Program complete system,Program complete
ZOTYE\SR7\PEPS	Program complete system,Program complete
ZOTYE\Z500\PEPS	Program complete system,Program complete
ZOTYE\Z700\PEPS	Program complete system,Program complete
ZOTYE\5008\PEPS	Program remote A,Program remote
ZOTYE\T200\PEPS	Program remote A,Program remote
ZOTYE\Langlang\PEPS	Program remote A,Program remote
ZOTYE\Z200\PEPS	Program remote A,Program remote
ZOTYE\T600\PEPS\Huofu(Hyundai-type key)	Program new key,Program old key,Program
ZOTYE\Z300\Remote\Type 1	Program remote,Delete remote,
ZOTYE\Z300\Remote\Type 2	Remote count,Program remote,Delete remote,
ZOTYE\2008\PEPS	Program remote A,Program remote
ZOTYE\T600\IMMO	Program key,Delete key,Program
ZOTYE\SR9\PEPS	Program complete system,Program complete
ZOTYE\E30\Remote	Remote count,Program remote,Delete remote,

ZOTYE\X7\Remote	Remote count,Program remote,Delete remote,
ZOTYE\X7\PEPS	Program complete system,Program complete
ZOTYE\SR9\Remote	Remote count,Program remote,Delete remote,
ZOTYE\T300\Atech BCM	Remote count,Program remote,Delete remote,
ZOTYE\T300\PEPS	Program complete system,Program complete
ZOTYE\T300\BCM	Remote count,Program remote,Delete remote,
ZOTYE\T700\PEPS	Program complete system,Replace
ZOTYE\E200\PEPS	Program smart key,Delete smart key,Set PSN,Set
ZOTYE\Z360\IMMO\Shanghai Industrial Traffic IMMO	Clear fault code,Reset PIN code,Program key,Reset
ZOTYE\Z360\IMMO\Lianchuan IMMO	Clear fault code,Read key count,Add key,Delete
ZOTYE\Z360\Remote\Type 1	Program remote,Delete remote,
ZOTYE\Z360\Remote\Type 2	Remote count,Program remote,Delete remote,
ZOTYE\Z360\PEPS	Program complete system,Program complete
ZOTYE\Z560\Remote	Remote count,Program remote,Delete remote,
ZOTYE\Z560\PEPS	Program complete system,Program complete
ZOTYE\Z300\PEPS	Program complete system,Program complete
ZOTYE\T500\Remote	Remote count,Program remote,Delete remote,
ZOTYE\T500\PEPS	Program complete system,Program complete
FAW RED FLAG>Select from type\PEPS\Type 1	Smart key registration,Program
FAW RED FLAG>Select from vehicle\HQ300\Type 1	Smart key registration,Program

FAW RED FLAG	FAW RED FLAG>Select from type\PEPS\Type 2	Delete smart key,Add smart key,
	FAW RED FLAG>Select from vehicle\H7\Type 2	Delete smart key,Add smart key,
	FAW RED FLAG>Select from type\IMMO \VW	Program key,
	FAW RED FLAG>Select from vehicle\Ming Shi\VW	Program key,
JMC	JMC\S350\PEPS\Type 1(old)	Program key,
	JMC\S330\PEPS	Program key,
ZHENGZHOU MAZDA	ZHENGZHOU MAZDA\IMMO\Lianchuang	Write immo VIN code,Write engine VIN code,Engine
ISUZU	ISUZU\D-Max\Key\Type 1(46 chip)	Program key,Delete key,Clear fault code,Reset
	ISUZU\MU-7\Immobilizer\46 chip	Program key,Delete key,Clear fault code,Reset
	ISUZU\D-Max\Key\Type 2	Program access control and start system,Reset
	ISUZU\MU-X\Smart key\Type 1	Program access control and start system,Reset
	ISUZU\D-Max\Smart key\Type 1	Add smart key,Delete smart key,
	ISUZU\MU-X\Smart key\Type 2	Add smart key,Delete smart key,
	ISUZU\D-Max\Remote	Program remote,Delete remote,
	ISUZU\TF\IMMO 2008-2012	Add key,Delete key,Clear fault code,
	ISUZU\D-Max\Immobilizer\Type 3(48	Program key,Delete key,Read key data,Clear
	ISUZU\MU-7\Immobilizer\48 chip	Program key,Delete key,Read key data,Clear
	ISUZU\MU-X\Remote	Program remote,Delete remote,
	ISUZU\Rodeo\Immobilizer\46 chip	Program key,Delete key,Clear fault code,Reset
	ISUZU\Rodeo\Immobilizer\48 chip	Program key,Delete key,Read key data,Clear

	ISUZU\ID-Max\Smart key\Type 2(2017-2019)	Program access control and start system,Reset
WULING MOTORS	WULING MOTORS\S1\Immobilizer	Check key count,Program key,Delete key,Reset
	WULING MOTORS\S3\Immobilizer	Check key count,Program key,Delete key,Reset
	WULING MOTORS\S3\Smart key	Query key count,Add key,All key lost,
	WULING MOTORS\Journey\Smart	Query key count,Add key,All key lost,
	WULING MOTORS\Journey\Immobil	Check key count,Program key,Delete key,Reset
	WULING MOTORS\Journey\Remote	Program remote,
	WULING MOTORS\S1 (sports)\Immobilizer	Check key count,Program key,Delete key,Reset
SOUEAST MOTORS	SOUEAST MOTORS\DX7\PEPS	Program key,Read PIN code,
	SOUEAST MOTORS\DX3\PEPS	Read PIN code,Program key,
	SOUEAST MOTORS\V6\PEPS	All key lost,Learning status,Clear PEPS,Clear
	SOUEAST MOTORS\V3\Industrial	Program immobiliser,Program
	SOUEAST MOTORS\GALANT\Mitsubi	Clear fault code,Read key count,Program key,Reset
	SOUEAST MOTORS\SOVERAN\Mits	Clear fault code,Read key count,Program key,Reset
	SOUEAST MOTORS\DX3\Mechanical	Program key,
	SOUEAST MOTORS\DX3\Mechanical	Program remote,
TIANJIN FAW\IMMO	\Vela(MT34)	Reset immo(4C chip),
	\Xenia S80	Add key,
	\N5	Add key,
	\New N5	Add key,

TIANJIN FAW	TIANJIN FAW\IMMO\N7	Add key,
	TIANJIN FAW\IMMO\D60	Add key,
	TIANJIN FAW\IMMO\Vizhi V5\ECU IMMO initialization	Type 1,Type 2,Type 3,
	TIANJIN FAW\PEPS\D60	Program ESCL,Program PEPS,Delete smart
	TIANJIN FAW\Remote\D60	Program remote,Read remote count,Delete
	TIANJIN FAW\IMMO\Vizhi V5\IMMO	Add key,
	TIANJIN FAW\IMMO\Vizhi(MT34	Reset immo(4C chip),
	TIANJIN FAW\IMMO\Vizhi V5\Replace ignition coil	Replace imm coil to program key,
	TIANJIN FAW\IMMO\Vela(MT34	Sync engine with IMMO (CAN),
	TIANJIN FAW\IMMO\Vizhi V2\Sync engine and	Sync engine with IMMO (CAN),
	TIANJIN FAW\IMMO\A70	All key lost,
FAW JIABAO	FAW JIABAO\V80\V80L/T80\Inte	Program engine ECU,Program key,Delete
	AEOLUS\S30\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine
	AEOLUS\H30\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine
	AEOLUS\H30 Cross\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine
	AEOLUS\A60\A60- HR16,MR20\BCM	Activate steering wheel lock,
	AEOLUS\A60\A60- HR16,MR20\IMMO\Type 1	Add key,Activate steering wheel lock(all key lost),
	AEOLUS\A60\A60- HR16,MR20\IMMO\Type 2	Add key,Activate steering wheel lock(all key lost),
	AEOLUS\A60\A60- HR16,MR20\PEPS\Type 1	Program smart key,
	AEOLUS\A60\A60- HR16,MR20\PEPS\Type 2	Program smart key,

AEOLUS

AEOLUS\H30\IMMO	Key program status,Reprogram faulty
AEOLUS\H30 Cross\IMMO	Key program status,Reprogram faulty
AEOLUS\S30\ChongQing Integrated IMMO	Key program status,Reprogram faulty
AEOLUS\A30\IMMO	Key program status,Reprogram faulty
AEOLUS\AX3\AX3(DFM A15 MT22.1)[key	Key program status,Reprogram faulty
AEOLUS\AX3\AX3(DFM A14T MT62.1)[key	Key program status,Reprogram faulty
AEOLUS\A60\A60-A16\BCM	Program key,
AEOLUS\A60\A60-A14T\BCM	Program key,
AEOLUS\AX7\BCM	Program key,
AEOLUS\A60\A60-A16\PEPS	Program key,
AEOLUS\AX3\AX3(DFM A14T MT62.1)[button	Program key,
AEOLUS\AX7\PEPS\ -2019	Program key,
AEOLUS\A30\BCM	Replace OBC & program remote,Program remote,
AEOLUS\L60\IMMO	Program key,
AEOLUS\AX3\AX3(DFM A15 MT22.1)[key	Program remote key,
AEOLUS\AX3\AX3(DFM A14T MT62.1)[key	Program remote key,
AEOLUS\MX5\BCM	Program key,
AEOLUS\EVA60EV\BCM	Program key,
DONGFENG FENGXING\Joyear\B11\Lia	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\Joyear\B12\Lia	Write immo VIN code,Write engine VIN code,Engine

DONGFENG FENGXING\Joyear\BH5/B	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\Joyear\BX5/B	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\Joyear\BX3\Li	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\Joyear\XV\Lia	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\Joyear\S50\Lia	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\Joyear\SX5/X5	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\Joyear\SX6\Li	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\Lingzhi\CM7/C	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\Fengxing	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\Fengxing	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\F600/L	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\Joyear\BX5/B	Program compelte system,Program engine
DONGFENG FENGXING\Joyear\S50\PE	Program compelte system,Program engine
DONGFENG FENGXING\Joyear\XV\PE	Program compelte system,Program engine
DONGFENG FENGXING\Joyear\SX5/X5	Program compelte system,Program engine
DONGFENG FENGXING\Joyear\SX6\P	Program compelte system,Program engine
DONGFENG FENGXING\Lingzhi\CM7/C	Program compelte system,Program engine
DONGFENG FENGXING\Fengxing	Program compelte system,Program engine
DONGFENG FENGXING\Fengxing	Program compelte system,Program engine
DONGFENG FENGXING\F600/L	Program compelte system,Program engine

DONGFENG FENGXING

DONGFENG FENGXING\Joyear\BX5/B	Key count,Program key,Delete key,Program
DONGFENG FENGXING\Joyear\S50\B	Key count,Program key,Delete key,Program
DONGFENG FENGXING\Joyear\XV\BC	Key count,Program key,Delete key,Program
DONGFENG FENGXING\Joyear\SX5/X5	Key count,Program key,Delete key,Program
DONGFENG FENGXING\Joyear\SX6\B	Key count,Program key,Delete key,Program
DONGFENG FENGXING\Fengxing	Key count,Program key,Delete key,Program
DONGFENG FENGXING\Fengxing	Key count,Program key,Delete key,Program
DONGFENG FENGXING\F600/L	Key count,Program key,Delete key,Program
DONGFENG FENGXING\Joyear\BX5/B	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\S50\U	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\XV\UA	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\SX5/X5	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\SX6\U	Delete remote,Program remote,
DONGFENG FENGXING\Fengxing	Delete remote,Program remote,
DONGFENG FENGXING\Fengxing	Delete remote,Program remote,
DONGFENG FENGXING\F600/L	Delete remote,Program remote,
DONGFENG FENGXING\Joyear\B11\1.	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\Joyear\B12\1.	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\Joyear\BH5/B	Write immo VIN code,Write engine VIN code,Engine
DONGFENG FENGXING\Joyear\BX3\1.	Write immo VIN code,Write engine VIN code,Engine

	DONGFENG FENGXING\Joyear\B11\PI	DIAS/UMC - read PIN code,
	DONGFENG FENGXING\Joyear\B12\PI	DIAS/UMC - read PIN code,
	DONGFENG FENGXING\Joyear\BH5/B	DIAS/UMC - read PIN code,
	DONGFENG FENGXING\Joyear\BS3\PI	DIAS/UMC - read PIN code,
	DONGFENG FENGXING\Joyear\BX3\PI	DIAS/UMC - read PIN code,
	DONGFENG FENGXING\Joyear\BX5/B	DIAS/UMC - read PIN code,
	DONGFENG FENGXING\Joyear\S50\PI	DIAS/UMC - read PIN code,
	DONGFENG FENGXING\Joyear\SX6\PI	DIAS/UMC - read PIN code,
	DONGFENG FENGXING\Joyear\XV\PI	DIAS/UMC - read PIN code,
	DONGFENG FENGXING\Joyear\BS3\Li	Write immo VIN code,Write engine VIN code,Engine
	DONGFENG FENGXING\Joyear\BS3\U	Delete remote,Program remote,
	DONGFENG FENGXING\Joyear\BS3\P	Program compelte system,Program engine
LEOPAARD	LEOPAARD\CS7\IMMO\Li anchuang IMMO	Write immo VIN code,Write engine VIN code,Engine
	LEOPAARD\CS7\IMMO\D elphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
	LEOPAARD\CS6\IMMO\Pe trol\Siemens IMMO	Program immobiliser,Program
	LEOPAARD\CS6\IMMO\D esel\Siemens IMMO	Program immobiliser,Program
	LEOPAARD\CS7\IMMO\Int egrated IMMO	Set PIN code,Replace IMMO(aftersales),Replace
	LEOPAARD\CS7\BCM\BC M	Program remote,Delete remote,Read key count,
	LEOPAARD\CS10\Integrat ed IMMO(CAN)	Program key,Program immobiliser or EMS,
	LEOPAARD\CS10\Narn PEPS	Add smart key,Delete smart key,Smart key count,

	LEOPAARD\CS4\IMMO\Int egrated IMMO	Set PIN code,Replace IMMO(aftersales),Replace
	LEOPAARD\CS9\Narn PEPS	Add smart key,Delete smart key,Smart key count,
LANDWIND	LANDWIND\Fashion\Siem ens IMMO	Program immobiliser,Program
	LANDWIND\Funwa\Sieme ns IMMO	Program immobiliser,Program
	LANDWIND\X6\Siemens IMMO	Program immobiliser,Program
	LANDWIND\X8- 2016\Siemens IMMO	Program immobiliser,Program
	LANDWIND\X9\Siemens IMMO	Program immobiliser,Program
	LANDWIND\X5\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
	LANDWIND\X8- 2016\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
	LANDWIND\X9\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
	LANDWIND\X5\TungThih PEPS	Clear fault code,Program EMS,Reset EMS,Program
	LANDWIND\X5\Kuwe PEPS	Program ESCL,Program old PEPS,Program
	LANDWIND\X7- 2016\TungThih PEPS	Clear fault code,Program EMS,Reset EMS,Program
	LANDWIND\X8- 2016\Delphi PIN code	Read PIN of Delphi immo,
	LANDWIND\X8- 2016\Siemens PIN code	Read Siemens PIN code,
	LANDWIND\X9\Siemens PIN code	Read Siemens PIN code,
	LANDWIND\Funwa\Sieme ns PIN code	Read Siemens PIN code,
	LANDWIND\Fashion\Siem ens PIN code	Read Siemens PIN code,
	LANDWIND\X7\2017- \TungThih PEPS	Program key,
	LANDWIND\X8\2017- \TungThih PEPS	Program key,

	LANDWIND\X2\PEPS	Program smart key,Program EMS
YOUNG LOTUS	YOUNG LOTUS\IMMO \Original IMMO	Clear fault code,Program key,Delete key,
	YOUNG LOTUS\IMMO \UAES IMMO	Write immo VIN code,Write engine VIN code,Engine
	YOUNG LOTUS\IMMO \Siemens IMMO	Program immobiliser,Program
	CHERY\IMMO\Industrial Traffic IMMO	Program immobiliser,Program
	CHERY\IMMO\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine
	CHERY\IMMO\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
	CHERY\IMMO\Autonomous IMMO	Program new key,Program old key,Delete
	CHERY\PEPS\Type 1	Add new smart key,Add old smart key,Delete smart
	CHERY\PEPS\Type 2	Program smart key,
	CHERY\Remote\A1	Read key count,Program remote,Clear fault code,
	CHERY\Remote\Banner Cloud 1	Read key count,Program remote,Clear fault code,
	CHERY\Remote\QQ3	Read key count,Program remote,Clear fault code,
	CHERY\Remote\QQ6	Read key count,Program remote,Clear fault code,
	CHERY\Remote\Riich M1\Type 1	Read key count,Program remote,Clear fault code,
	CHERY\Remote\Riich M2	Read key count,Program remote,Clear fault code,
	CHERY\Remote\Riich M3	Read key count,Program remote,Clear fault code,
	CHERY\Remote\Riich M5	Read key count,Program remote,Clear fault code,
	CHERY\Remote\Riich X1	Read key count,Program remote,Clear fault code,
CHERY\Remote\V5 series\Type 1	Read key count,Program remote,Clear fault code,	

CHERY

CHERY\Remote\Elegant series	Read key count,Program remote,Clear fault code,
CHERY\Remote\Eastar\Ty pe 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\Tiggo 3\Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\EQ	Read key count,Program remote,Clear fault code,
CHERY\Remote\Tiggo Facelift\Type 1	Read key count,Program remote,Clear fault code,
CHERY\Remote\New QQ	Read key count,Program remote,Clear fault code,
CHERY\Remote\A3	Clear fault code,Program remote,Delete remote,
CHERY\Remote\H5 series	Clear fault code,Program remote,Delete remote,
CHERY\Remote\X5 series	Clear fault code,Program remote,Delete remote,
CHERY\Remote\H3 series	Clear fault code,Program remote,Delete remote,
CHERY\Remote\FENGYU N 2	Clear fault code,Program remote,Delete remote,
CHERY\Remote\New Eastar	Clear fault code,Program remote,Delete remote,
CHERY\Remote\A5\Type 1(Atech)	Clear fault code,Remote count,Program remote,
CHERY\Remote\Banner Cloud 3\Type 1(Atech)	Clear fault code,Remote count,Program remote,
CHERY\Remote\E5	Clear fault code,Remote count,Program remote,
CHERY\Remote\A5\Type 2(kostal)	Program remote,Clear fault code,
CHERY\Remote\Banner Cloud 3\Type 2(kostal)	Program remote,Clear fault code,
CHERY\Remote\Banner Cloud 5\Type 3	Read remote count,Program
CHERY\Remote\Řiich M1\Type 2	Read remote count,Program
CHERY\Remote\G3\Type 1	Read remote count,Program

CHERY\Remote\V5 series\Type 2	Read remote count,Program
CHERY\Remote\Eastar\Type 2	Read remote count,Program
CHERY\Remote\Arrizo M7	Read remote count,Program
CHERY\Remote\QQme series	Read remote count,Program
CHERY\Remote\G2	Program remote,
CHERY\Remote\G3\Type 2	Program remote,
CHERY\Remote\G5	Program remote,
CHERY\Remote\G6	Program remote,
CHERY\Remote\Tiggo 3\Type 2	Program remote,Clear fault code>Delete remote,
CHERY\Remote\Tiggo Facelift\Type 2	Program remote,Clear fault code>Delete remote,
CHERY\Remote\E3	Program remote>Delete remote,Remote count,
CHERY\Remote\Arrizo 3	Program remote>Delete remote,Remote count,
CHERY\Remote\Arrizo 7	Program remote>Delete remote,Remote count,
CHERY\Remote\Arrizo M7(PHEV)	Program remote>Delete remote,Remote count,
CHERY\Remote\Tiggo 5	Program remote>Delete remote,Remote count,
CHERY\Remote\Cowin C3	Program remote>Delete remote,Remote count,
CHERY\Remote\Cowin C3R	Program remote>Delete remote,Remote count,
CHERY\Remote\M16PHEV	Program remote>Delete remote,Remote count,
CHERY\Remote\Arrizo 5	Read remote count,Program remote,
CHERY\Remote\Karry K50	Program remote,Read remote count,

CHERY\IMMO\PIN code	Read PIN of Delphi immo,Read PIN of
CHERY\Remote\Tiggo 7	Program remote,Delete remote,Remote count,
CHERY\Remote\Banner Cloud	Program remote,Remote sync mode,
CHERY\Remote\Banner Cloud 2	Program remote,Remote sync mode,
CHERY\Remote\Banner Cloud 5\Type 1	Program remote,Remote sync mode,
CHERY\Remote\V5 series\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Eastar\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Tiggo 3\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Tiggo Facelift\Type 3	Program remote,Remote sync mode,
CHERY\Remote\Banner Cloud 5\Type 2	Read key count,Program remote,Clear fault code,
GREAT WALL MOTOR\Great	Program immobiliser,Program
GREAT WALL MOTOR\Great	Program immobiliser,Program
GREAT WALL MOTOR\Great	Program immobiliser,Program
GREAT WALL MOTOR\Great	Program immobiliser,Program
GREAT WALL MOTOR\Great	Program immobiliser,Program
GREAT WALL MOTOR\Great	Program immobiliser,Program
GREAT WALL MOTOR\Hover\H1\IMMO	Program immobiliser,Program
GREAT WALL MOTOR\Hover\H6-	Program immobiliser,Program
GREAT WALL MOTOR\Hover\M1\Industri	Program immobiliser,Program
GREAT WALL MOTOR\Hover\M4\Industri	Program immobiliser,Program

GREAT WALL MOTOR\Great	Read key count,Clear fault code,Reset PIN
GREAT WALL MOTOR\Great	Read key count,Clear fault code,Reset PIN
GREAT WALL MOTOR\Great	Read key count,Clear fault code,Reset PIN
GREAT WALL MOTOR\Great	Read key count,Clear fault code,Reset PIN
GREAT WALL MOTOR\Hover\H3\Delphi	Read key count,Clear fault code,Reset PIN
GREAT WALL MOTOR\Hover\H5\Delphi	Read key count,Clear fault code,Reset PIN
GREAT WALL MOTOR\Hover\H5	Read key count,Clear fault code,Reset PIN
GREAT WALL MOTOR\Great	Write immo VIN code,Write engine VIN code,Engine
GREAT WALL MOTOR\Hover\M2\Lianchu	Write immo VIN code,Write engine VIN code,Engine
GREAT WALL MOTOR\Great	Read key count,Clear fault code,Reset PIN
GREAT WALL MOTOR\Hover\H3\Delphi	Read key count,Clear fault code,Reset PIN
GREAT WALL MOTOR\Hover\H5\Delphi	Read key count,Clear fault code,Reset PIN
GREAT WALL MOTOR\Great	Read key count,Reset PIN code,Program key,Delete
GREAT WALL MOTOR\Great	Read key count,Reset PIN code,Program key,Delete
GREAT WALL MOTOR\Hover\H5\Delphi	Read key count,Reset PIN code,Program key,Delete
GREAT WALL MOTOR\Great	Read key count,Reset PIN code,Program key,Delete
GREAT WALL MOTOR\Great	Read key count,Reset PIN code,Program key,Delete
GREAT WALL MOTOR\Hover\H5\Delphi	Read key count,Reset PIN code,Program key,Delete
GREAT WALL MOTOR\Hover\H5	Read key count,Reset PIN code,Program key,Delete
GREAT WALL MOTOR\Great	Read key count,Reset PIN code,Program key,Delete

GREAT WALL MOTOR

GREAT WALL MOTOR\Great	Read key count,Reset PIN code,Program key,Delete
GREAT WALL MOTOR\Hover\H2\PEPS	Program key,Clear ESCL learn status,Clear EMS
GREAT WALL MOTOR\Hover\H6 Coupe\-	Program key,Clear ESCL learn status,Clear EMS
GREAT WALL MOTOR\Great	Program remote,Unlock body ECU,
GREAT WALL MOTOR\Great	Program remote,Unlock body ECU,
GREAT WALL MOTOR\Great	Program remote,Unlock body ECU,
GREAT WALL MOTOR\Hover\H1\BCM\Ty	Program remote,Unlock body ECU,
GREAT WALL MOTOR\Hover\H6\-	Program remote,Unlock body ECU,
GREAT WALL MOTOR\Great	Program all key lost,Program with working
GREAT WALL MOTOR\Great	Program all key lost,Program with working
GREAT WALL MOTOR\Hover\H6\2013-	Program all key lost,Program with working
GREAT WALL MOTOR\Hover\H7\Button-	Program all key lost,Program with working
GREAT WALL MOTOR\Hover\H1\BCM\Ty	Program remote,Unlock body ECU,
GREAT WALL MOTOR\Hover\H3\Remote	Program remote,Unlock body ECU,
GREAT WALL MOTOR\Hover\H5\Remote	Program remote,Unlock body ECU,
GREAT WALL MOTOR\Hover\H6\-	Key detect,Reset engine ECU,Immobiliser ECU
GREAT WALL MOTOR\Hover\H8\Button-	Read key count,Program smart key,Replace
GREAT WALL MOTOR\Hover\H9\-	Read key count,Program smart key,Replace
GREAT WALL MOTOR\PIN code	Read PIN(Lianchuang),Read
GREAT WALL MOTOR\Great	Program immobiliser,Program

GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Clear fault code,Reset PIN
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Clear fault code,Reset PIN
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Reset PIN code,Program key,Delete
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Reset PIN code,Program key,Delete
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Reset PIN code,Program key,Delete
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Reset PIN code,Program key,Delete
GREAT WALL MOTOR\Hover\H2S\PEPS	Delete/program smart key,All smart key lost,Add
GREAT WALL MOTOR\Great	Program all key lost,Program with working
GREAT WALL MOTOR\Hover\H6\2013-	Program all key lost,Program with working
GREAT WALL MOTOR\Hover\H7\Switch-	Program all key lost,Program with working
GREAT WALL MOTOR\Hover\H6\-	Program remote,Unlock body ECU,
GREAT WALL MOTOR\Great	Immo & Remote,
GREAT WALL MOTOR\Hover\H2S\Mech	Program remote,
GREAT WALL MOTOR\Hover\H5(Ann.	Program remote,
GREAT WALL MOTOR\Hover\H3\Delphi-	Program remote,
GREAT WALL MOTOR\Hover\H6(bluesig	Program remote,Unlock body ECU,
GREAT WALL MOTOR\Hover\H6(bluesig	Program remote,Unlock body ECU,
GREAT WALL MOTOR\Great Wall\Wingle	Program remote,Unlock body ECU,
GREAT WALL MOTOR\Hover\H2S\Mech	Program immobiliser,Program
GREAT WALL MOTOR\Hover\H4\PEPS	Program key,Program complete

GREAT WALL MOTOR\Hover\M6\-	Add key,All key lost,
GREAT WALL MOTOR\Great	Delete/learn after-sales key,All key lost,
GREAT WALL MOTOR\Great	Immo & Remote,
GREAT WALL MOTOR\Hover\H6\2018-	Add key,All key lost,
GREAT WALL MOTOR\Hover\H6	Program key after delete,All key lost,Add key,
GREAT WALL MOTOR\Hover\M6\2018-	Program all key lost,Program with working
GREAT WALL MOTOR\Great	Program all key lost,Program with working
GREAT WALL MOTOR\Great	Program all key lost,Program with working
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Reset PIN code,Program key,Delete
GREAT WALL MOTOR\Great Wall\Wingle	Read key count,Clear fault code,Reset PIN
GREAT WALL MOTOR\Hover\H6\2013-	Program remote,Unlock body ECU,
GREAT WALL MOTOR\Hover\H6\2013-	Program remote,Unlock body ECU,
CHANGAN AUTO\Benni Mini\Remote	Read remote count,Program remote,
CHANGAN AUTO\New Benni\Remote	Read remote count,Program remote,
CHANGAN AUTO\Alsvin\V3/V5\Integra	Read remote count,Program remote,
CHANGAN AUTO\Alsvin\V3/V5\Integra	Read remote count,Program
CHANGAN AUTO\Benni\Integrated	Read remote count,Program
CHANGAN AUTO\CX20\Integrated	Read remote count,Program
CHANGAN AUTO\CX30\Integrated	Read remote count,Program
CHANGAN AUTO\Benni\Chongqing	Clear fault code,Reset PIN code,Program key,Delete

CHANGAN AUTO\Jie Xun\Industrial traffic IMMO	Program immobiliser,Program
CHANGAN AUTO\Raimondi\Industrial	Program immobiliser,Program
CHANGAN AUTO\CM8\Industrial	Program immobiliser,Program
CHANGAN AUTO\CV7\Industrial traffic	Program immobiliser,Program
CHANGAN AUTO\CV9\Industrial traffic	Program immobiliser,Program
CHANGAN AUTO\Alsvin\V3\V5\Atech	Read remote count,Program
CHANGAN AUTO\Zhi Xiang\Atech BCM	Read remote count,Program
CHANGAN AUTO\Honor\Atech BCM	Read remote count,Program
CHANGAN AUTO\B301\Atech BCM	Read remote count,Program
CHANGAN AUTO\CX20\Atech BCM	Read remote count,Program
CHANGAN AUTO\CX30\Atech BCM	Read remote count,Program
CHANGAN AUTO\Alsvin\V7\Integrated	Delete remote,Program remote,Read key count,
CHANGAN AUTO\Eado XT\Integrated BCM(C201)	Delete remote,Program remote,Read key count,
CHANGAN AUTO\Raeton\Integrated	Delete remote,Program remote,Read key count,
CHANGAN AUTO\CS15\Integrated	Delete remote,Program remote,Read key count,
CHANGAN AUTO\CS75\Integrated	Delete remote,Program remote,Read key count,
CHANGAN AUTO\Alsvin\V7\Remote	Read key count,Program remote,Clear fault
CHANGAN AUTO\Raeton\Remote	Read key count,Program remote,Clear fault
CHANGAN AUTO\CS15\Remote	Read key count,Program remote,Clear fault
CHANGAN AUTO\CS75\Remote	Read key count,Program remote,Clear fault

CHANGAN AUTO

CHANGAN AUTO\Alsvin\V7\Smart key	Read key count,Program smart key,Clear fault
CHANGAN AUTO\Raeton\PEPS	Read key count,Program smart key,Clear fault
CHANGAN AUTO\CS15\PEPS	Read key count,Program smart key,Clear fault
CHANGAN AUTO\CS35\PEPS	Read key count,Program smart key,Clear fault
CHANGAN AUTO\CS75\PEPS	Read key count,Program smart key,Clear fault
CHANGAN AUTO\Zhi Xiang\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
CHANGAN AUTO\Honor\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
CHANGAN AUTO\CX30\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
CHANGAN AUTO\Oulove\Remote	Read key count,Program remote,Delete remote,
CHANGAN AUTO\CS35\Delphi	Program key,Program remote,Delete key,Delete
CHANGAN AUTO\CS35\Delphi	Program key,Program remote,Delete key,Delete
CHANGAN AUTO\New Benni EV\Integrated BCM	Read remote count,Program
CHANGAN AUTO\CS95\Integrated	Delete remote,Program remote,Read key count,
CHANGAN AUTO\C207\Integrated	Delete remote,Program remote,Read key count,
CHANGAN AUTO\V301\Integrated	Delete remote,Program remote,Read key count,
CHANGAN AUTO\Eado EV\Integrated BCM(C201)	Delete remote,Program remote,Read key count,
CHANGAN AUTO\Eado\Remote	Read key count,Program remote,Clear fault
CHANGAN AUTO\Eado HEV\Remote	Read key count,Program remote,Clear fault
CHANGAN AUTO\Eado XT\Remote	Read key count,Program remote,Clear fault
CHANGAN AUTO\CS95\Remote	Read key count,Program remote,Clear fault

CHANGAN AUTO\C207\Remote	Read key count,Program remote,Clear fault
CHANGAN AUTO\V301\Remote	Read key count,Program remote,Clear fault
CHANGAN AUTO\Eado EV\Remote	Read key count,Program remote,Clear fault
CHANGAN AUTO\Eado\PEPS	Read key count,Program smart key,Clear fault
CHANGAN AUTO\CS95\PEPS\Old	Read key count,Program smart key,Clear fault
CHANGAN AUTO\C207\PEPS	Read key count,Program smart key,Clear fault
CHANGAN AUTO\V301\PEPS	Read key count,Program smart key,Clear fault
CHANGAN AUTO\Eado EV\PEPS	Read key count,Program smart key,Clear fault
CHANGAN AUTO\CX70\PEPS\Type 1	Read key count,Program smart key,Clear fault
CHANGAN AUTO\O uShang\PEPS	Read key count,Program smart key,Clear fault
CHANGAN AUTO\Zun Xing\Lianchuang IMMO	Clear fault code,Add key,Delete key,Detect
CHANGAN AUTO\CX70\Remote	Read key count,Program remote,
CHANGAN AUTO\O uShang\Remote	Delete remote,Program remote,OBC locked,Unlock
CHANGAN AUTO\CS35\Delphi BCM\-	Program key,Delete key,Program
CHANGAN AUTO\Eado\Integrated	Read key count,Program remote,Delete
CHANGAN AUTO\CS55\BCM	Read key count,Program remote,Clear fault code,
CHANGAN AUTO\CS55\PEPS	Read key count,Program smart key,Delete smart
CHANGAN AUTO\Linmax\Integrated	Read key count,Program remote,Clear fault code,
CHANGAN AUTO\Linmax\PEPS	Read key count,Program smart key,Clear fault
GEELY/ENGLON/MAPLE\ GEELY\Vision\Industrial	Program immobiliser,Program

GEELY/ENGLON/MAPLE\ GEELY\Free	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ GEELY\Eagle\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Gleagle\Panda\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Gleagle\GX718\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Gleagle\GX720\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Gleagle\GX7\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Gleagle\GC7\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Gleagle\GX2\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Gleagle\GX9\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Emgrand\EC7(EC7RS)	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Emgrand\EC820\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Emgrand\EC825\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Emgrand\EX8\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Emgrand\FC-2\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Emgrand\GS\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Emgrand\GL\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ MAPLE\Industrial traffic	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ ENGLON\SC5\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ ENGLON\SC6\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ ENGLON\SC7\Industrial	Program immobiliser,Program

GEELY/ENGLON/MAPLE\ ENGLON\SX7\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ ENGLON\Cross\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Gleagle\GX718\LEAR	Program remote,
GEELY/ENGLON/MAPLE\ Gleagle\GX7\LEAR BCM	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand\EC820\LEAR	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand\EC825\LEAR	Program remote,
GEELY/ENGLON/MAPLE\ ENGLON\SX7\LEAR BCM	Program remote,
GEELY/ENGLON/MAPLE\ Gleagle\GX7\Hai La	Program key(aftersales),Clear PEPS
GEELY/ENGLON/MAPLE\ Gleagle\GX9\Hai La	Program key(aftersales),Clear PEPS
GEELY/ENGLON/MAPLE\ Emgrand\EC825\Hai La	Program key(aftersales),Clear PEPS
GEELY/ENGLON/MAPLE\ Emgrand\EV8\Hai La	Program key(aftersales),Clear PEPS
GEELY/ENGLON/MAPLE\ ENGLON\SX7\Hai La	Program key(aftersales),Clear PEPS
GEELY/ENGLON/MAPLE\ Gleagle\GX7\Hai La	Program key,Read key count,
GEELY/ENGLON/MAPLE\ Gleagle\GX9\Hai La	Program key,Read key count,
GEELY/ENGLON/MAPLE\ Emgrand\EC825\Hai La	Program key,Read key count,
GEELY/ENGLON/MAPLE\ Emgrand\EV8\Hai La	Program key,Read key count,
GEELY/ENGLON/MAPLE\ Emgrand\GC9\Hai La	Program key,Read key count,
GEELY/ENGLON/MAPLE\ Emgrand\GL\Hai La	Program key,Read key count,
GEELY/ENGLON/MAPLE\ Emgrand\GS\Hai La	Program key,Read key count,
GEELY/ENGLON/MAPLE\ ENGLON\SX7\Hai La	Program key,Read key count,

GEELY/ENGLON/MAPLE\ Emgrand\EC7(EC7RS)	Learn PEPS,Read key count,Program
GEELY/ENGLON/MAPLE\ Emgrand\EV\Continental	Learn PEPS,Read key count,Program
GEELY/ENGLON/MAPLE\ Emgrand\HEV\Continental	Learn PEPS,Read key count,Program
GEELY/ENGLON/MAPLE\ Emgrand\EC7(EC7RS)	Learn PEPS,Aftersales mode switch,ESCL erase
GEELY/ENGLON/MAPLE\ Emgrand\EV\Continental	Learn PEPS,Aftersales mode switch,ESCL erase
GEELY/ENGLON/MAPLE\ Emgrand\HEV\Continental	Learn PEPS,Aftersales mode switch,ESCL erase
GEELY/ENGLON/MAPLE\ Emgrand\EC820\LEAR	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand\EC825\LEAR	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand\EC820\UAES	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand\EC820\Mitsubishi	Add key,
GEELY/ENGLON/MAPLE\ Emgrand\EC825\Mitsubishi	Add key,
GEELY/ENGLON/MAPLE\ Emgrand\GL\Continental	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand\GS\Continental	Program remote,
GEELY/ENGLON/MAPLE\ Emgrand\X6\UAES BCM	Delete key,Add key,
GEELY/ENGLON/MAPLE\ Emgrand\X6\Narn PEPS	Reset EMS,Reset PEPS,Program
GEELY/ENGLON/MAPLE\ Emgrand\NL-3\PEPS	Delete key,Program old key,Program new key,
GEELY/ENGLON/MAPLE\ ENGLON\TX4\Integrated	Program engine ECU,Reset engine
GEELY/ENGLON/MAPLE\ ENGLON\SC3\Integrated	Program engine ECU,Reset engine
GEELY/ENGLON/MAPLE\ Gleagle\GX720\Continental	Program remote,
GEELY/ENGLON/MAPLE\ GEELY\New	Learn PEPS,Aftersales mode switch,ESCL erase

GEELY/ENGLON/MAPLE

GEELY/ENGLON/MAPLE

GEELY/ENGLON/MAPLE\ENGLON\Ocean	Program immobiliser,Program
GEELY/ENGLON/MAPLE\Gleagle\GX2\IMMO(with	Program immobiliser,Program
GEELY/ENGLON/MAPLE\Gleagle\Panda\IMMO(with	Program immobiliser,Program
GEELY/ENGLON/MAPLE\GEELY\New Free	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ENGLON\New Ocean	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ENGLON\SX725\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ENGLON\New	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ENGLON\New	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ENGLON\New	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ENGLON\SX725\Continent	Program remote,
GEELY/ENGLON/MAPLE\Emgrand\X3\Narn PEPS	Reset EMS,Reset PEPS,Program
GEELY/ENGLON/MAPLE\ENGLON\SX725\Narn	Reset EMS,Reset PEPS,Program
GEELY/ENGLON/MAPLE\Emgrand\S1\UAES PEPS	Key count,Program key,Delete key,Write ESK
GEELY/ENGLON/MAPLE\Emgrand\S1\IMMO	Program immo ECU,Reset immo ECU,
GEELY/ENGLON/MAPLE\Emgrand\X1\BCM	Program remote,Remote count,
GEELY/ENGLON/MAPLE\Emgrand\X3\BCM	Program remote,Remote count,
GEELY/ENGLON/MAPLE\Emgrand\X3\PEPS	Program key,Program key(EOL),
GEELY/ENGLON/MAPLE\ENGLON\SC3\Shanghai	Learn remote,Delete remote,
GEELY/ENGLON/MAPLE\ENGLON\SC7\Shanghai	Learn remote,Delete remote,
GEELY/ENGLON/MAPLE\Emgrand\New	Learn PEPS,Aftersales mode switch,ESCL erase

GEELY/ENGLON/MAPLE\ Emgrand\New	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ ENGLON\New Ocean	Learn remote,Delete remote,
GEELY/ENGLON/MAPLE\ ENGLON\SX718\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ ENGLON\SX718\LEAR	Program remote,
GEELY/ENGLON/MAPLE\ ENGLON\SX718\Narn	Reset EMS,Reset PEPS,Program
GEELY/ENGLON/MAPLE\ ENGLON\SX720\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ ENGLON\SX720\Continent	Program remote,
GEELY/ENGLON/MAPLE\ ENGLON\SX720\Narn	Reset EMS,Reset PEPS,Program
GEELY/ENGLON/MAPLE\ Gleagle\GX718\Continental	Program remote,
GEELY/ENGLON/MAPLE\ Gleagle\GX718\Narn	Reset EMS,Reset PEPS,Program
GEELY/ENGLON/MAPLE\ Gleagle\GX725\Industrial	Program immobiliser,Program
GEELY/ENGLON/MAPLE\ Gleagle\GX725\Narn	Reset EMS,Reset PEPS,Program
GEELY/ENGLON/MAPLE\ Gleagle\GX725\Continental	Program remote,
GEELY/ENGLON/MAPLE\ Gleagle\GX9\Narn PEPS	Reset EMS,Reset PEPS,Program
GEELY/ENGLON/MAPLE\ GEELY\New Free	Learn remote,Delete remote,
GEELY/ENGLON/MAPLE\ Gleagle\Panda\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ GEELY\Vision\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ Gleagle\GC7\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\SC7\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\Cross\Read PIN	Read PIN code,

GEELY/ENGLON/MAPLE\ ENGLON\New Cross\Read	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\New	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\New	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\SC6\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ Gleagle\GX720\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ Gleagle\GX725\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ Gleagle\GX2\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ Gleagle\GX9\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ Emgrand\EX8\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ MAPLE\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\SC5\Read PIN of	Read PIN code,
GEELY/ENGLON/MAPLE\ Emgrand\EC820\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ Emgrand\EC825\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\SX718\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\SX720\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\SX725\Read PIN	Read PIN code,
GEELY/ENGLON/MAPLE\ ENGLON\Cross\Steel Mate	Read program result,Reset PEPS,Reset ignition
GEELY/ENGLON/MAPLE\ ENGLON\SC6\Steel Mate	Read program result,Reset PEPS,Reset ignition
GEELY/ENGLON/MAPLE\ Emgrand\EC825\Steel	Read program result,Reset PEPS,Reset ignition
GEELY/ENGLON/MAPLE\ Emgrand\EC820\Steel	Read program result,Reset PEPS,Reset ignition

	GEELY/ENGLON/MAPLE\ Gleagle\GC7\Steel Mate	Read program result,Reset PEPS,Reset ignition
SAIC MAXUS	SAIC MAXUS\G10\PEPS	Add smart key,Delete smart key,
	SAIC MAXUS\G10\BCM	Delete remote,Add remote,Delete key,Add
	SAIC MAXUS\A80\BCM	Add key,Delete remote,Add remote,Delete
	SAIC MAXUS\EV80\ 2017\BCM	Add key,Delete remote,Add remote,Delete
	SAIC MAXUS\V80\ 2017\BCM	Add key,Delete remote,Add remote,Delete
HAIMA	HAIMA\IMMO\Industrial traffic IMMO	Program immobiliser,Program
	HAIMA\IMMO\Lianchuang IMMO(old)	Write immo VIN code,Write engine VIN code,Engine
	HAIMA\IMMO\UAES IMMO(M3)	Replace immo ECU,Program
	HAIMA\IMMO\UAES IMMO(M5/M7/S7)	Replace immo ECU,Program
	HAIMA\IMMO\IMMO controller(M6/S5)	Reset ECM,Adjust ECMPIN,Key testing,Lock
	HAIMA\PEPS\M8\Huf PEPS	Program old key,Program new key,Program
	HAIMA\PEPS\S5\FuxinDer PEPS	Reset PEPS,Program PEPS & IMMO,Program
	HAIMA\Remote\M3\TungT hih BCM	Program remote,
	HAIMA\Remote\M5\Steel Mate body ECU	Program remote,
	HAIMA\Remote\M3\Kingdo m BCM	Program remote,
	HAIMA\IMMO\UAES IMMO(M8/V70)	Clear fault code,Replace immo ECU,Replace engine
	HAIMA\Remote\M6\Kingdo m BCM	Program remote,
	HAIMA\Remote\S5\Kingdo m BCM	Program remote,
	HAIMA\PEPS\M6\Huf PEPS	Program old key,Program new key,Program

	HAIMA\PEPS\M5\Huf PEPS	Program old key,Program new key,Program
	HAIMA\PEPS\M3\Huf PEPS	Program old key,Program new key,Program
	HAIMA\PEPS\S7\Huf PEPS	Program old key,Program new key,Program
	HAIMA\PEPS\S5\Huf PEPS	Program old key,Program new key,Program
	HAIMA\PEPS\V70\Huf PEPS	Program old key,Program new key,Program
	HAIMA\Remote\V70\Steel Mate body ECU	Program remote,
	HAIMA\PIN code\Industrial Traffic IMMO	Read PIN of industrial traffic immo,
	HAIMA\IMMO\Lianchuang IMMO(S7)	Add key,Delete key,Program new
CHANGHE SUZUKI	CHANGHE SUZUKI\Wagon	Reset engine ECU,Key detect,Immobiliser ECU
	CHANGHE SUZUKI\Splash\IMMO\Tun	Reset engine ECU,Key detect,Immobiliser ECU
	CHANGHE SUZUKI\Splash\IMMO\Tun	Program engine ECU,Program immo
	CHANGHE SUZUKI\Liana\IMMO 1	Program key,Delete key,Register immobiliser,
	CHANGHE SUZUKI\Liana\Keyless	Learn new PEPS,Learn old PEPS,Program
	CHANGHE SUZUKI\Liana\TungThih	Reset engine ECU,Key detect,Immobiliser ECU
ZHENGZHOU NISSAN	ZHENGZHOU NISSAN\IMMO\Succe	Program immobiliser,Program
	ZHENGZHOU NISSAN\IMMO\Reach\Indu	Program immobiliser,Program
	ZHENGZHOU NISSAN\IMMO\Odin	Program immobiliser,Program
	ZHENGZHOU NISSAN\IMMO\Succe	Write immo VIN code,Write engine VIN code,Engine
	ZHENGZHOU NISSAN\IMMO\NV200\Typ	Add key,Activate steering wheel lock,
	ZHENGZHOU NISSAN\PEPS\NV200\Sm	Program smart key,Delete smart key,Program

ZHENGZHOU NISSAN	ZHENGZHOU NISSAN\PEPS\Dongfeng	Program smart key,Delete smart key,Program
	ZHENGZHOU NISSAN\IMMO\Dongfeng	Add key,Activate steering wheel lock,
	ZHENGZHOU NISSAN\IMMO\NV200\Typ	Add key,Activate steering wheel lock,
	ZHENGZHOU NISSAN\Read PIN	Read pin code,
	ZHENGZHOU NISSAN\Release	Release steering lock,
	ZHENGZHOU NISSAN\PEPS\Dongfeng	Add smart key,
HAFEI	HAFEI\Saibao\Remote	Program remote,
	HAFEI\Simbo\Remote	Program remote,
	HAFEI\Hafei 8\Mitsubishi IMMO	Add key,
	HAFEI\Simbo\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine
	HAFEI\Lobo\Lianchuang IMMO	Write immo VIN code,Write engine VIN code,Engine
BORGWARD	BORGWARD\BX5\PEPS	Add smart key,Delete smart key,Program
	BORGWARD\BX6\PEPS	Add smart key,Delete smart key,Program
	BORGWARD\BX7\PEPS	Add smart key,Delete smart key,Program
	BORGWARD\BX17\PEPS	Add smart key,Delete smart key,
LIFAN	LIFAN\Sedan\520\CJAE IMMO	Clear fault code,Program engine VIN,Write key
	LIFAN\Sedan\620\CJAE IMMO	Clear fault code,Program engine VIN,Write key
	LIFAN\Sedan\X60\CJAE IMMO	Clear fault code,Program engine VIN,Write key
	LIFAN\Minicar\Feng Shun\CJAE IMMO	Clear fault code,Program engine VIN,Write key
	LIFAN\Minicar\Xing Shun\CJAE IMMO	Clear fault code,Program engine VIN,Write key

LIFAN

LIFAN\Minicar\Fu Shun\CJAE IMMO	Clear fault code,Program engine VIN,Write key
LIFAN\Sedan\520\Siemens IMMO	Program immobiliser,Program
LIFAN\Sedan\620\Siemens IMMO	Program immobiliser,Program
LIFAN\Sedan\X60\Siemens IMMO	Program immobiliser,Program
LIFAN\Minicar\Feng Shun\Siemens IMMO	Program immobiliser,Program
LIFAN\Minicar\Xing Shun\Siemens IMMO	Program immobiliser,Program
LIFAN\Minicar\Fu Shun\Siemens IMMO	Program immobiliser,Program
LIFAN\Sedan\Marvell\PEPS	Add smart key,Delete smart key,Program
LIFAN\Sedan\820\Remote	Program remote,Clear remote,
LIFAN\Sedan\720\Remote	Program remote,Clear remote,Sync
LIFAN\Sedan\620 (2nd gen)\Remote	Program remote,Program immo chip,Program immo
LIFAN\Sedan\620EV\Remote	Program remote,Program immo chip,Program immo
LIFAN\Sedan\Shiner\Remote	Program remote,Program immo,
LIFAN\Sedan\Shiner\PEPS	Program key,Program PEPS,
LIFAN\Sedan\320\CJAE IMMO(UAES)	Program key,Program immo ECU,Program
LIFAN\Sedan\530\CJAE IMMO(UAES)	Program key,Program immo ECU,Program
LIFAN\Sedan\630\CJAE IMMO(UAES)	Program key,Program immo ECU,Program
LIFAN\Sedan\X50\CJAE IMMO(UAES)	Program key,Program immo ECU,Program
LIFAN\Sedan\620CNG\CJAE IMMO(Delphi)	Clear fault code,Program engine VIN,Write key
LIFAN\Sedan\330\CJAE IMMO(UAES)	Program key,Program immo ECU,Program

	LIFAN\Sedan\Lotto\CJAE IMMO(UAES)	Program key,Program immo ECU,Program
	LIFAN\Sedan\X70\IMMO	Program key,Program ESCL,Program engine
HIMIKO	HIMIKO\IMMO	Add key,Delete key,
ZX AUTO	ZX AUTO\IMMO\Delphi IMMO	Clear fault code,Reset PIN code,Program key,Delete
	ZX AUTO\IMMO\Delphi diesel(Bosch 2.8TC) IMMO	Read key count,Clear fault code,Reset PIN
DONGFENG FENGGUANG	DONGFENG FENGGUANG\370\PEPS	Program smart key,
	DONGFENG FENGGUANG\580\PEPS\	Program smart key,
	DONGFENG FENGGUANG\370\BCM	Read key count,Program key,Delete key,Program
	DONGFENG FENGGUANG\580\BCM	Read key count,Program key,Delete key,Program
FOTON	FOTON\Savanna\Remote\ Type 1	Read key count,Program remote,Clear remote,
	FOTON\Tunland(2015)\Re mote	Read key count,Program remote,Clear remote,
	FOTON\Tunland\Remote	Read key count,Program remote,Clear remote,
	FOTON\Sauvana\Remote\ Type 2	Read key count,Program remote,Clear remote,
ZD	ZD\ZD2\PEPS system	Program new system,Program PEPS
BRILLIANCE AUTO\Zhong Hua\Greur\Delphi IMMO	BRILLIANCE AUTO\Zhong Hua\Greur\Delphi IMMO	Read key count,Clear fault code,Program key,Delete
	BRILLIANCE AUTO\Zhong Hua\Junjie\Delphi IMMO	Read key count,Clear fault code,Program key,Delete
	BRILLIANCE AUTO\Zhong Hua\Coupe\Delphi IMMO	Read key count,Clear fault code,Program key,Delete
	BRILLIANCE AUTO\Jin Bei\Delphi IMMO	Read key count,Clear fault code,Program key,Delete
	BRILLIANCE AUTO\Zhong Hua\Greur\Siemens IMMO	Clear fault code,Program key,Reset immo
	BRILLIANCE AUTO\Zhong Hua\Greur\Brilliance	Clear fault code,Program key,Reset immo

BRILLIANCE AUTO

BRILLIANCE AUTO\Zhong Hua\Junjie\Siemens IMMO	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\Junjie\Brilliance	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\Coupe\Siemens	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\Coupe\Brilliance	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\FRV\Brilliance	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\FSV\Brilliance	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\Cross\Brilliance	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\Wagon\Brilliance	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\H530\Brilliance	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\V5\Brilliance	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\H230\Brilliance	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\H320\Brilliance	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\H330\Brilliance	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\H220\Brilliance	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\V3\Brilliance	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Jin Bei\Brilliance IMMO(HaiShi	Clear fault code,Program key,Reset immo
BRILLIANCE AUTO\Zhong Hua\FSV\PEPS(new)	Clear fault code,Program smart key,Program new
BRILLIANCE AUTO\Zhong Hua\H330\PEPS	Clear fault code,Program smart key,Program new
BRILLIANCE AUTO\Zhong Hua\H530\PEPS	Program new system,Program smart
BRILLIANCE AUTO\Zhong Hua\V5\PEPS	Program new system,Program smart

	BRILLIANCE AUTO\Zhong Hua\V3\PEPS	Program key,Program new PEPS,Program new
	BRILLIANCE AUTO\Hua Song\HuaSong 7\IMMO	Program key,Delete & add key,Program engine,
	BRILLIANCE AUTO\Hua Song\HuaSong 7\Remote	All remote lost,Add remote,
	BRILLIANCE AUTO\Zhong Hua\Zhong	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhong Hua\Greur\Mitsubishi	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhong Hua\Junjie\Mitsubishi	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhong Hua\Coupe\Mitsubishi	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhong Hua\FRV\Mitsubishi IMMO	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhong Hua\FSV\Mitsubishi IMMO	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhong Hua\H330\Mitsubishi	Add key,Reset immo ECU,Clear fault code,
	BRILLIANCE AUTO\Zhong Hua\H3\PEPS	Program key,Program new PEPS,Program new
	BRILLIANCE AUTO\Zhong Hua\H3\Brilliance IMMO	Clear fault code,Program key,Reset immo
	BRILLIANCE AUTO\Zhong Hua\FSV\PEPS(old)\Type	Program smart key,
CHANGHE AUTO	CHANGHE AUTO\Q25\BCM	Clear fault code,Read key count,Program key,Delete
	CHANGHE AUTO\Q35\BCM	Clear fault code,Read key count,Program key,Delete
HANTENG AUTO	HANTENG AUTO\X7\PEPS	Read key learn status,Program key,Delete
	MERCURY\Cougar\1999-2002\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Gr.Marqui\03-04\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Marauder\2003-2005\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Monterey\2004-2005\Immobilizer	Read key count,Program key,Delete key,

MERCURY	MERCURY\M.Taineer[PC M]\01-04\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Sable\2000-2003\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Gr.Marqui\2005-2010\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Mariner\2005-2007\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Montego\2005-2006\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Monterey\2006-2007\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\M.Taineer\2004-2005\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Sable\2004-2007\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Mariner\2008-2009\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Milan\2006-2009\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\M.Taineer\2006-2009\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Montego\2007-\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Sable\2008-\Immobilizer	Read key count,Program key,Delete all keys,
	MERCURY\Mariner\2010-\Immobilizer	Read key count,Program key,Delete key,
	MERCURY\Milan\2010-\Immobilizer	Read key count,Program key,Delete key,
MERCURY\M.Taineer\2010-\Immobilizer	Read key count,Program key,Delete key,	
VENUCIA	VENUCIA\Read BCM code and release directional	Release steering lock,Read BCM inner code,
	VENUCIA>Select from type\Immobilizer\4-Bit PIN	Add key,
	VENUCIA>Select from type\Immobilizer\4-Bit PIN	Program key,
	VENUCIA>Select from type\Smart key\20-Bit PIN	Program smart key,Replace engine ECU,

WEY	WEY\VV5 series\VV5c\2017\PEPS	Program key,Program complete
	WEY\VV5 series\VV5s\2017\PEPS	Program key,Program complete
	WEY\VV7 series\VV7c\2017\Kstar PEPS(button-	Program engine ECU,Program
	WEY\VV7 series\VV7s\2017\Kstar PEPS(button-	Program engine ECU,Program
	WEY\VV5 series\VV5c\2017\PEPS	Program key after delete,All key lost,Add key,
	WEY\VV5 series\VV5s\2017\PEPS	Program key after delete,All key lost,Add key,
	WEY\VV7 series\VV7c\2017\PEPS	Program key after delete,All key lost,Add key,
	WEY\VV7 series\VV7s\2017\PEPS	Program key after delete,All key lost,Add key,
OLDSMOBILE	OLDSMOBILE\Aurora\Immobilizer	All key lost,
	OLDSMOBILE\Silhouette\Immobilizer	All key lost,
PONTIAC	PONTIAC\Aztec\Immobilizer	All key lost,
	PONTIAC\Bonneville\Immobilizer	All key lost,
	PONTIAC\G3\Immobilizer	All key lost,
	PONTIAC\G5\Immobilizer	All key lost,
	PONTIAC\G6\Immobilizer	All key lost,
	PONTIAC\G8\Immobilizer	All key lost,
	PONTIAC\Grand Prix\Immobilizer	All key lost,
	PONTIAC\Montana\Immobilizer	All key lost,
	PONTIAC\Pursult\Immobilizer	All key lost,
	PONTIAC\Solstice\Immobilizer	All key lost,

	PONTIAC\Torrent\Immobilizer\2007-2009	All key lost,
SAAB	SAAB\9-7\2006-2008\Immobilizer	All key lost,
SATURN	SATURN\Astra\2008-2009\Immobilizer	All key lost,
	SATURN\Aura\2006-2009\Immobilizer	All key lost,
	SATURN\Outlook\2006-2008\Immobilizer	All key lost,
	SATURN\Replay\2005-2007\Immobilizer	All key lost,
	SATURN\Sky\2008-2009\Immobilizer	All key lost,
	SATURN\Vue\2008-2009\Immobilizer	All key lost,
TRAUM	TRAUM\S70\Remote	Remote count,Program remote,Delete remote,
	TRAUM\S70\PEPS	Program complete system,Program complete
SWM	SWM\X3\Without smart	Program remote,Read key count,
	SWM\X3\With smart	Program key,Write VIN code to engine,Read key
	SWM\X7\Without smart	Program immobiliser,Delete
	SWM\X7\With smart	Read key count,Program PEPS,Write VIN code to
	SWM\G01\IMMO	Program key,Delete key,
DAEWOO	DAEWOO\Evanda (2003-)\Immobilizer	Program key,Key diagnosis,Switch to neutral
	DAEWOO\Kalos(2002-2006)\Immobilizer	Program key,Key diagnosis,Switch to neutral
	DAEWOO\Lacetti (2004-)\Immobilizer	Program key,Key diagnosis,Switch to neutral
	DAEWOO\Leganza (2002-)\Immobilizer	Program key,Key diagnosis,Switch to neutral
	DAEWOO\Leganze(USA)(2001-)\Immobilizer	Program key,Key diagnosis,Switch to neutral

	DAEWOO\Matiz (1998-)\Immobilizer	Program key,Key diagnosis,Switch to neutral
	DAEWOO\Nubira(2003-2006)\Immobilizer	Program key,Key diagnosis,Switch to neutral
	DAEWOO\Tacuma(2000-2008)\Immobilizer	Program key,Key diagnosis,Switch to neutral
	DAEWOO\Read PIN code	Read pin code type1,Read pin code type2,Read pin
DAIHATSU	DAIHATSU\BE GO	Program key,Read key count,Clear fault code,
	DAIHATSU\BOON	Program key,Read key count,Clear fault code,
	DAIHATSU\COO	Program key,Read key count,Clear fault code,
	DAIHATSU\MATERIA	Program key,Read key count,Clear fault code,
	DAIHATSU\MOVE	Program key,Read key count,Clear fault code,
	DAIHATSU\SIRION	Program key,Read key count,Clear fault code,
	DAIHATSU\STORIA	Program key,Read key count,Clear fault code,
	DAIHATSU\TERIOS	Program key,Read key count,Clear fault code,
	DAIHATSU\TERIOS ECO	Program key,Read key count,Clear fault code,
	DAIHATSU\TERIOS WILD	Program key,Read key count,Clear fault code,
	DAIHATSU\TERIOS YENI WILD	Program key,Read key count,Clear fault code,
	DAIHATSU\YRV	Program key,Read key count,Clear fault code,
LADA	LADA\XRAY\Immobilizer	Read PIN code,Recover backup data,Program key,
LYNK&CO	LYNK&CO\LYNK&CO 01\2017-\Smart key	Read CEM data,Smart key count,Add smart key,All
	LYNK&CO\LYNK&CO 02\2018-\Smart key	Read CEM data,Smart key count,Add smart key,All
	LYNK&CO\LYNK&CO 03\2018-\Smart key	Read CEM data,Smart key count,Add smart key,All

DATSUN	DATSUN\GO	Program key,
	DATSUN\GO+	Program key,
HUMMER	HUMMER\H2\Immobilizer	All key lost,
	HUMMER\H2\Remote\Type 1	Program remote,Delete remote,
	HUMMER\H3\Immobilizer	All key lost,
	HUMMER\H2\Remote\Type 2\2008-2009	Program remote,Delete remote,
	HUMMER\H2\Remote program method\2003-	Remote program method,
	HUMMER\H2\Remote program method\2008-	Remote program method,
	HUMMER\H3\Remote	Program remote,
HAWTAI	HAWTAI\Select from type\Remote\16 PIN\Type	Program remote,
	HAWTAI\Select from vehicle\Sisha	Add key,Delete key,Detect key,Read VIN code,Read
	HAWTAI\Select from vehicle\Sisha	Add key,Delete key,Detect key,Read VIN code,Read
	HAWTAI\Select from type\IMMO\IMMO 1	Add key,Delete key,Detect key,Read VIN code,Read
	HAWTAI\Select from type\IMMO\IMMO 2	Program key,Read key count,ECM neutral mode,
	HAWTAI\Select from vehicle\Sisha	Program key,Read key count,ECM neutral mode,
	HAWTAI\Select from vehicle\Sisha	Program key,Read key count,ECM neutral mode,
	HAWTAI\Select from vehicle\Sisha	Program key,Read key count,ECM neutral mode,
	HAWTAI\Select from type\IMMO\IMMO 3	Program key,Read key count,ECM neutral mode,
	HAWTAI\Select from type\IMMO\IMMO 4	ECM neutral mode,Read key count,Program key,
	HAWTAI\Select from vehicle\Sisha	ECM neutral mode,Read key count,Program key,

	HAWTAI\Select from type\Remote\16 PIN\Type	Program remote,
	HAWTAI\Select from type\Remote\10 PIN	Program remote,
	HAWTAI\Select from vehicle\B21(E70)\Remote\	Program remote,
	HAWTAI\Select from vehicle\B11\Remote\16	Program remote,
	HAWTAI\Select from vehicle\B35(Boliger)\Remot	Program remote,
	HAWTAI\Select from vehicle\Santafe(import)\Re	Program remote,
	HAWTAI\Select from vehicle\Santafe(domestic)\	Program remote,
	HAWTAI\Select from vehicle\Terracan\Remote\1	Program remote,
里程复原		
品牌	菜单	应用
VW	VW\IMMO4\NEC 24C32\Odometer	Odometer adjustment,Backup
	VW\IMMO4\NEC 95320\Odometer	Odometer adjustment,Backup
	VW\IMMO4\NEC 24C64 (2013)\Odometer	Odometer adjustment,Backup
	VW\IMMO4\NEC 24C64\Odometer	Odometer adjustment,Backup
	VW\IMMO4\NEC+24C64 (2013)\Odometer	Odometer adjustment,Backup
	VW\IMMO4\9S12XHZ512\ Odometer adjustment	Odometer adjustment,Backup
	VW\IMMO4\CDC+24C32\ Odometer adjustment	Odometer adjustment,Backup
	VW\Phaeton\Odometer adjustment	Odometer adjustment,
	VW\IMMO4\NEC+24C64 (2012)\Odometer	Odometer adjustment,Backup
	VW\IMMO2 & IMMO3\Odometer	Dashboard,

KIA	KIA\K5\24C16	Backup EEPROM,Restore EEPROM,Odometer
	KIA\K5\D70F3423	Backup EEPROM,Restore EEPROM,Odometer
	KIA\K5\D70F3536	Backup EEPROM,Restore EEPROM,Odometer
	KIA\Ceed\24C16	Backup EEPROM,Restore EEPROM,Odometer
	KIA\Magentis\24C16	Backup EEPROM,Restore EEPROM,Odometer
	KIA\Rio\24C16	Backup EEPROM,Restore EEPROM,Odometer
	KIA\Sorento\2007-\24C16	Backup EEPROM,Restore EEPROM,Odometer
	KIA\Soul\24C16	Backup EEPROM,Restore EEPROM,Odometer
	KIA\Sportage\2008-\24C16	Backup EEPROM,Restore EEPROM,Odometer
	KIA\Sportage R\24C16	Backup EEPROM,Restore EEPROM,Odometer
	KIA\Ceed\D70F3423	Backup EEPROM,Restore EEPROM,Odometer
	KIA\Rio\2015\D70F3423	Backup EEPROM,Restore EEPROM,Odometer
	KIA\Sorento\D70F3423	Backup EEPROM,Restore EEPROM,Odometer
	KIA\Sportage R\D70F3423	Backup EEPROM,Restore EEPROM,Odometer
	KIA\K4\D70F3536	Backup EEPROM,Restore EEPROM,Odometer
	KIA\KX5\D70F3536	Backup EEPROM,Restore EEPROM,Odometer
	KIA\Sorento\2007-\D70F3536	Backup EEPROM,Restore EEPROM,Odometer
	KIA\Sportage\2008-\D70F3536	Backup EEPROM,Restore EEPROM,Odometer
	KIA\Sportage R\D70F3536	Backup EEPROM,Restore EEPROM,Odometer
	LAND ROVER\Evoque\2011-	Backup EEPROM,Restore EEPROM,Odometer

LAND ROVER	LAND ROVER\Range Rover\2010-\Odometer	Odometer adjustment,
	LAND ROVER\Discovery4\2010-	Odometer adjustment,
	LAND ROVER\Freelander 2\2013\Odometer	Backup EEPROM,Restore EEPROM,Odometer
MAZDA	MAZDA\Axela\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	MAZDA\Atenza\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	MAZDA\CX-5\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	MAZDA\CX-9\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	MAZDA\M2\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	MAZDA\M3\2003-\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	MAZDA\M5\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	MAZDA\M6\2014-\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	MAZDA\Mazda6\2009-2013\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
AUDI	AUDI \A6L\ -2009 \Odometer adjustment	Odometer adjustment,
SMART	SMART\BR451\Odometer adjustment	Odometer adjustment,
RENAULT	RENAULT\Select from type\Type 1	Odometer adjustment,
JAGUAR	JAGUAR\XJ\2010-\Odometer adjustment	Odometer adjustment,
	JAGUAR\F-type\ -2014\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	JAGUAR\XE\2015-\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
CHRYSLER	CHRYSLER\Select from type\Type 1	Odometer adjustment,
HUMMER	HUMMER\H2\2007-	Odometer adjustment,

PORSCHÉ	PORSCHÉ\Cayenne\2010-\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	PORSCHÉ\Panamera\2010-\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	PORSCHÉ\918\2015\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
FORD	FORD\S-MAX\2011-monochrome	Backup EEPROM,Restore EEPROM,Odometer
	FORD\S-MAX\2008-2010 Monochrome	Backup EEPROM,Restore EEPROM,Odometer
	FORD\New Mondeo\Small color screen\Odometer	Backup EEPROM,Restore EEPROM,Odometer
	FORD\Ecosport\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	FORD\Kuga\Color screen\Odometer	Backup EEPROM,Restore EEPROM,Odometer
	FORD\Kuga\Monochrome screen\Odometer	Backup EEPROM,Restore EEPROM,Odometer
	FORD\Mondeo\2011-monochrome	Backup EEPROM,Restore EEPROM,Odometer
	FORD\Mondeo\2008- color screen\Odometer	Backup EEPROM,Restore EEPROM,Odometer
	FORD\Mondeo\2008-2010 Monochrome	Backup EEPROM,Restore EEPROM,Odometer
	FORD\Fiesta\2013-\Type 1	Backup EEPROM,Restore EEPROM,Odometer
	FORD\Fiesta\2008-2012\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	FORD\Focus\2012-\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	FORD\Focus\2009-2011\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	FORD\Focus\2004-2008\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	FORD\Explorer\2011-2015\Odometer adjustment	Backup EEPROM,Restore EEPROM,Odometer
	FORD\Mondeo CHIA-X\2011-2013 \Odometer	Odometer adjustment,
	HYUNDAI\Accent\Type 1(24C16)	Backup EEPROM,Restore EEPROM,Odometer

HYUNDAI	HYUNDAI\GETS\24C16	Backup EEPROM,Restore EEPROM,Odometer
	HYUNDAI\20\24C16	Backup EEPROM,Restore EEPROM,Odometer
	HYUNDAI\25\24C16	Backup EEPROM,Restore EEPROM,Odometer
	HYUNDAI\Verna(RBC)\24 C16	Backup EEPROM,Restore EEPROM,Odometer
	HYUNDAI\VELOSTER\24 C16	Backup EEPROM,Restore EEPROM,Odometer
	HYUNDAI\Azera\D70F342 3	Backup EEPROM,Restore EEPROM,Odometer
	HYUNDAI\HB20\D70F342 3	Backup EEPROM,Restore EEPROM,Odometer
	HYUNDAI\Mistra\D70F353 6	Backup EEPROM,Restore EEPROM,Odometer
	HYUNDAI\Sonata 9\D70F3536	Backup EEPROM,Restore EEPROM,Odometer
	HYUNDAI\New Tucson\2016\D70F3536	Backup EEPROM,Restore EEPROM,Odometer
	HYUNDAI\Elantra(AD)\Type 3(D70F3536)	Backup EEPROM,Restore EEPROM,Odometer
子机生成		
品牌	菜单	应用
Generate remote	Generate remote\Americas	GMC,BUICK,FORD,HUMMER,CADILLAC,CHRYSL
	Generate remote\Europe	AUDI,BMW,MERCEDES-BENZ,VW,JAGUAR,OPEL,
	Generate remote\Asia	HONDA,TOYOTA,LEXUS,SUZUKI,MAZDA,NISSAN,
	Generate remote\China\Car	BAOJUN,BAIC,BESTURN,BISU,BYD,CHANGHE
	Generate remote\China\Truck	BEIBEN Trucks,DAYUN HEAVY TRUCK,DITO
	Generate remote\China\Passenger	JINLONG,JIULONG,YUTONG,ZHONGTONG,
	Generate remote\China\Domestic EV	Domestic EV,

	Generate remote\IMMO modification brand	PLC,LINGJIANGZHE,SAN YANJIANG,K-
Generate smart key	Generate smart key\Americas	JEEP,BUICK,DODGE,CADILLAC,CHEVROLET,
	Generate smart key\Europe	PEUGEOT/CITROEN/DS, MASERATI,
	Generate smart key\Asia	NISSAN,KIA,MITSUBISHI, HYUNDAI,INFINITI,
	Generate smart key\China	BAOJUN,BAIC,BYD,SOUEAST
Generate garage remote	Generate garage remote\Garage door	GM,DOORMAN,SEASIDE, SUPER
适配器XX		
品牌	菜单	应用
EEPROM	EEPROM\COMMON\24CXX	Read data,Write data,
	EEPROM\COMMON\93CXX	Read data,Write data,
	EEPROM\COMMON\25XX X/95XXX	Read data,Write data,
Hex editor	Hex editor\Hex editor	Hex editor,
ADP TOOLS	ADP TOOLS\CPLD program upgrade	Adaptor LC4256V upgrade,Dashboard clock
MCU	MCU\Freescale\9S12G	MC9S12G(N)16,MC9S12G(N)32,MC9S12G(A)48,MC
	MCU\Renasas\R32C/M16 C/UART	Read FLASH,Read DATAFLASH,Read
	MCU\Renasas\R32C/M16 C/SPI	Read FLASH,Read E2FLASH,Write
特殊功能		
品牌	菜单	应用
	Generate key chip\4D	Chip 60,Mitsubishi2 chip 61,Suzuki motor chip
	Generate key chip\46	ZHONGHUA H230,ZHONGHUA

Generate key chip	Generate key chip\48	TP22,TP23,TP24,TP25,JE TTA(2010-),
	Generate key chip\T5	Chip 11,Chip 12,Chip 13,Chip 33,
	Generate key chip\7935	Blank 7935,Cherry chip 40,Nissan chip 41,Geely
	Generate key chip\8A	Toyota H,
Identify/Copy chip	Identify/Copy chip\Identify/Copy	Identify/copy,
Remote	Remote\Detect frequency	Frequency detect,
Simulate chip	Simulate chip\Generate simulated chip\4D	Simulate blank 4D chip,Chip 60,Mitsubishi2
	Simulate chip\Bind simulated chip	Bind emulated chip,
	Simulate chip\Generate simulated chip\46	Simulate blank 46 chip,ZHONGHUA
	Simulate chip\Generate simulated chip\8A	Toyota H,
	Simulate chip\Obtain LKE data	Obtain LKE key data,
Decode chip	Decode chip\Decode chip	4D chip,46 chip,
IMMO coil	IMMO coil\Detect IMMO coil	Detect IMMO coil,
Key settings	Key settings\FT smart key\8A	Convert button type,Get version info.,Upgrade
	Key settings\FT smart key\4D	Obtain key data,Update frequency,Convert button
Unlock key	Unlock key\Toyota smart key\8A	Unlock Toyota smart key(8A),