

Toyota RAV4


Support more models

Toyota Corolla, Camry, Prado, Levin etc.,


VVDI



KEY TOOL MAX & MINI OBD

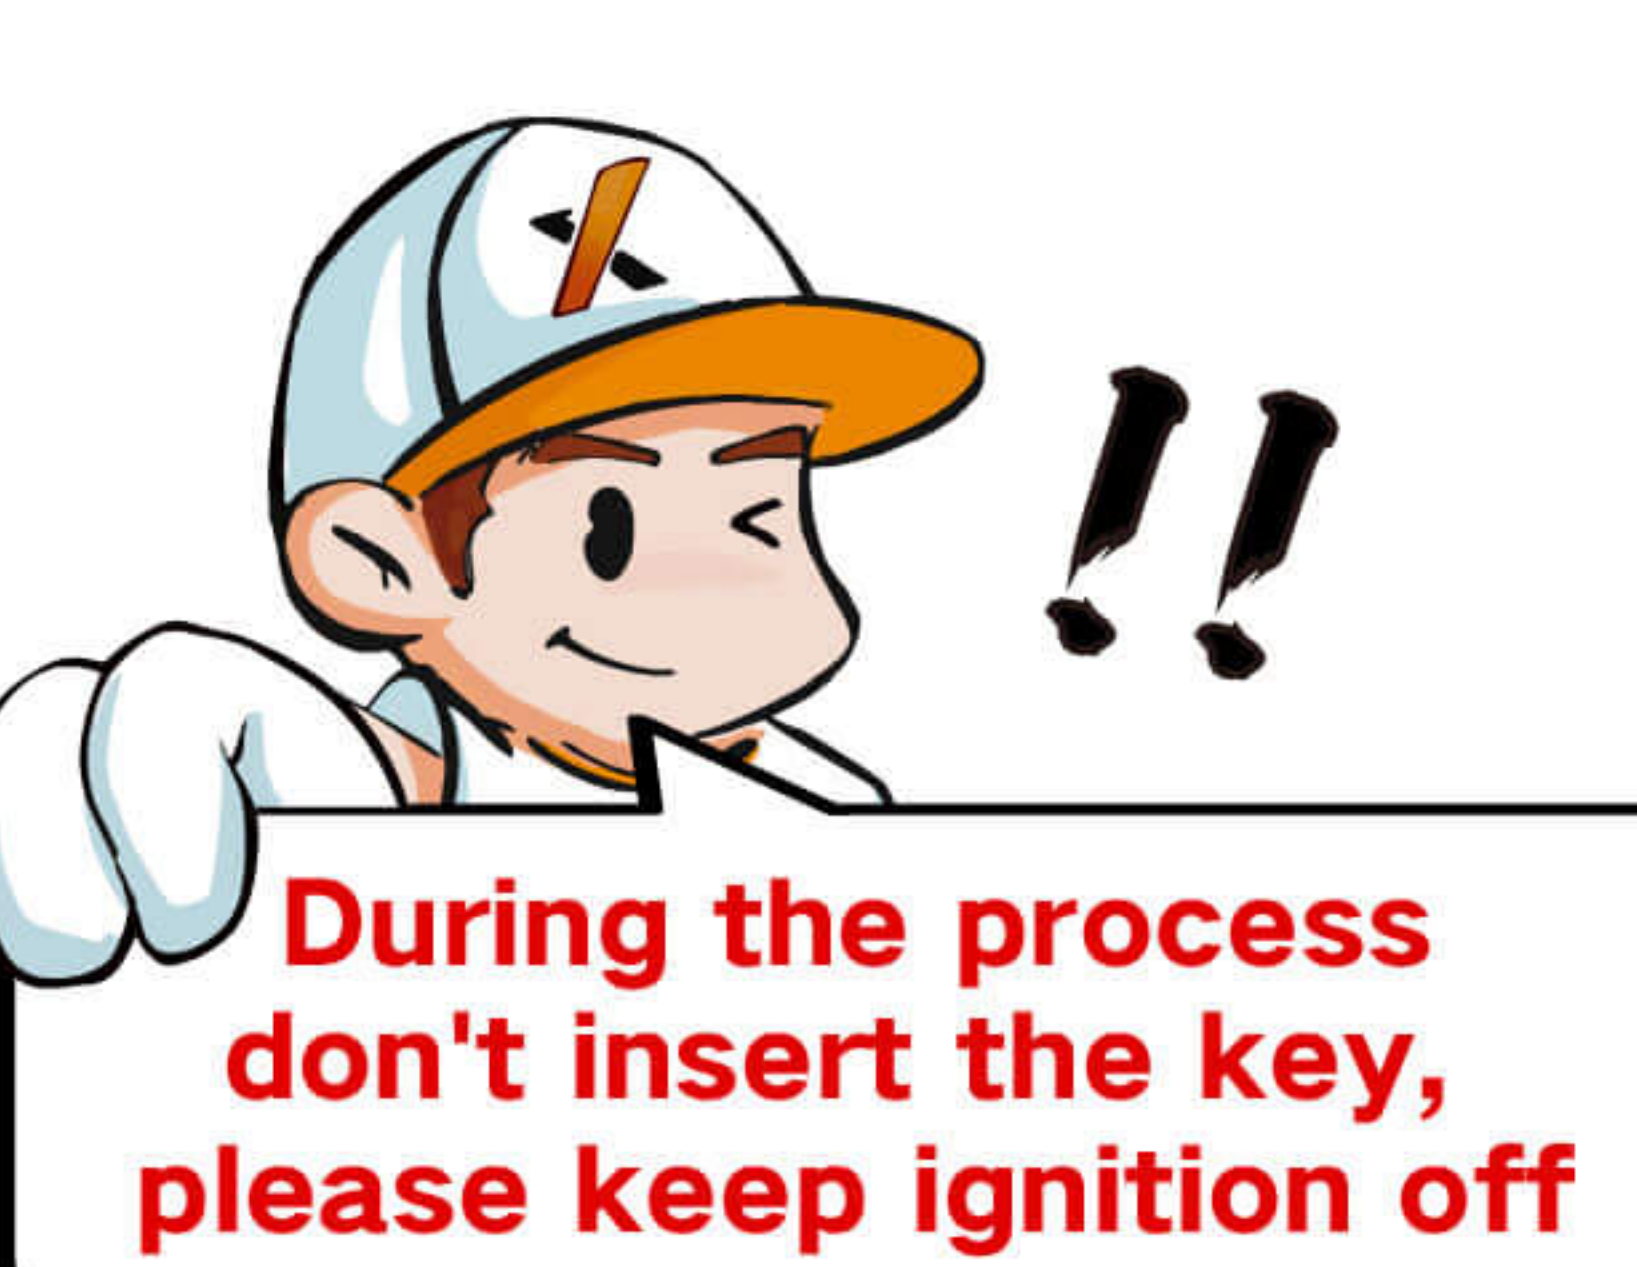


Ⓢ Please update device to latest version for this function

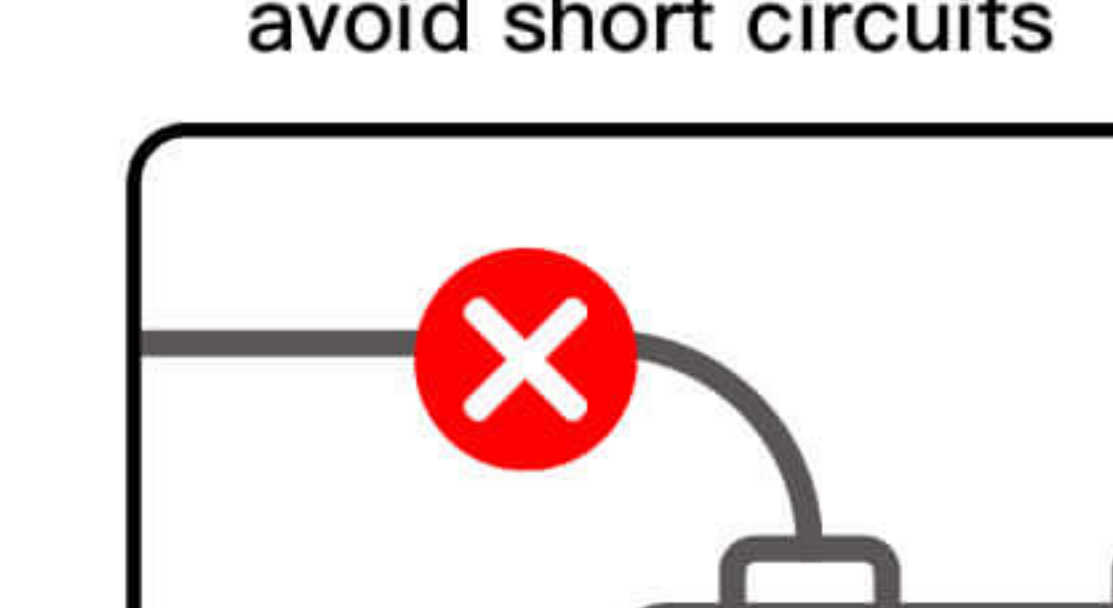

During the process don't insert the key, please keep ignition off

① Disconnect the positive pole of the car battery to protect the connector and avoid short circuits

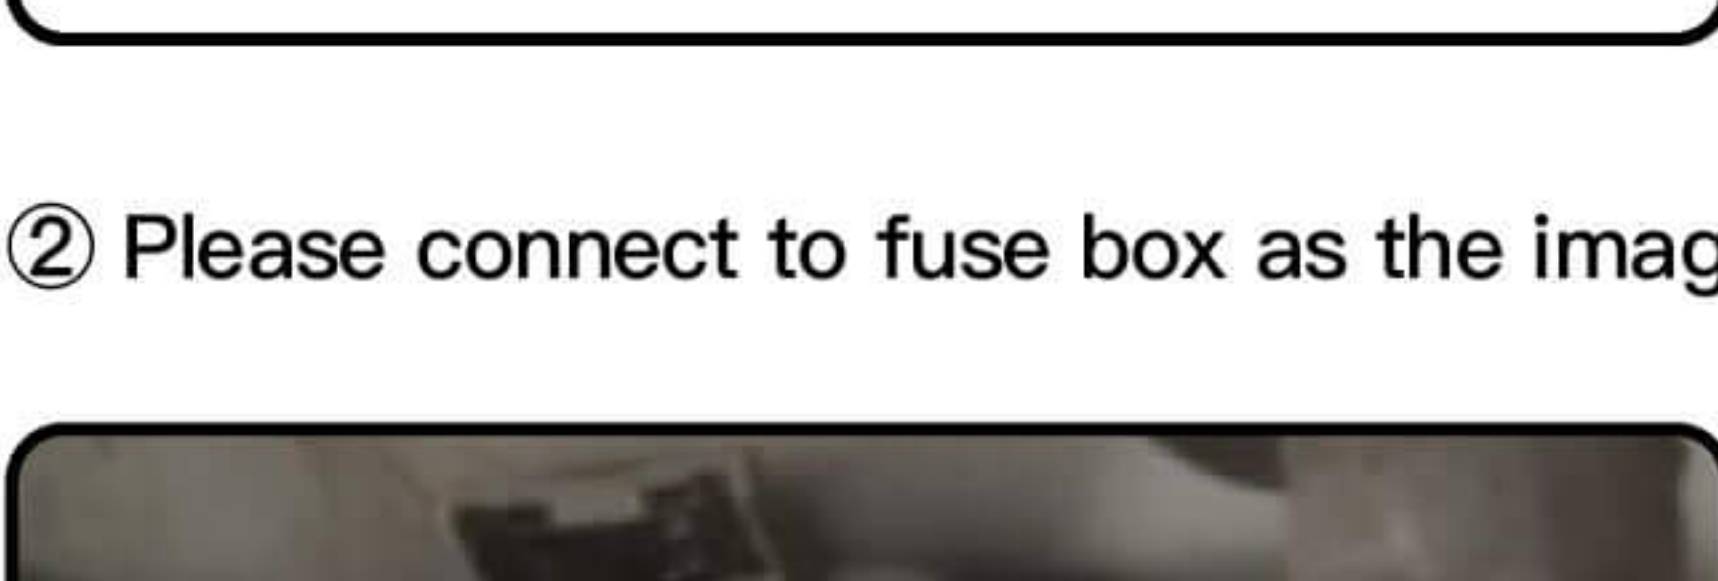

② Please connect to fuse box as the image



Please unplug the red circled relay in the picture above and insert it into the J3 cable.

J3 lock plug

③ Please connect the ELV wires as shown




Please unplug the lock plug

plug J5 lock plug


J5 lock plug

④ Please connect to car OBD, all key lost cables and car battery

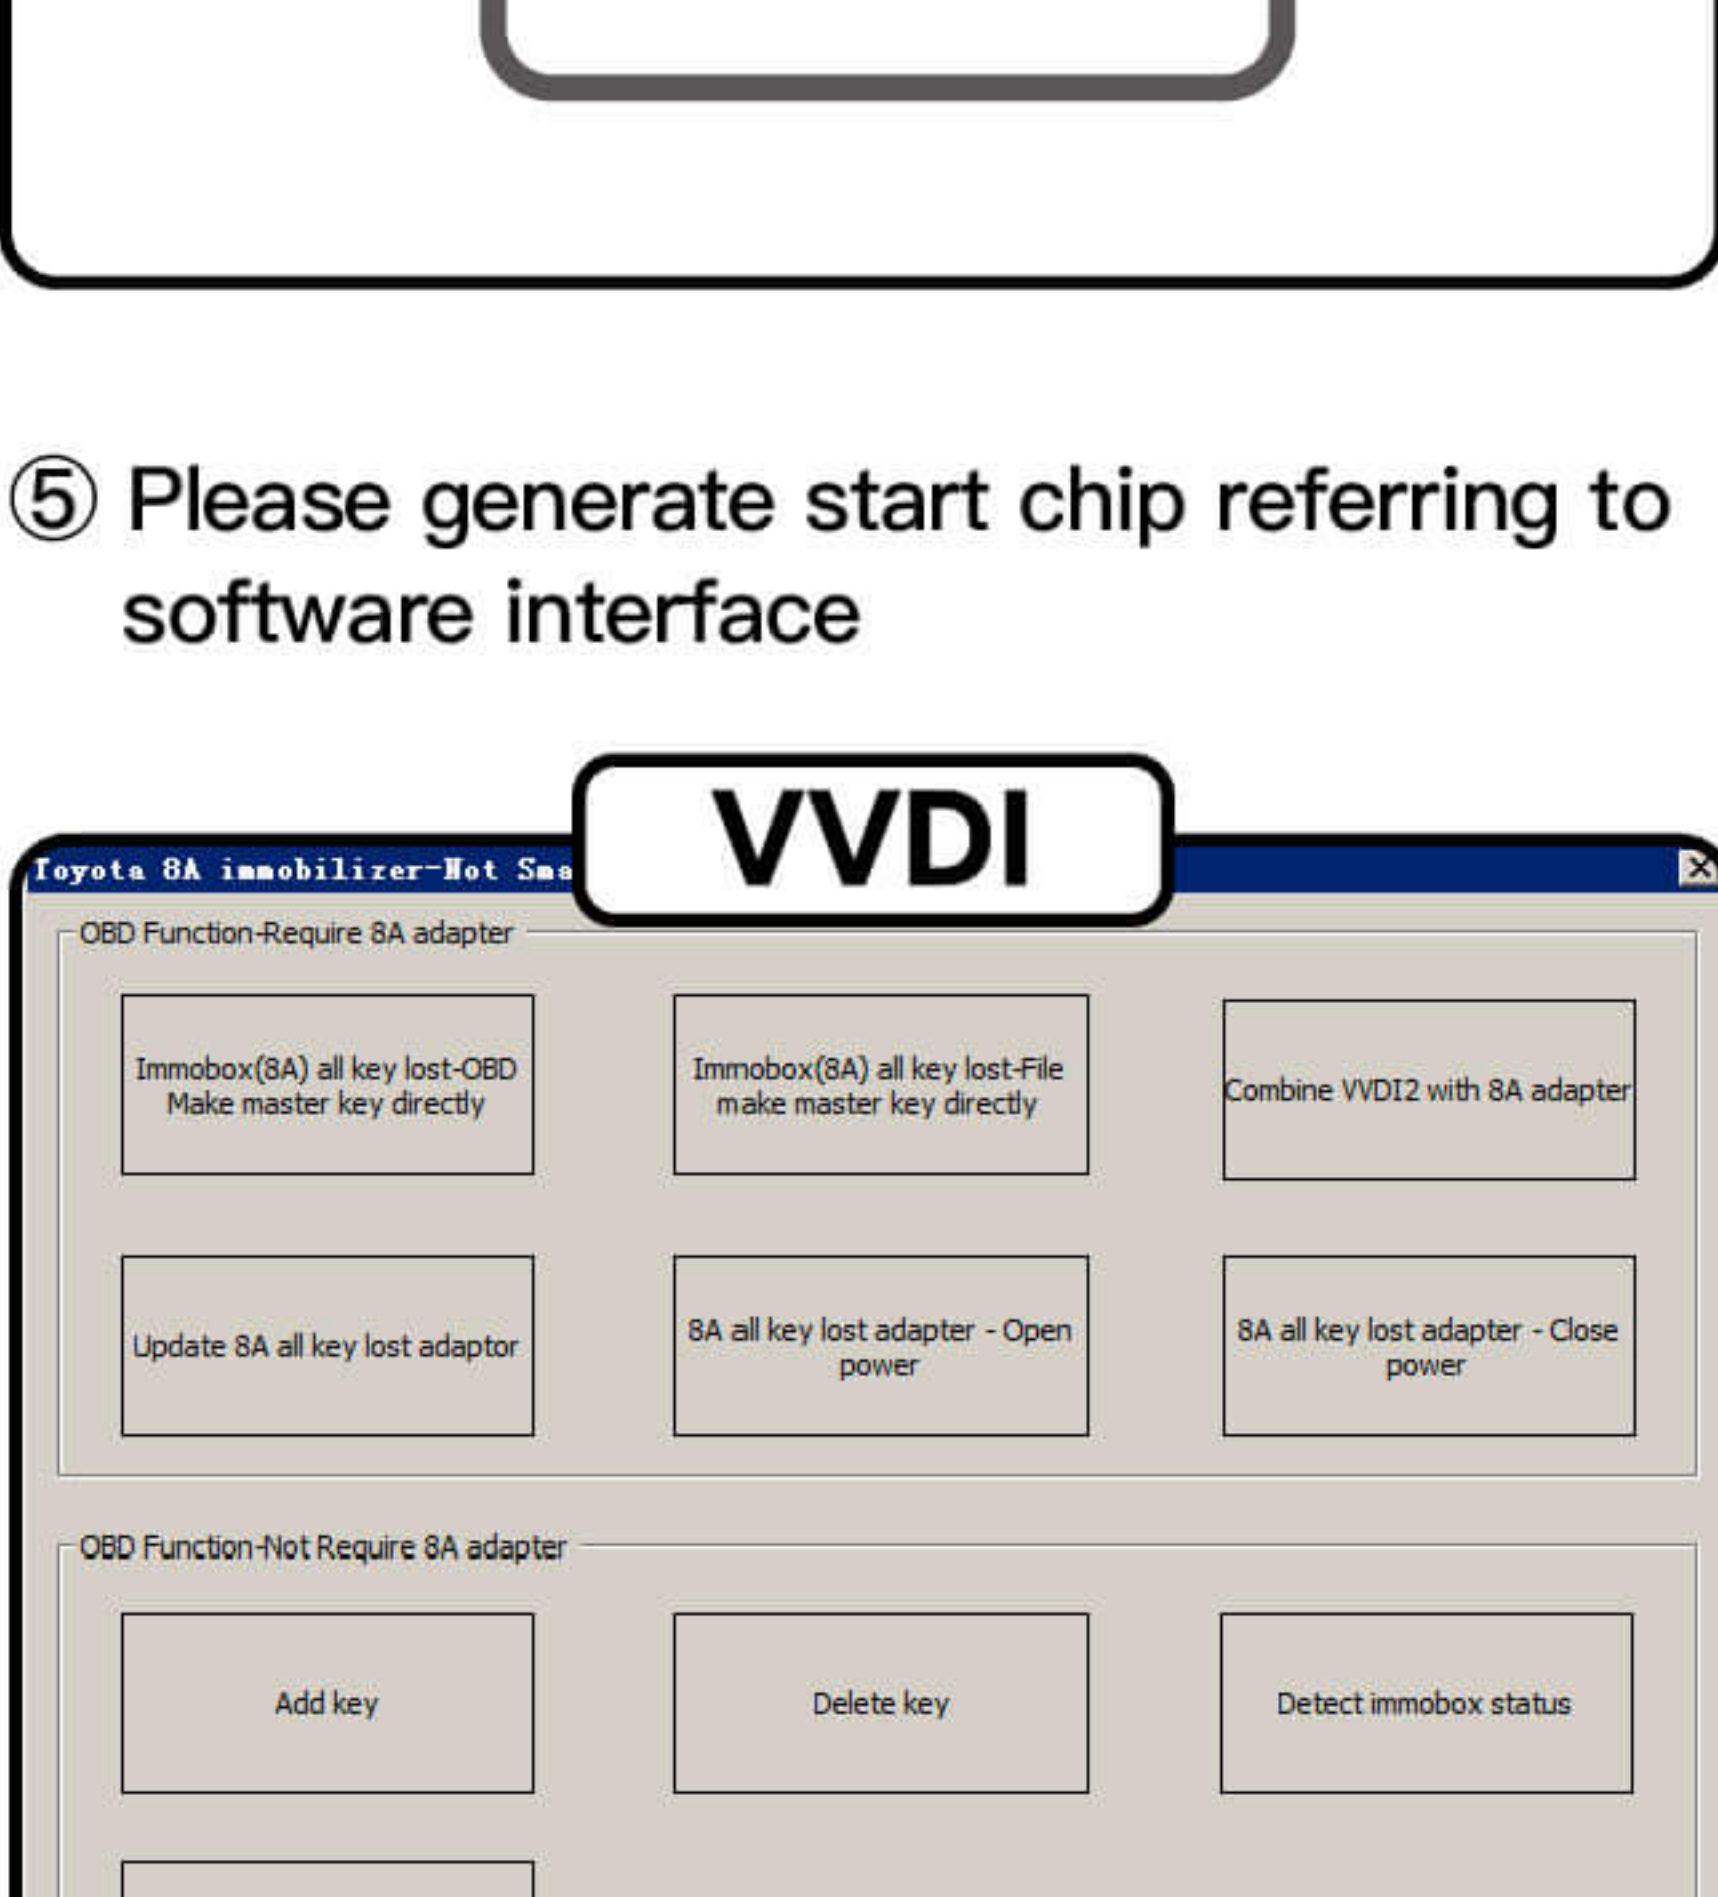


J4 lock plug

VVDI

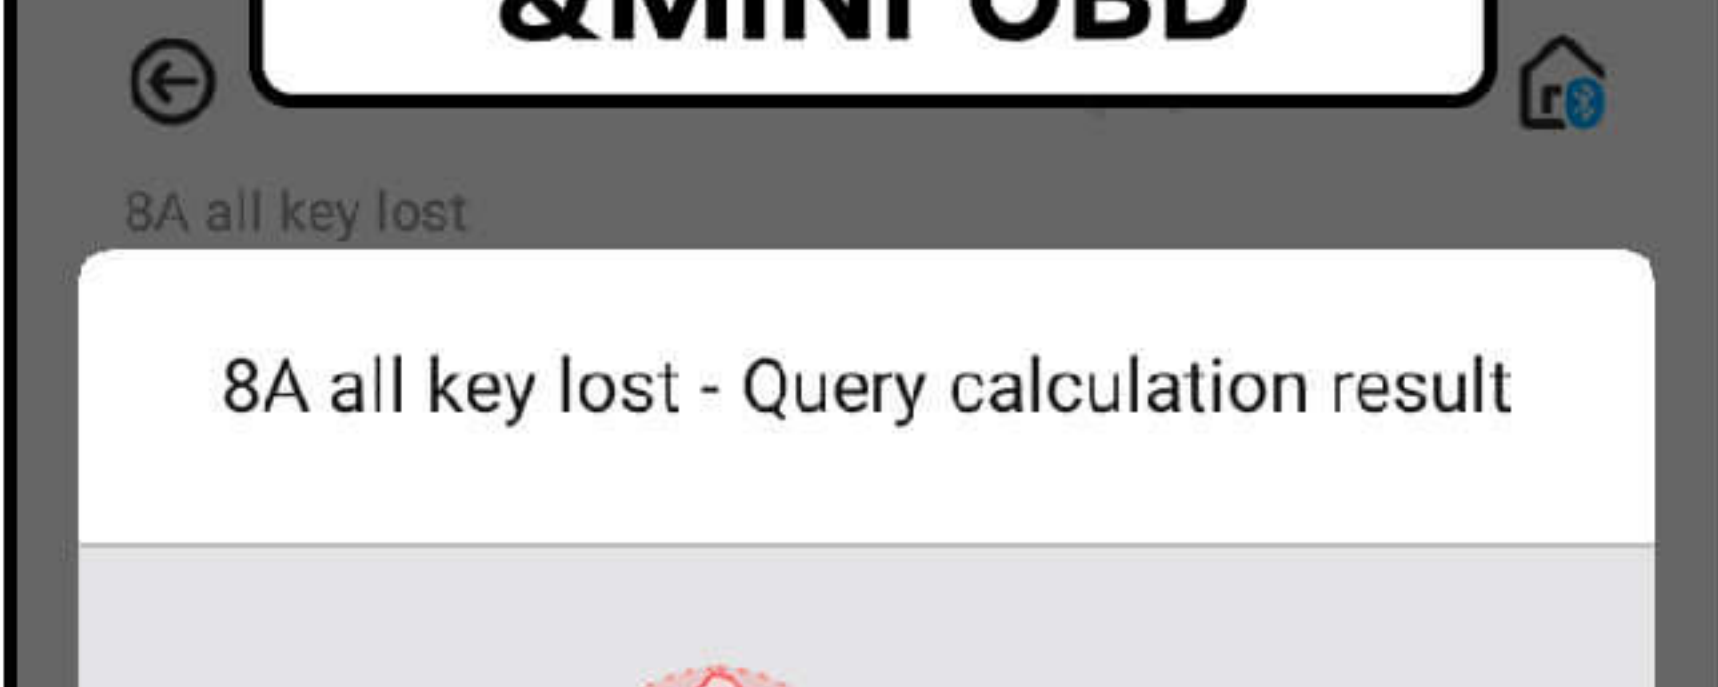


J6 lock plug

KEY TOOL MAX & MINI OBD

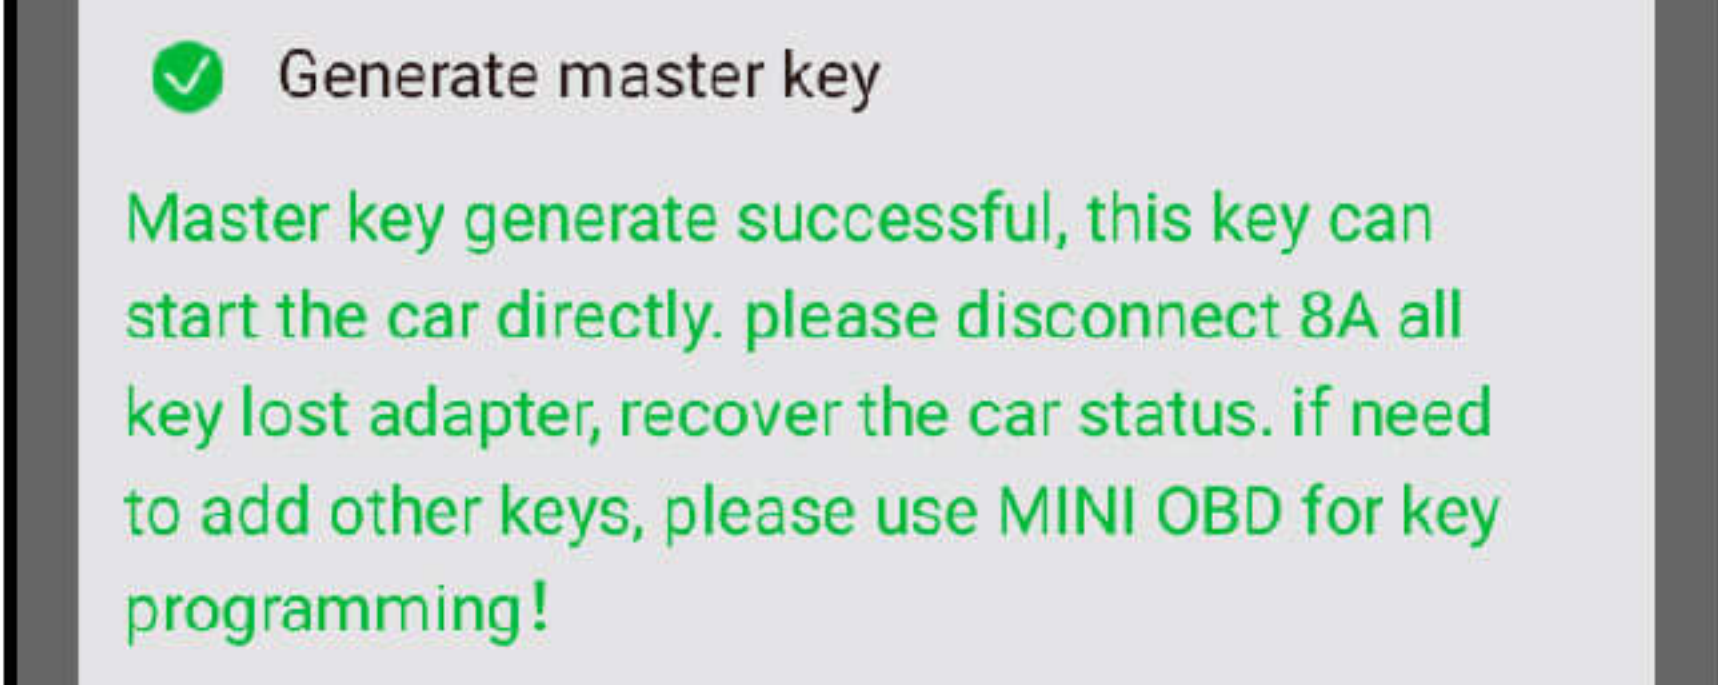


J6 lock plug

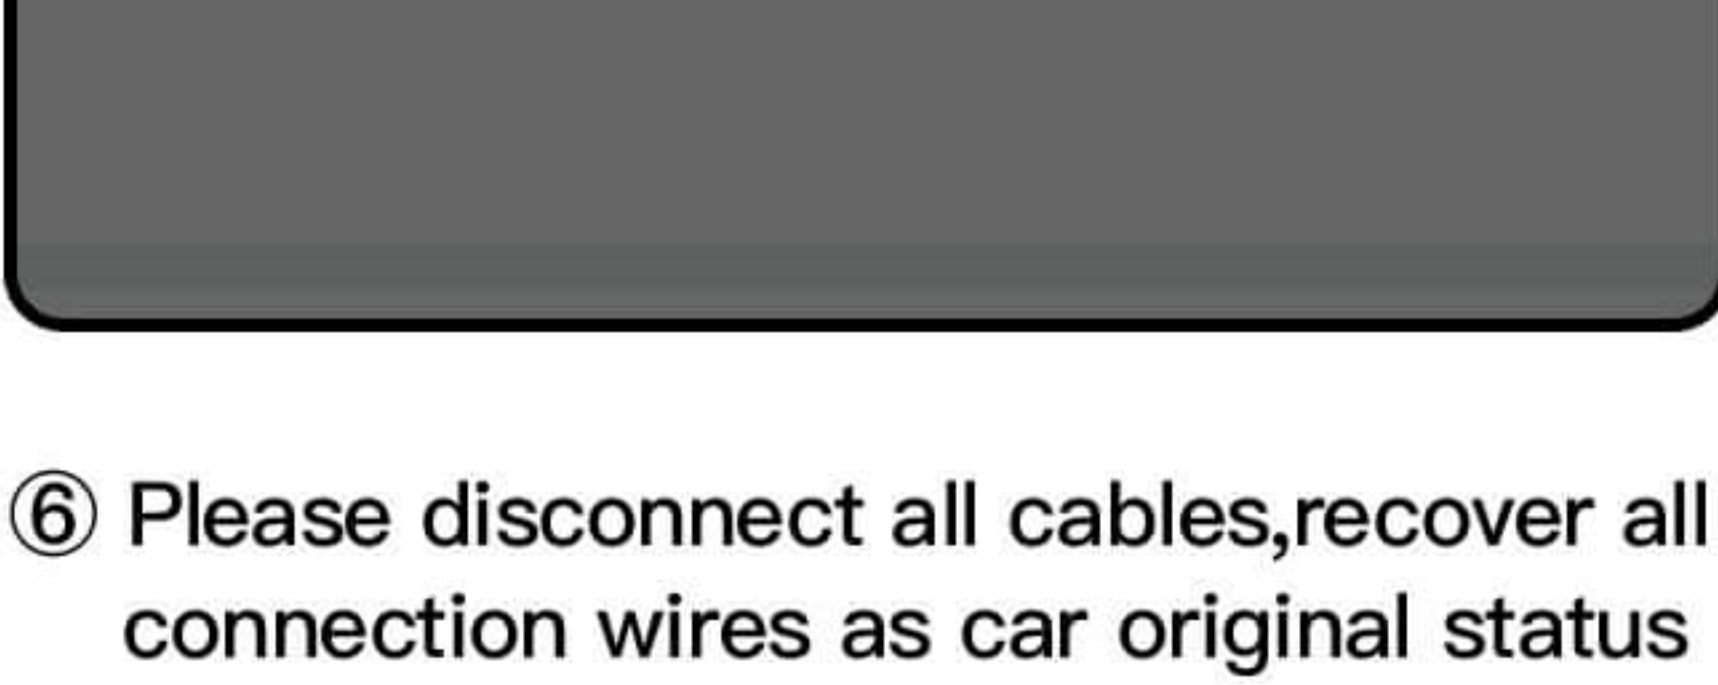

⑤ Please generate start chip referring to software interface

VVDI

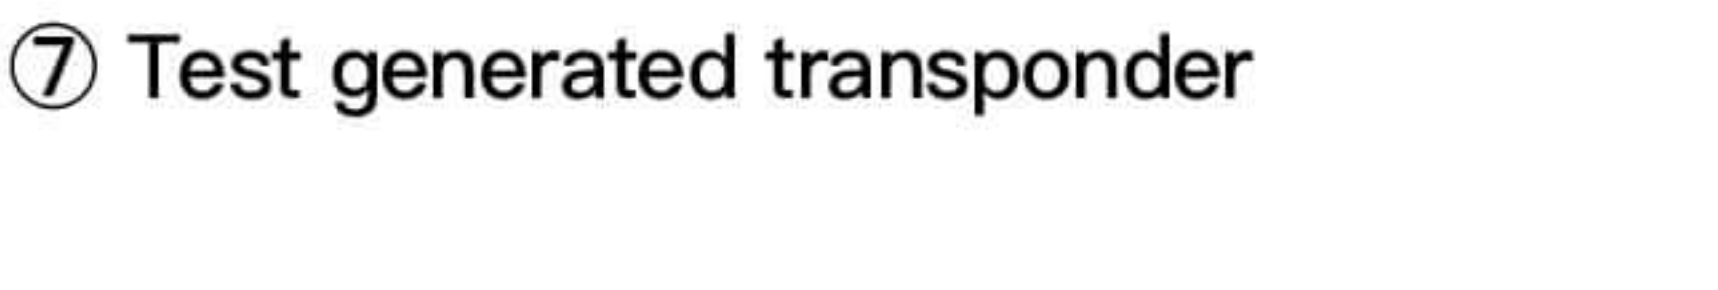

KEY TOOL MAX & MINI OBD

8A all key lost - Query calculation result

Calculation online
Server calculation succeeded

Generate master key
Master key generate successful, this key can start the car directly. please disconnect 8A all key lost adapter, recover the car status. if need to add other keys, please use MINI OBD for key programming!

Complete

⑥ Please disconnect all cables, recover all connection wires as car original status

If the connection wires not recovery to original status and start the car directly, the fuse box and device will be burnt

⑦ Test generated transponder