Xhorse®

Toyota Highlander

Support more models

Toyota Corolla、Camry、Levin、RAV etc.,

VVDI

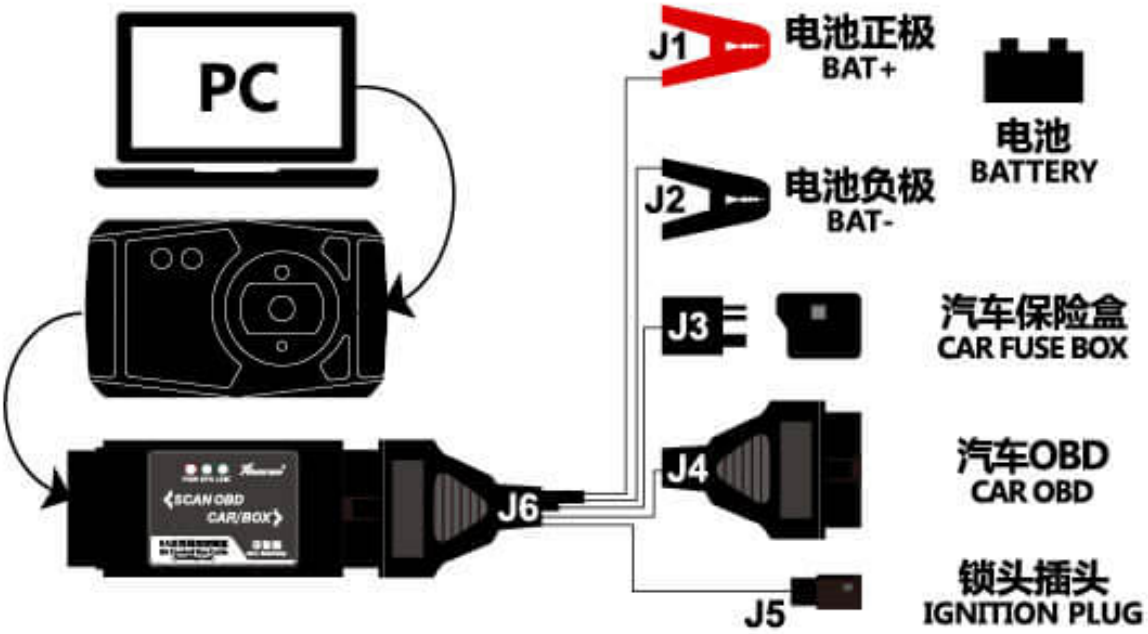
PC
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J6
SCAN OBD
CAR/BOX
J5
锁头插头
IGNITION PLUG

KEY TOOL MAX & MINI OBD

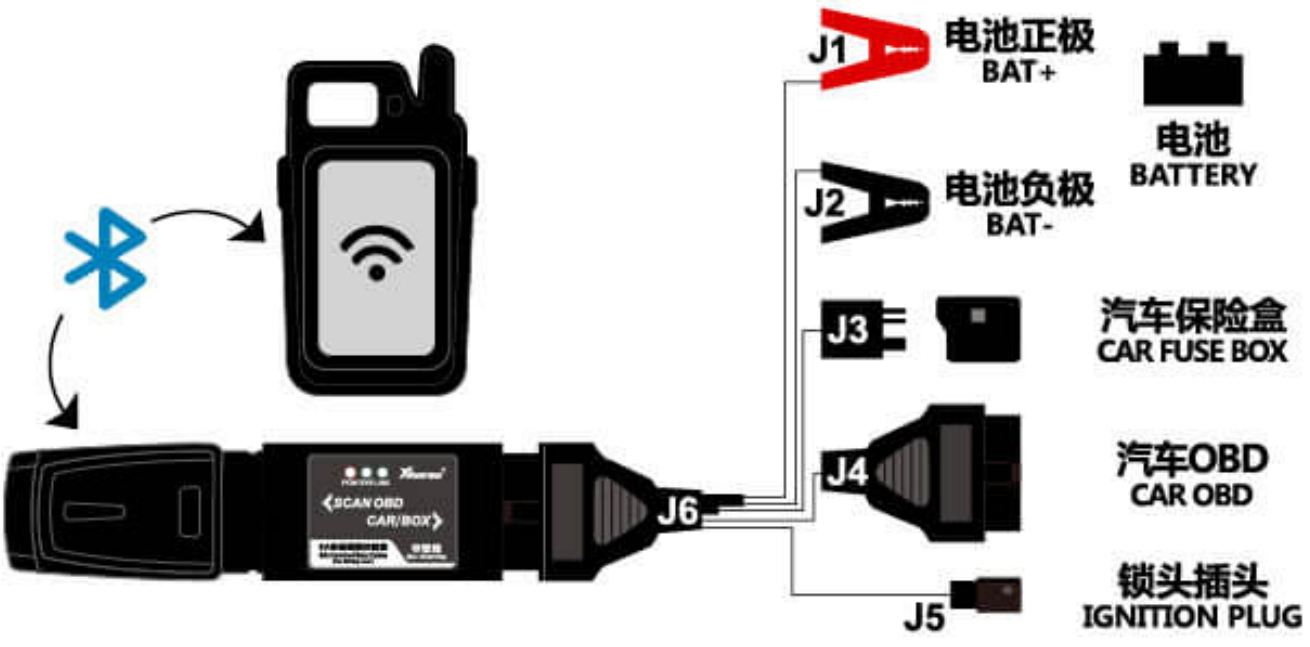
J1
电池正极
BAT+
J2
电池负极
BAT-
电池
BATTERY
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J5
锁头插头
IGNITION PLUG
J6
SCAN OBD
CAR/BOX

ⓘ Please update device to latest version for this function

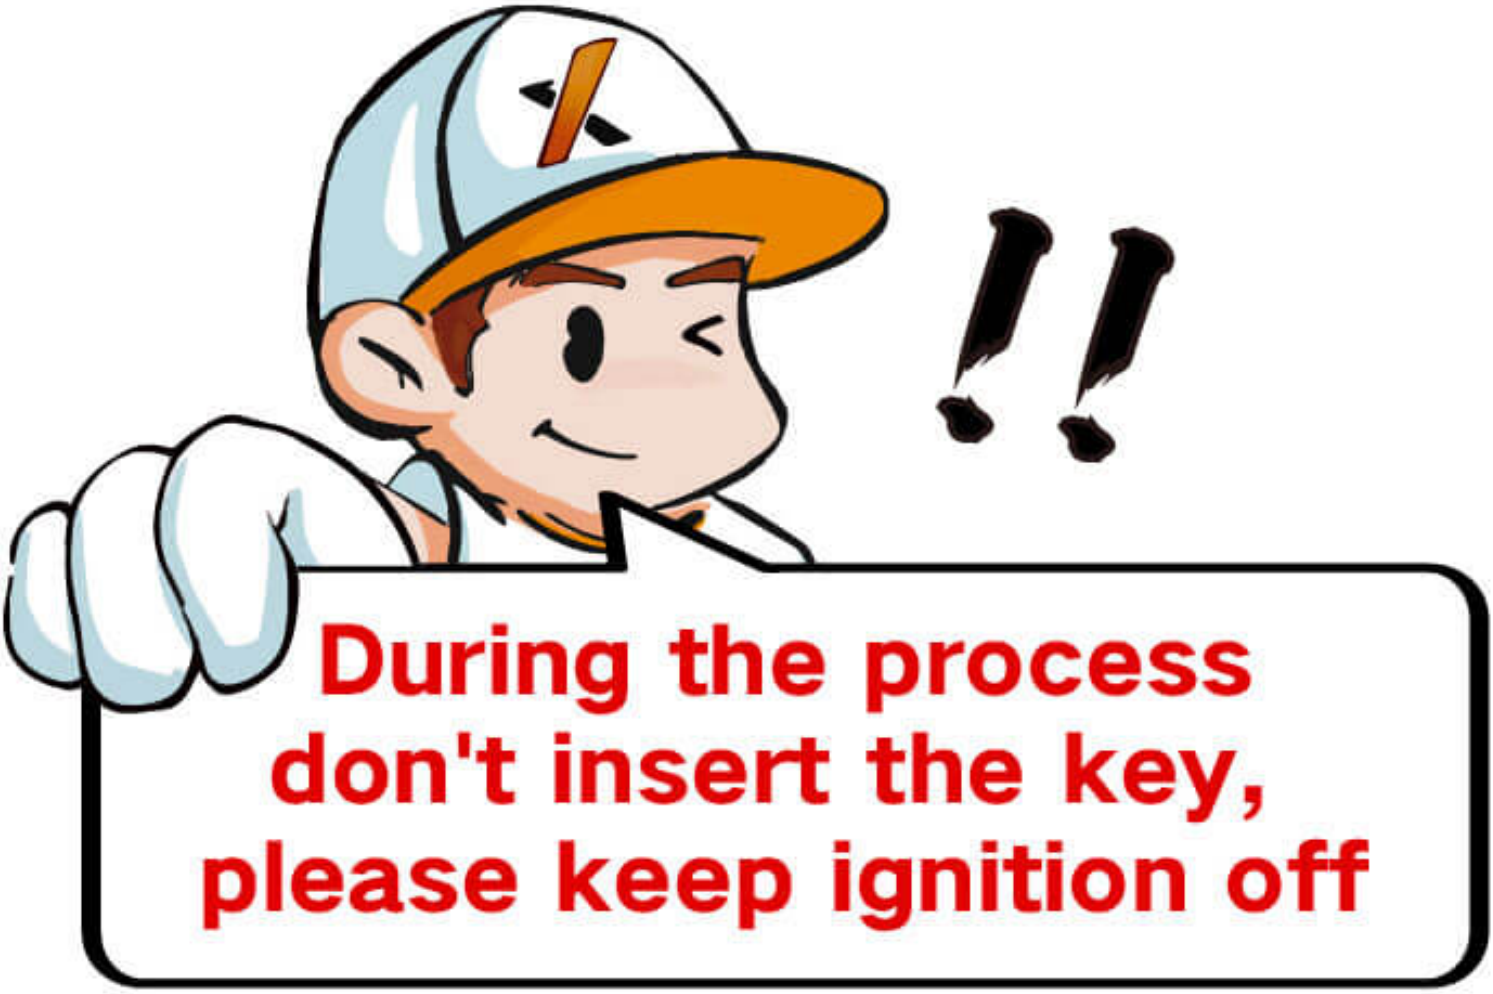

During the process don't insert the key, please keep ignition off

① Disconnect the positive pole of the car battery to protect the connector and avoid short circuits

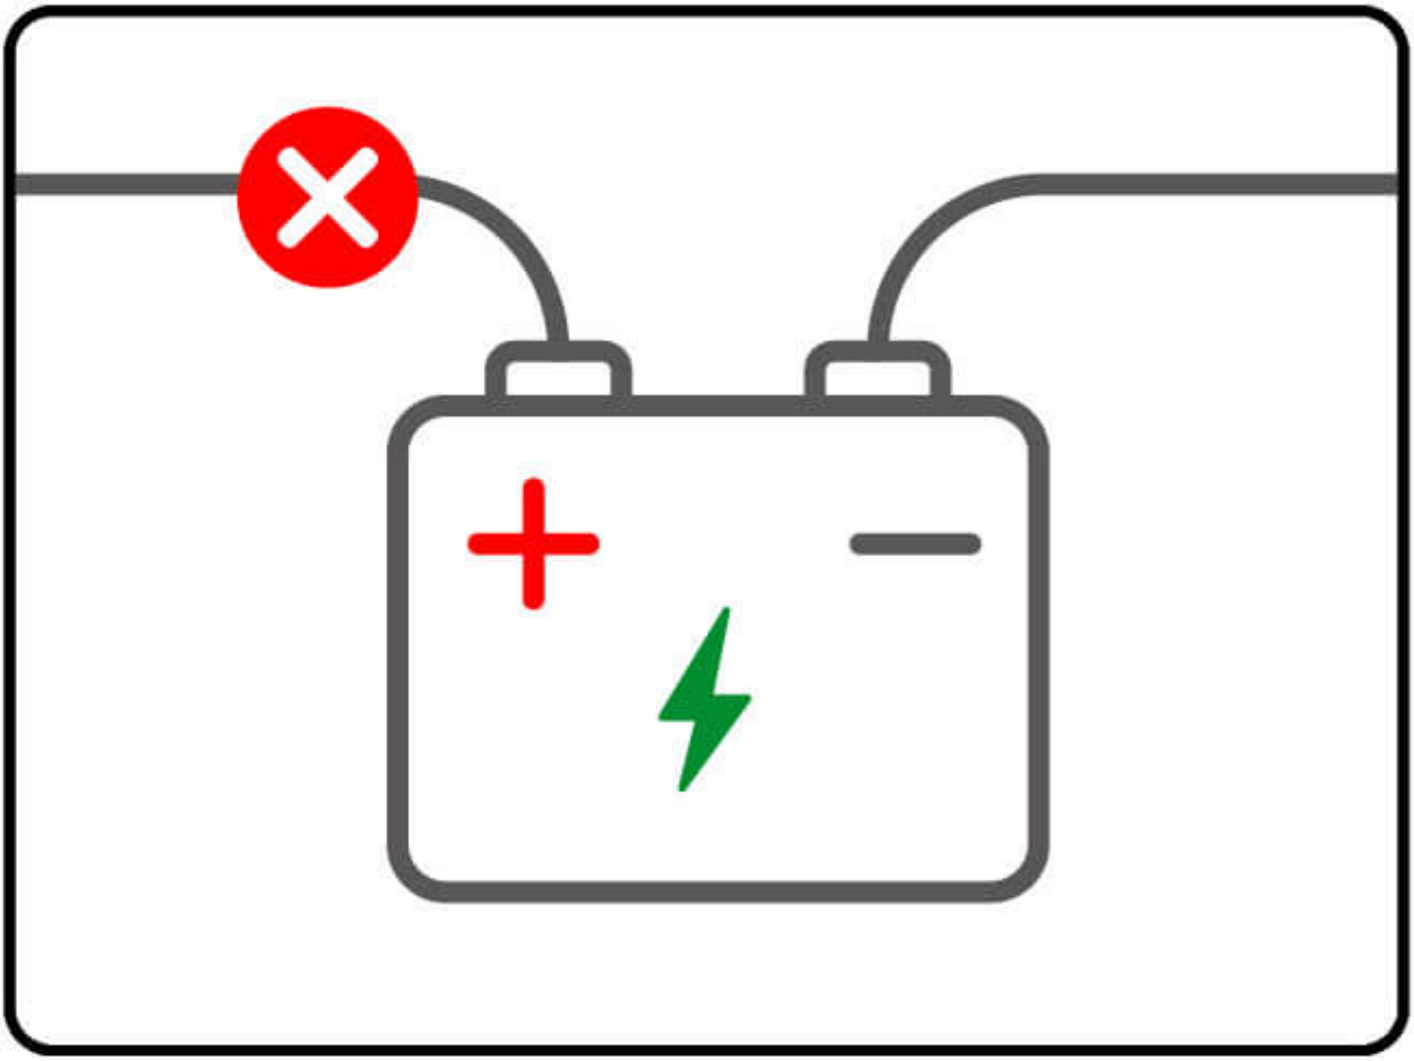

② Please connect to fuse box as the image

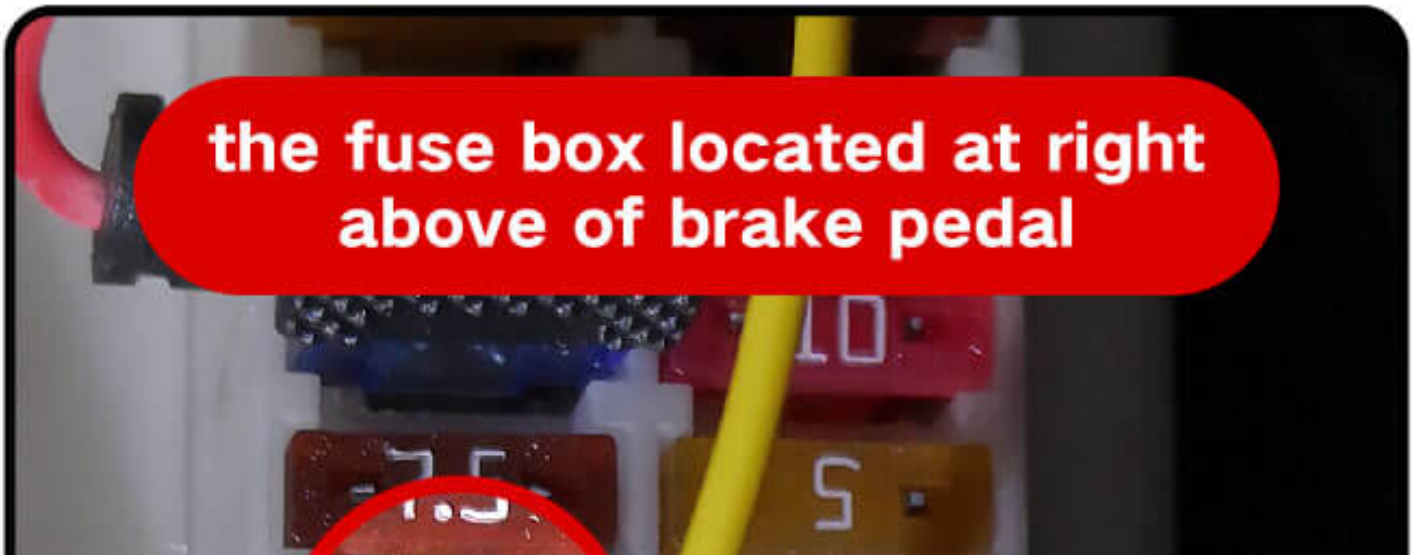

the fuse box located at right above of brake pedal

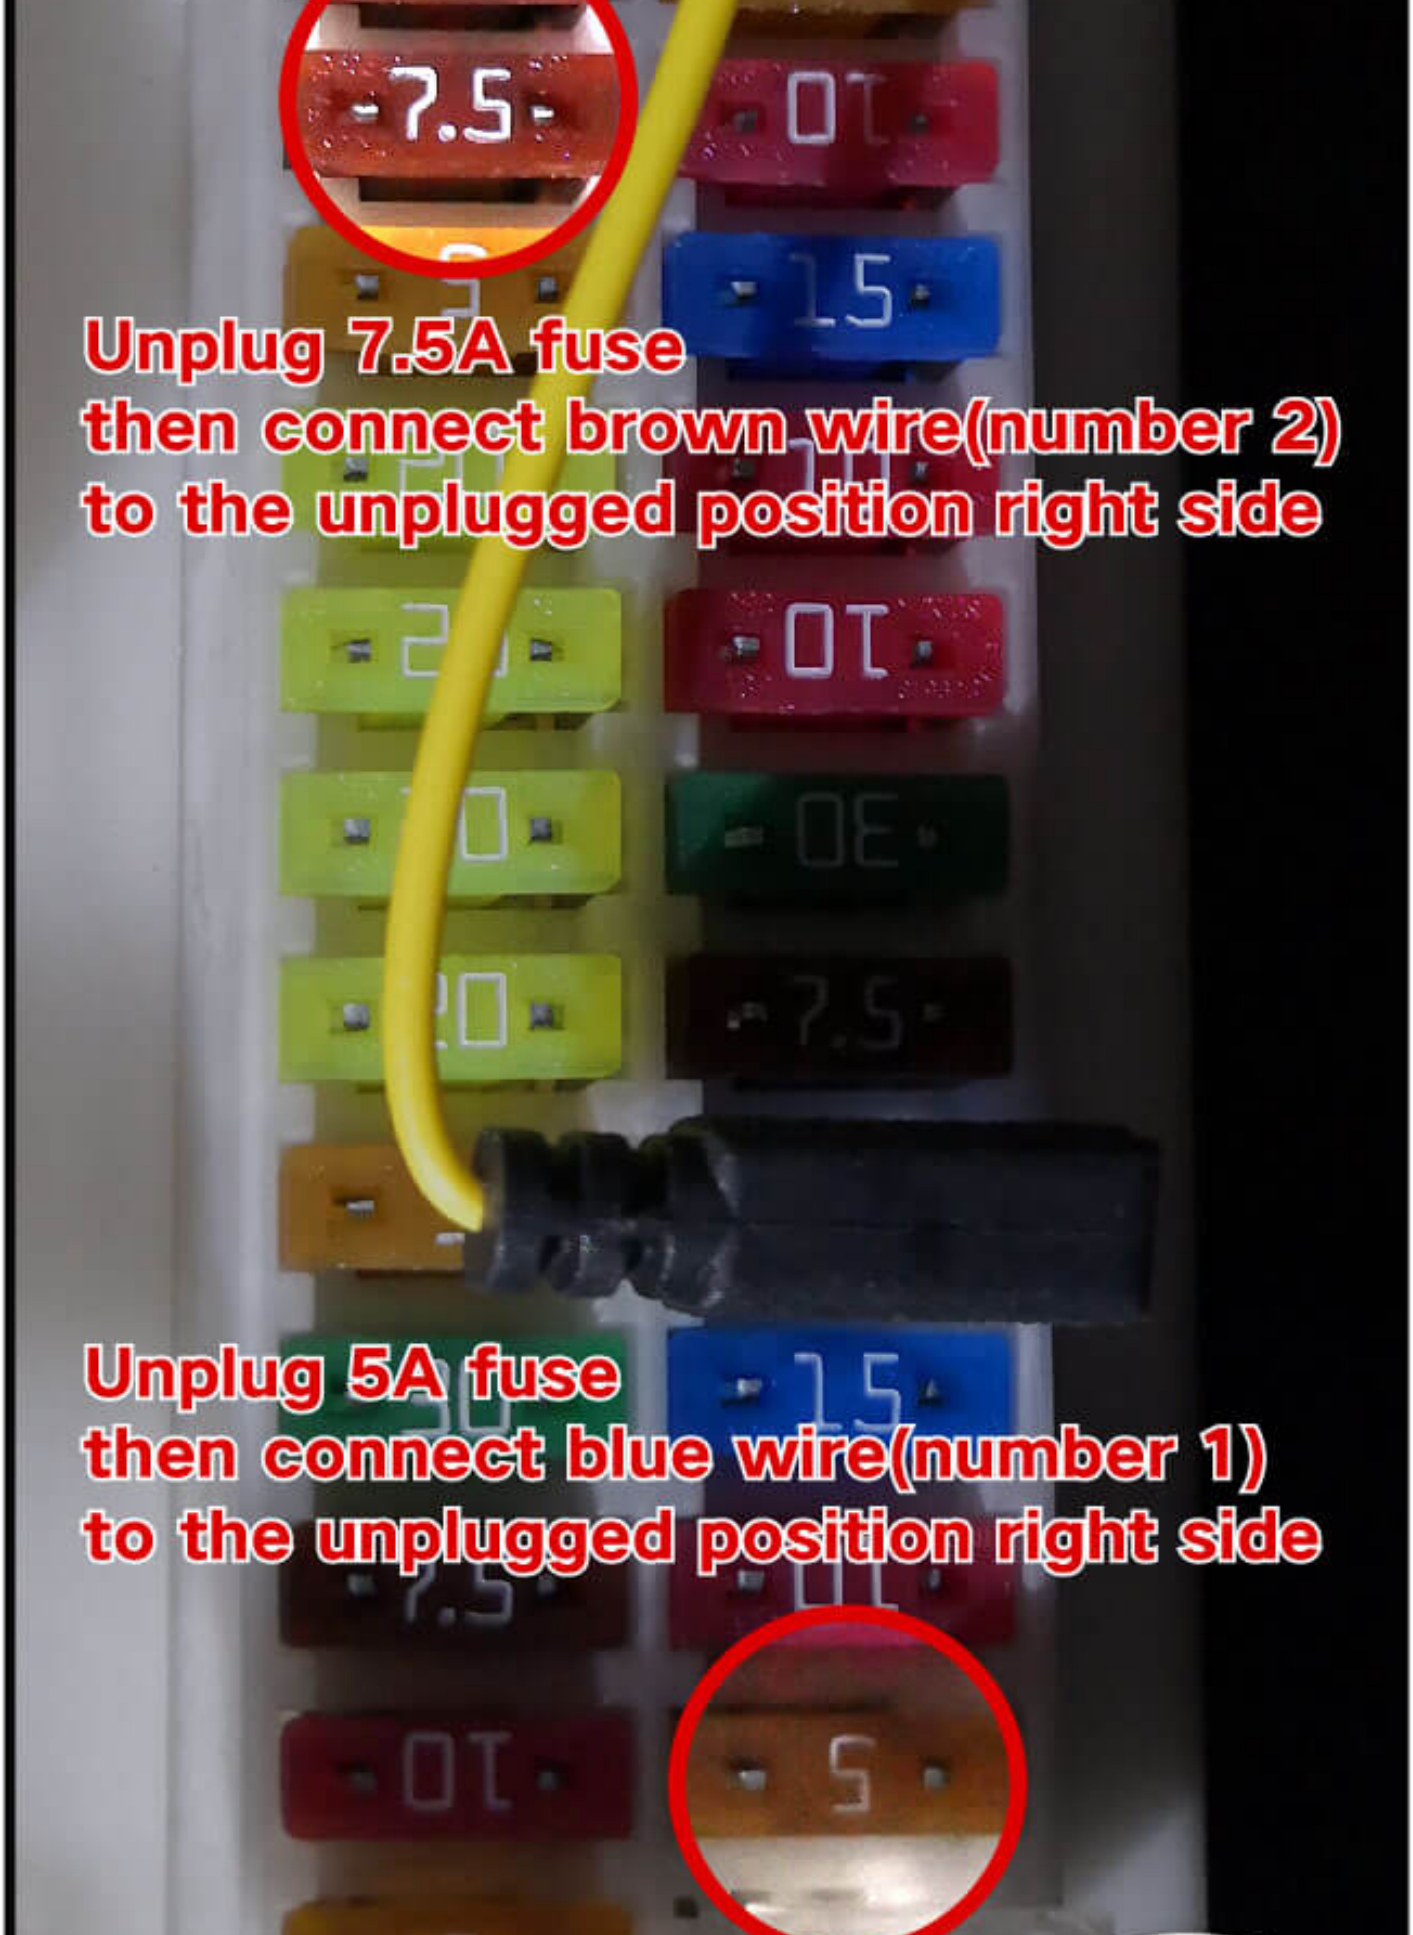
7.5
10
15
10
20
30
20
7.5
20
30
15
7.5
10
10
5

Unplug 7.5A fuse
then connect brown wire(number 2)
to the unplugged position right side

Unplug 5A fuse
then connect blue wire(number 1)
to the unplugged position right side

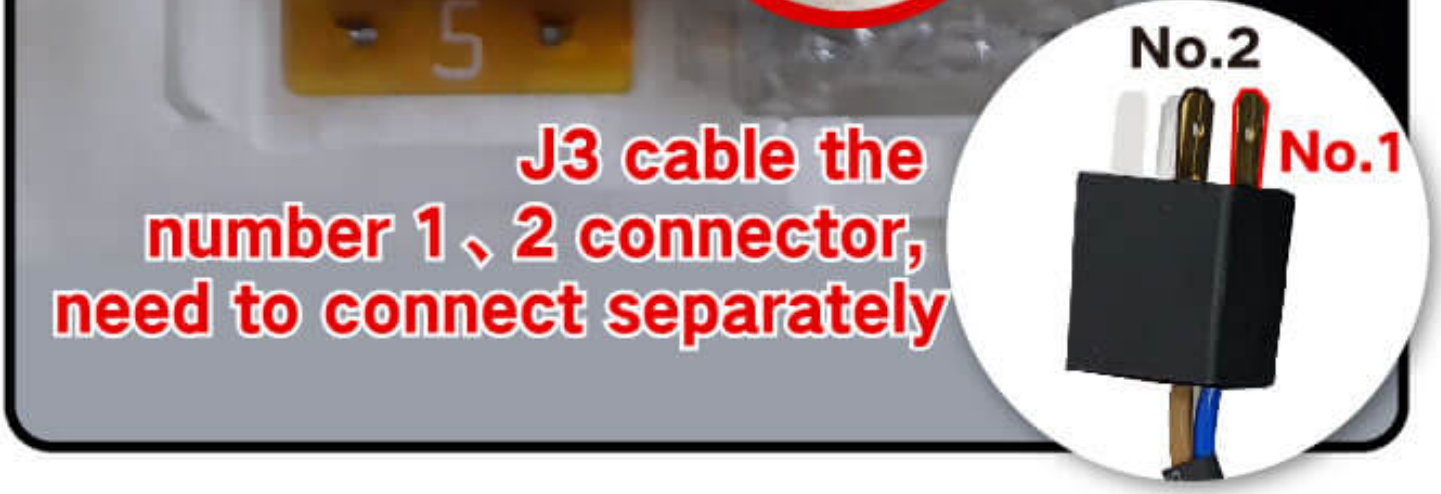

J3 cable the number 1、2 connector, need to connect separately

J3 lock plug

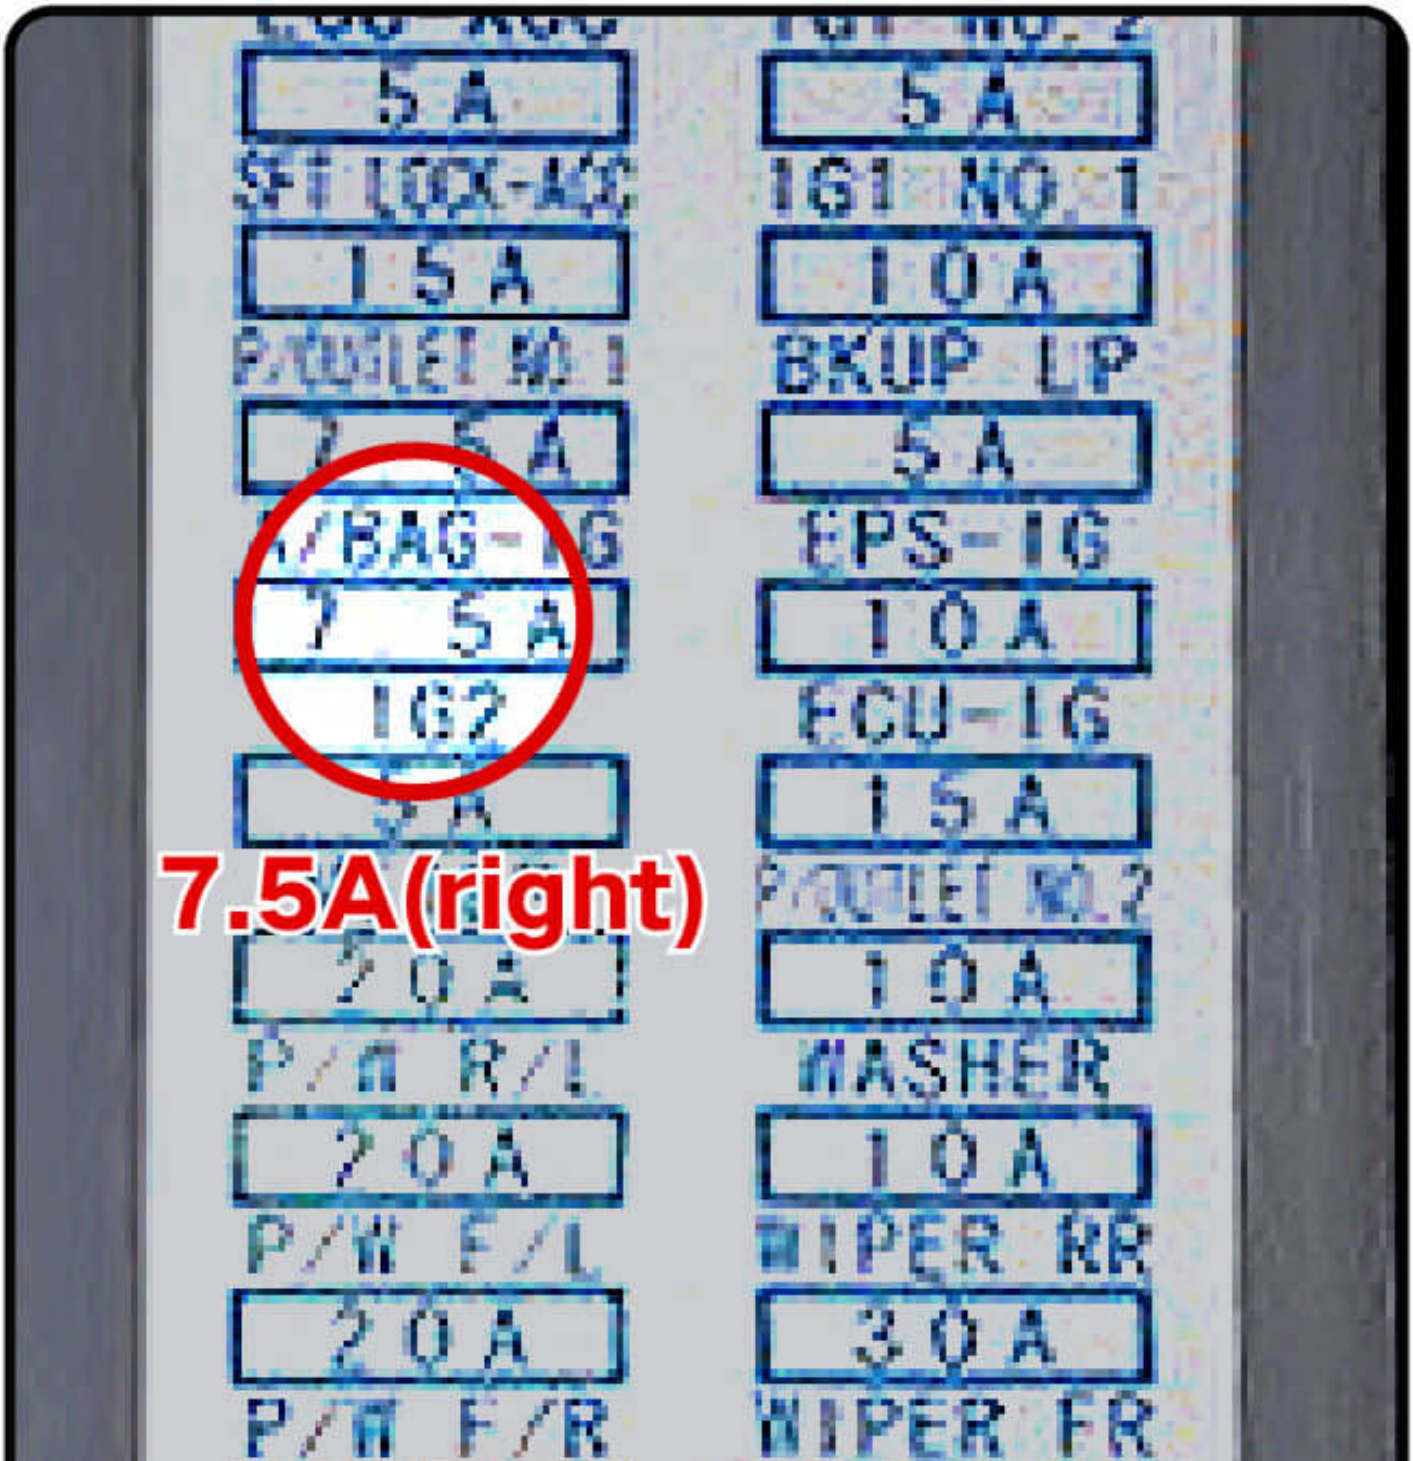
5A
5A
SFT LOCK-ACC
IG1 NO.1
15A
10A
P/OUTLET NO.1
BKUP LP
7.5A
5A
A/BAG-IG
EPS-IG
7.5A
10A
IG2
ECU-IG
5A
15A
P/OUTLET NO.2
20A
10A
P/W R/L
WASHER
20A
10A
P/W F/L
WIPER RR
20A
30A
P/W F/R
WIPER FR

7.5A(right)

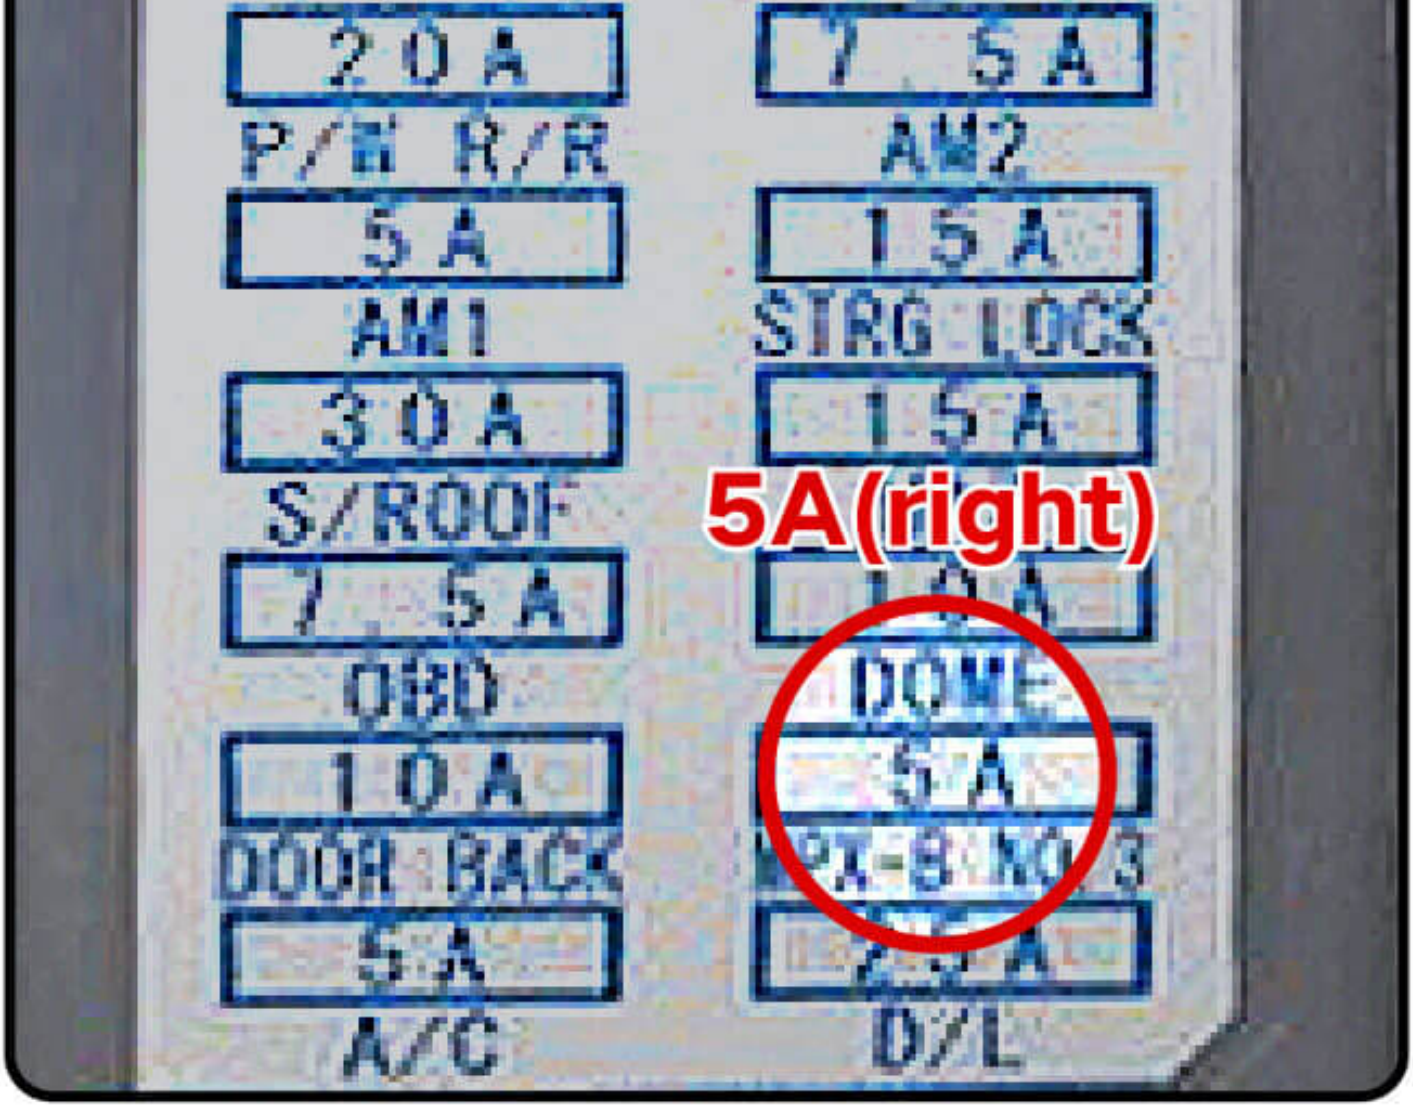
20A
7.5A
P/W R/R
AM2
5A
15A
AM1
STRG LOCK
30A
15A
S/ROOF
5A(right)
7.5A
10A
OBD
DOME
10A
5A
DOOR BACK
PX-B NO.3
5A
25A
A/C
D/L

③ Please connect the ELV wires as shown

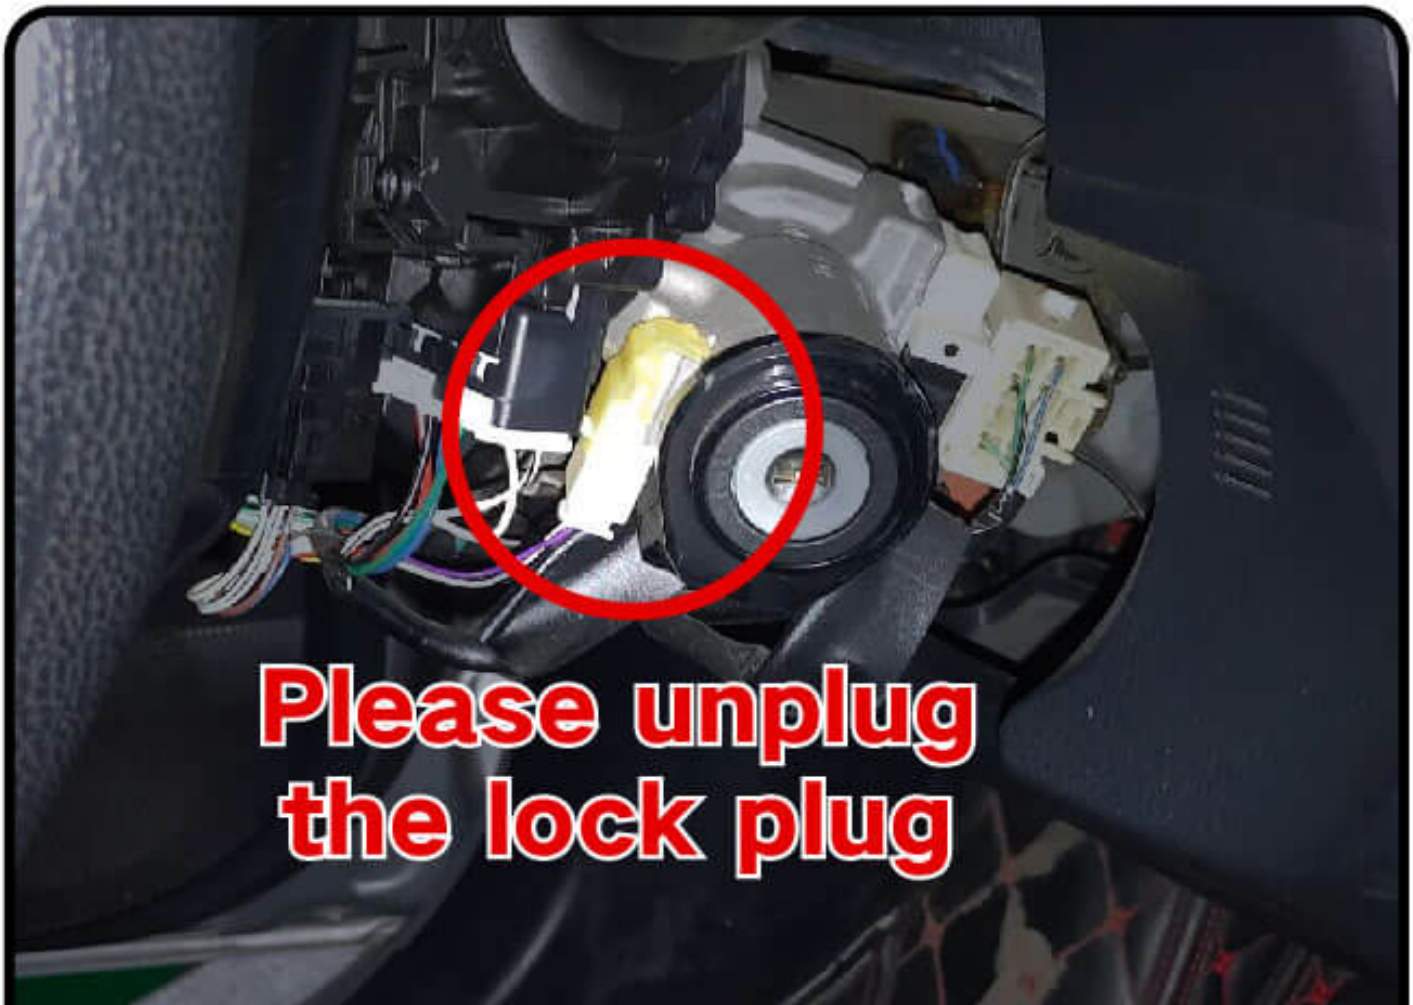
Please unplug
the lock plug

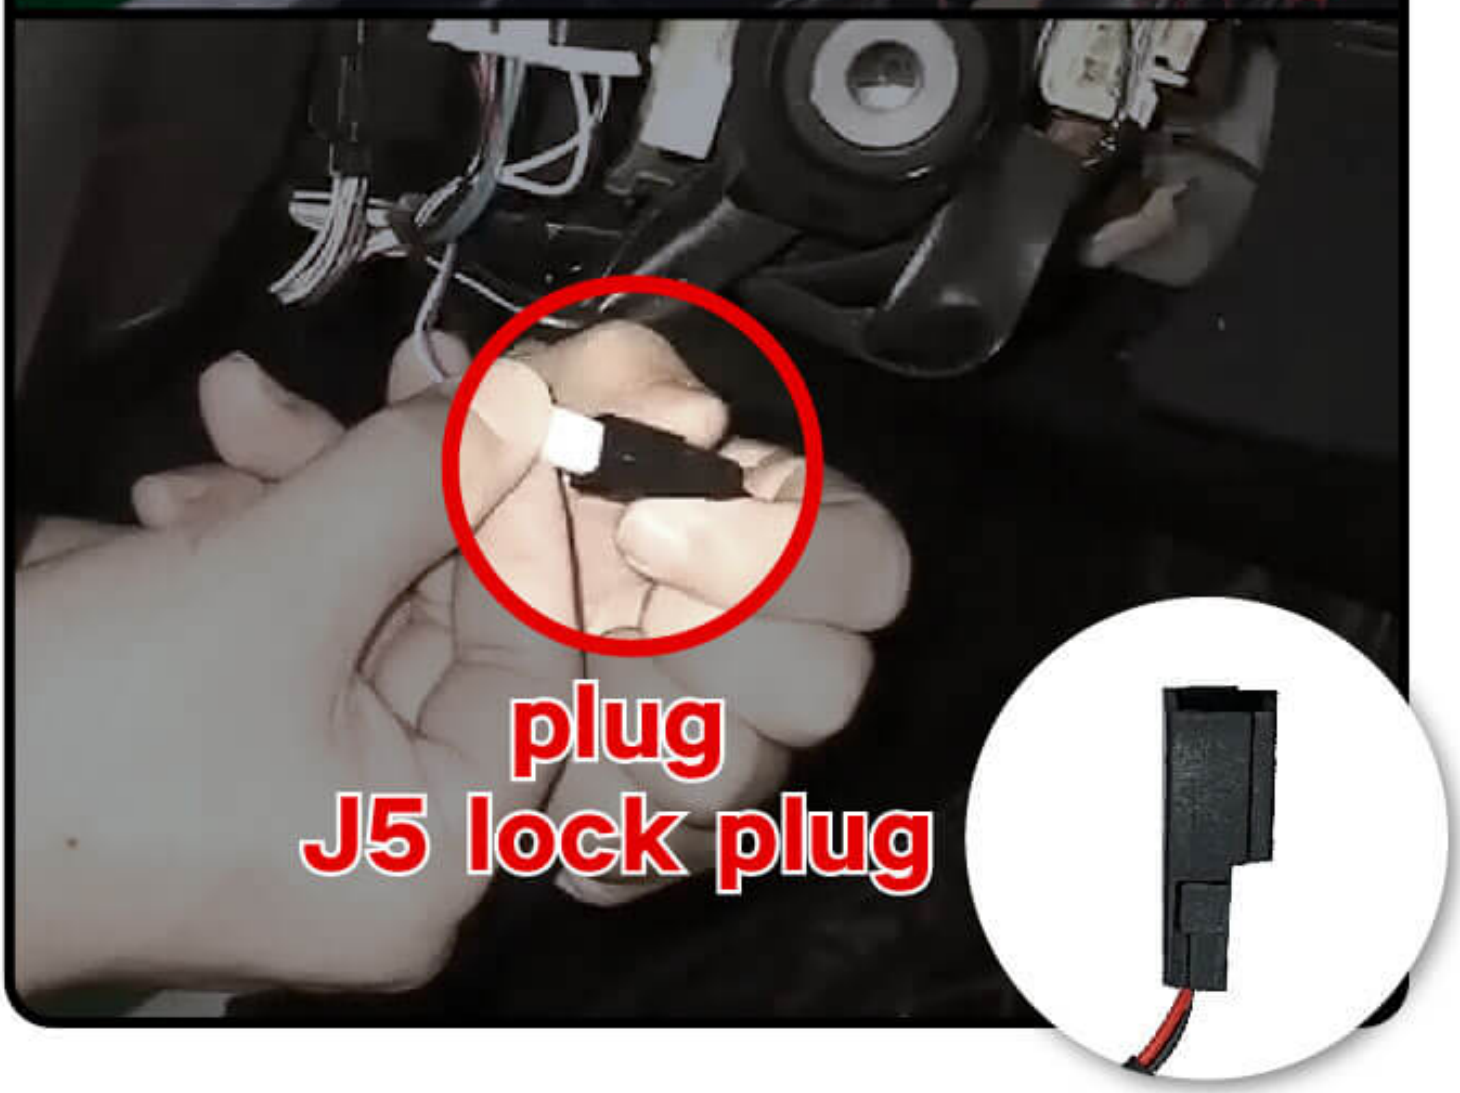
plug
J5 lock plug

J5 lock plug

④ Please connect to car OBD,
all key lost cables and car battery

J4 lock plug

VVDI

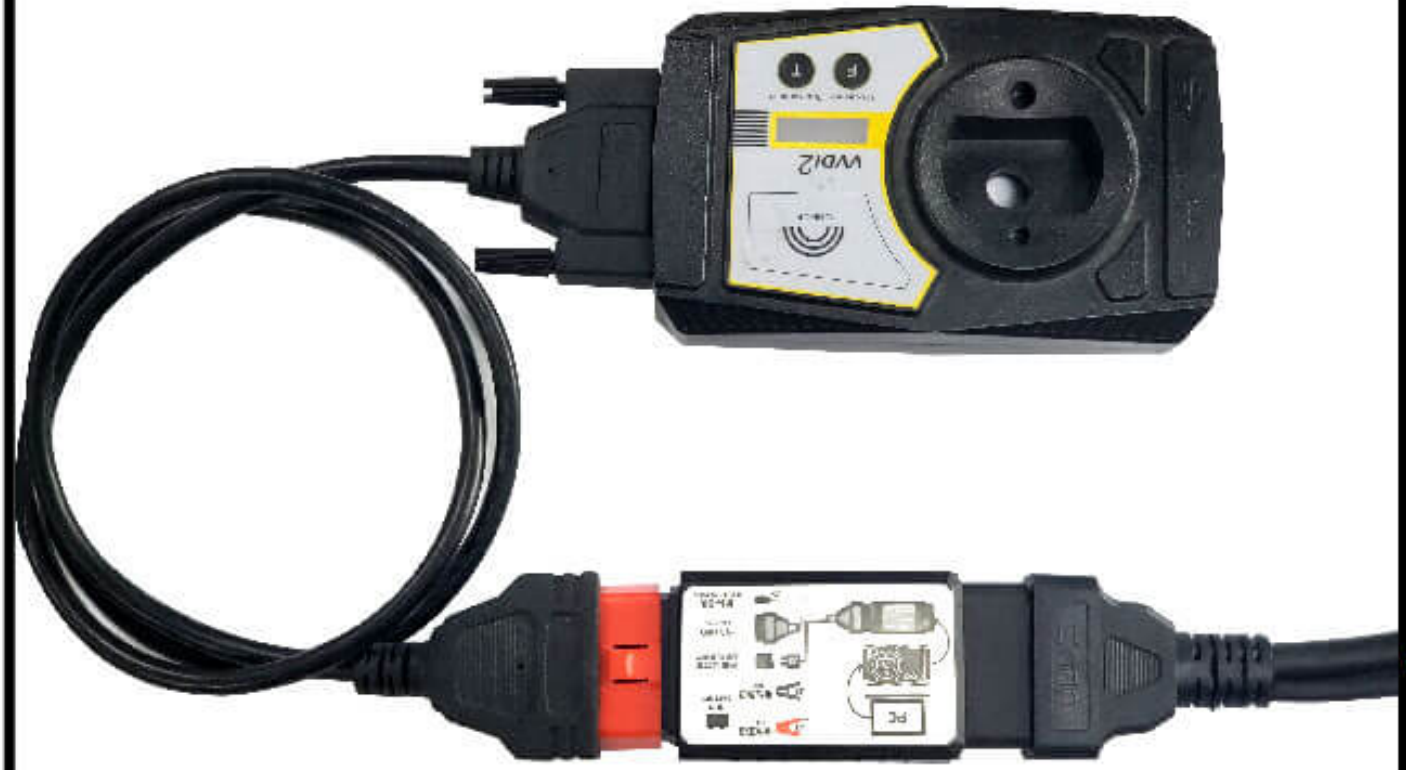

J6 lock plug

KEY TOOL MAX

&MINI OBD

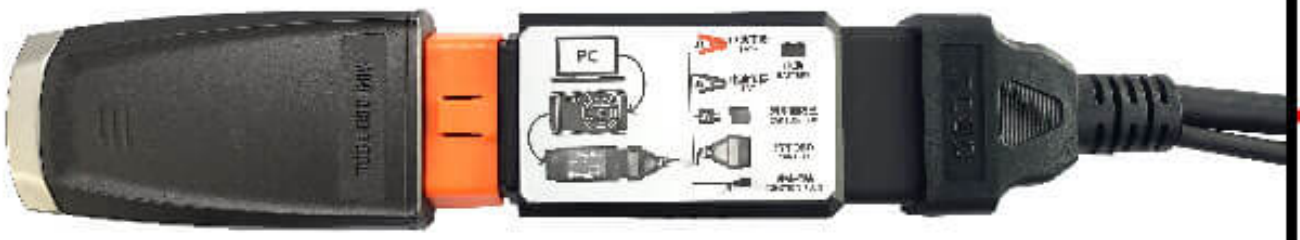
J6 lock plug

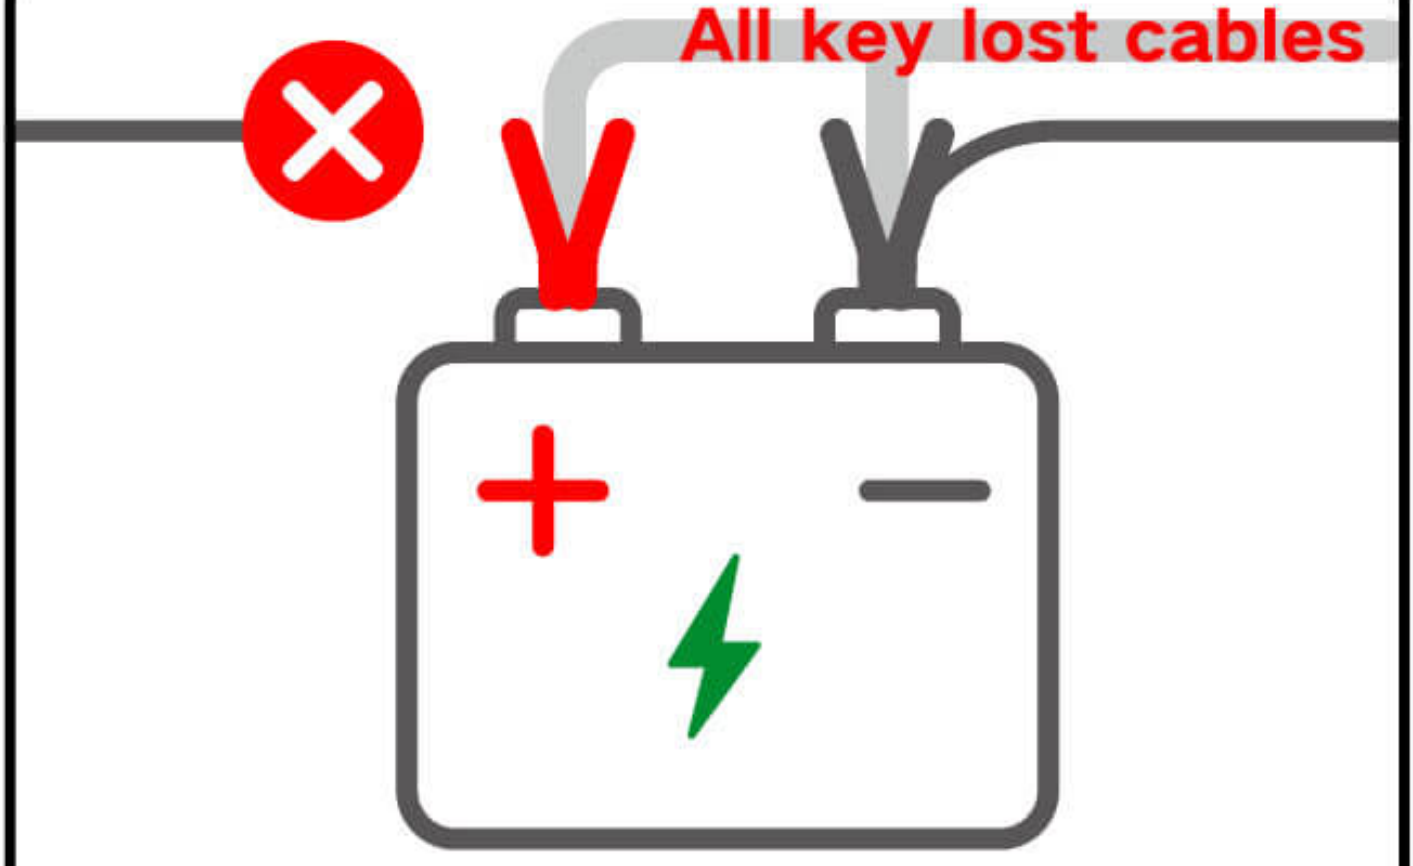
All key lost cables
+
−

⑤ Please generate start chip referring to software interface

VVDI

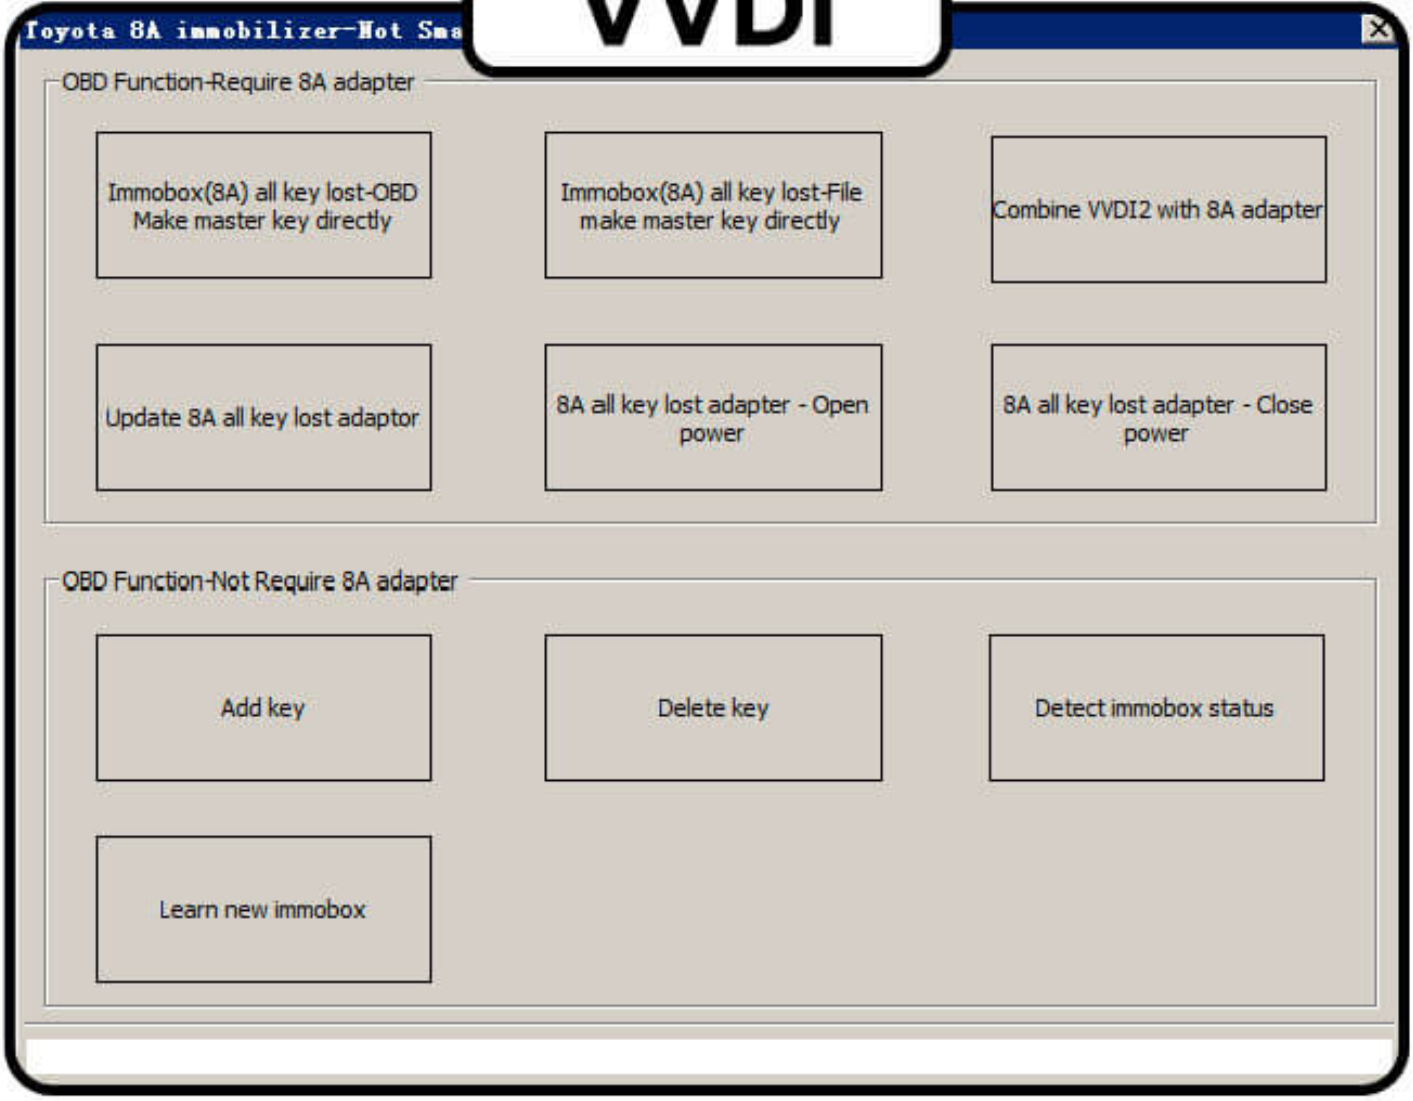
Toyota 8A immobilizer-Hot Sma
OBD Function-Require 8A adapter
Immobox(8A) all key lost-OBD Make master key directly
Immobox(8A) all key lost-File make master key directly
Combine VVDI2 with 8A adapter
Update 8A all key lost adaptor
8A all key lost adapter - Open power
8A all key lost adapter - Close power
OBD Function-Not Require 8A adapter
Add key
Delete key
Detect immobox status
Learn new immobox

KEY TOOL MAX &MINI OBD

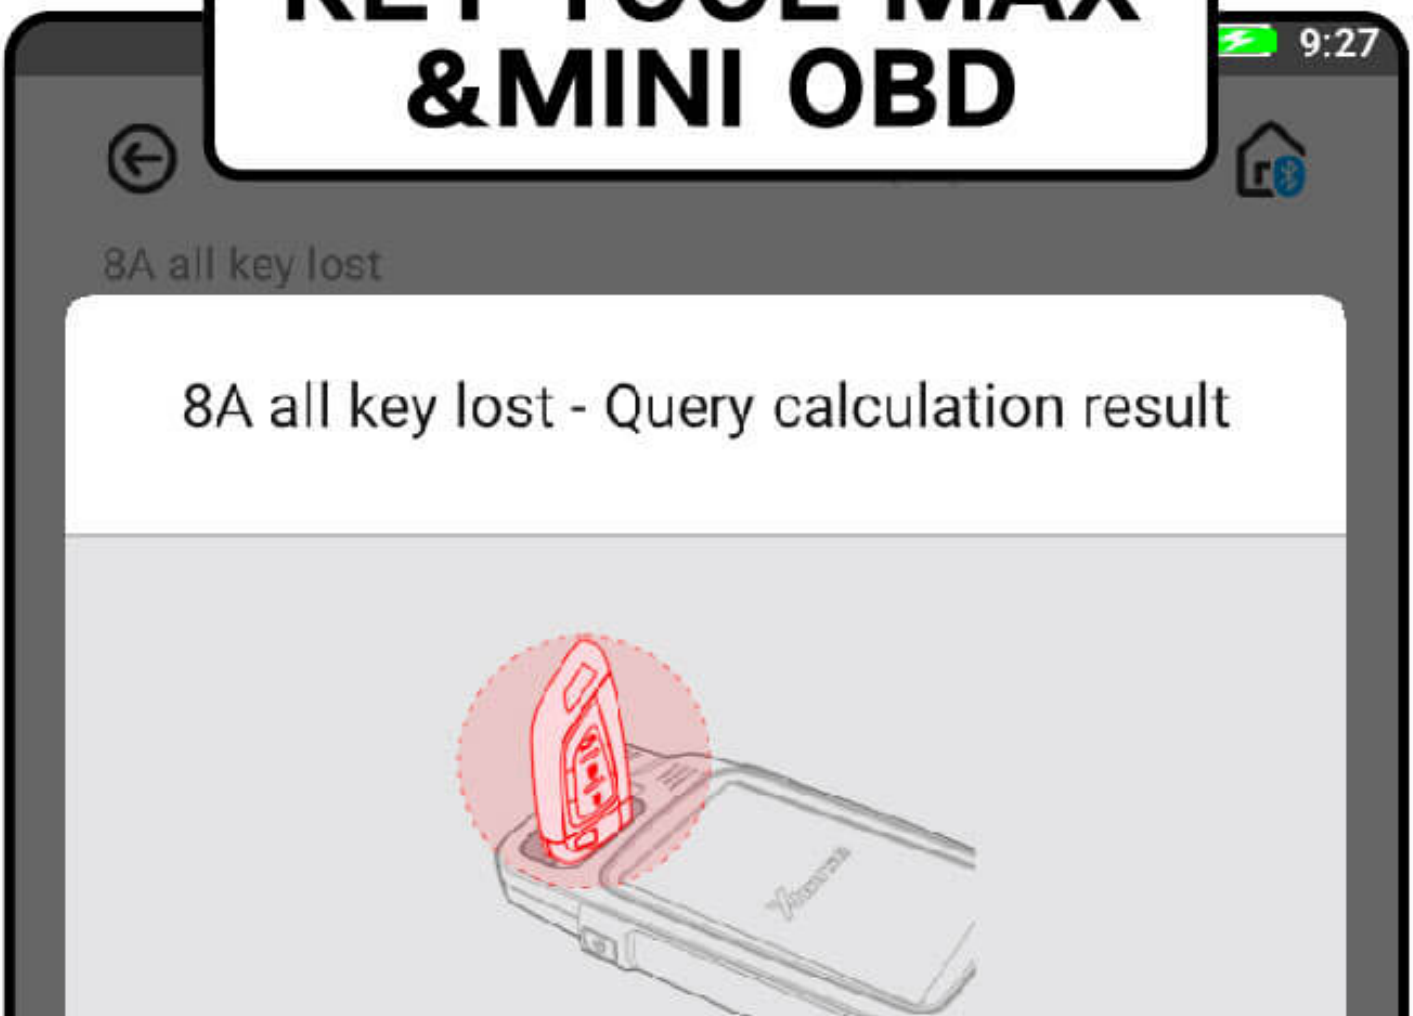
9:27
8A all key lost

8A all key lost - Query calculation result

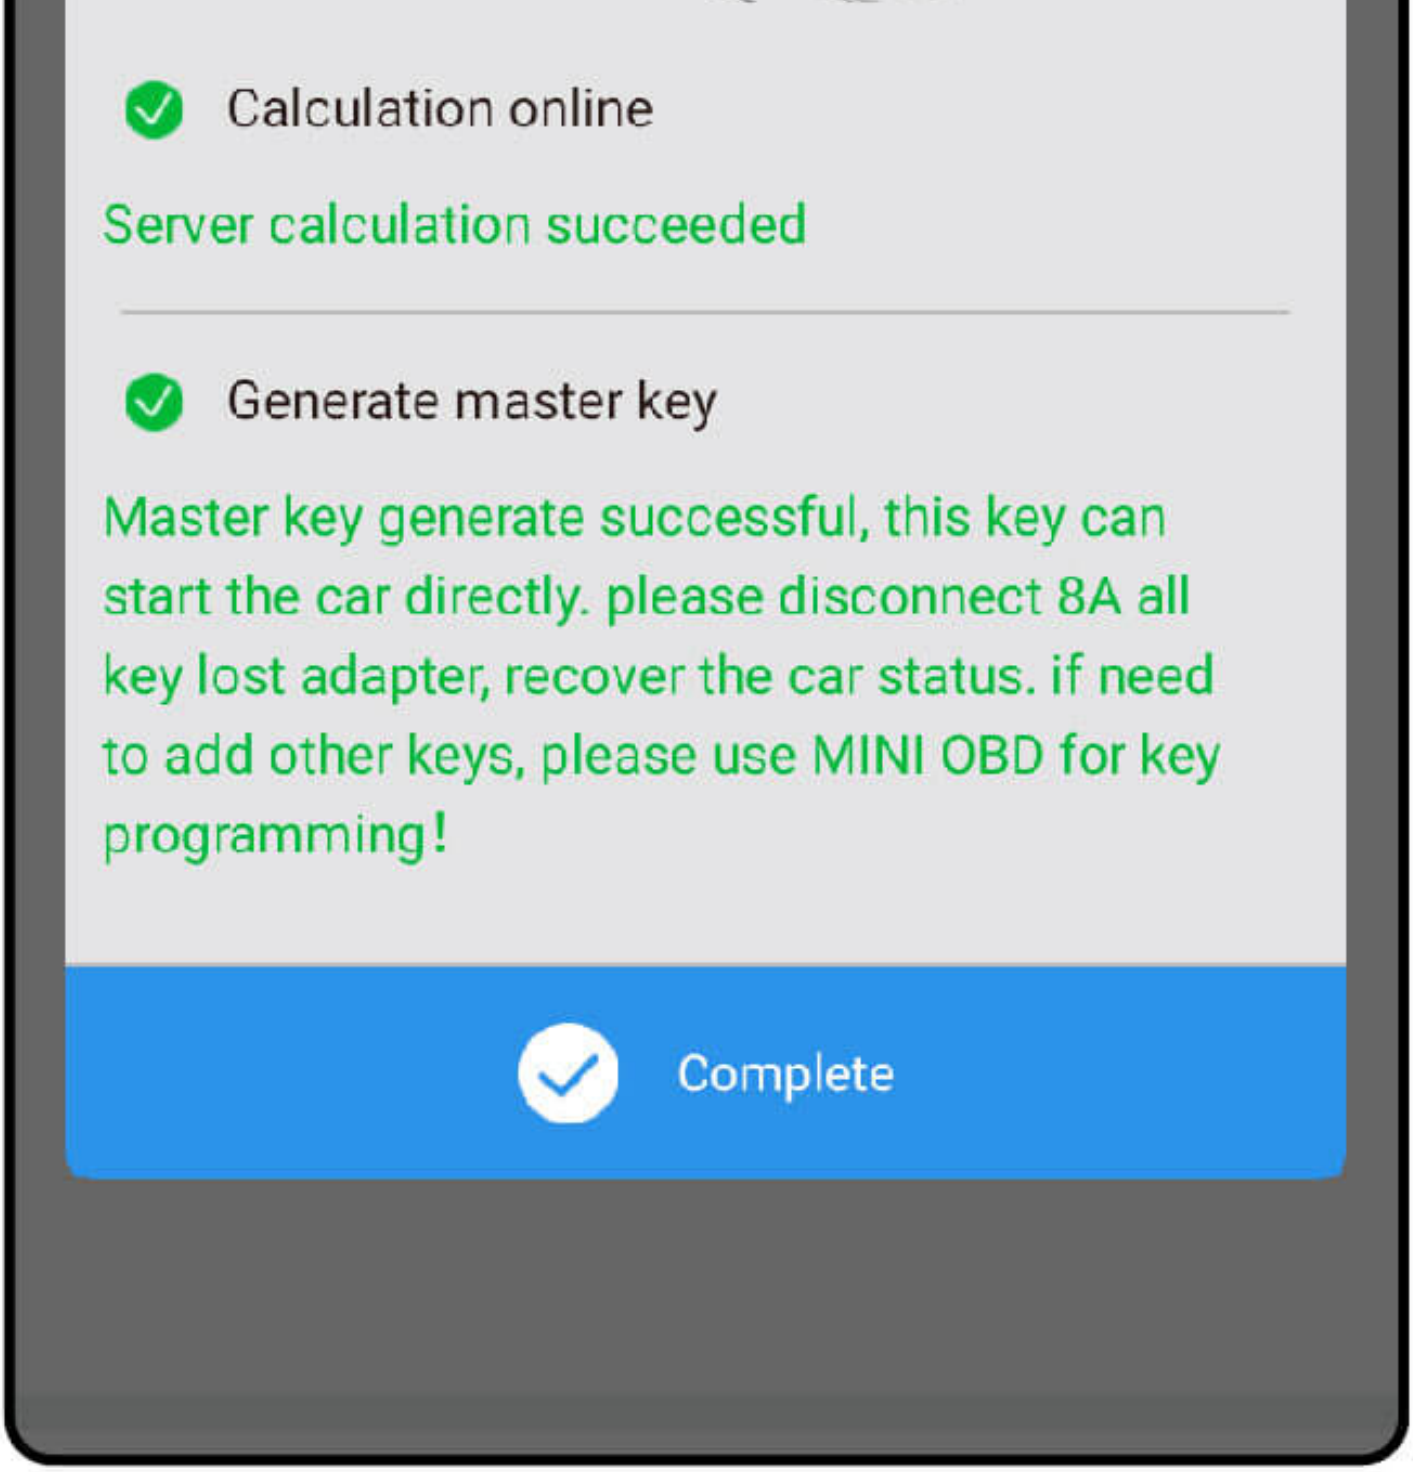

✓ Calculation online

Server calculation succeeded

✓ Generate master key

Master key generate successful, this key can start the car directly. please disconnect 8A all key lost adapter, recover the car status. if need to add other keys, please use MINI OBD for key programming!

⑥ Please disconnect all cables,recover all connection wires as car original status

If the connection wires not recovery to original status and start the car directly, the fuse boxe and device will be burnt

⑦ Test generated transponder