Xhorse®

Toyota HILUX

Support more models

Toyota Camry、Prado、Levin、RAV、REIZ etc.,

VVDI

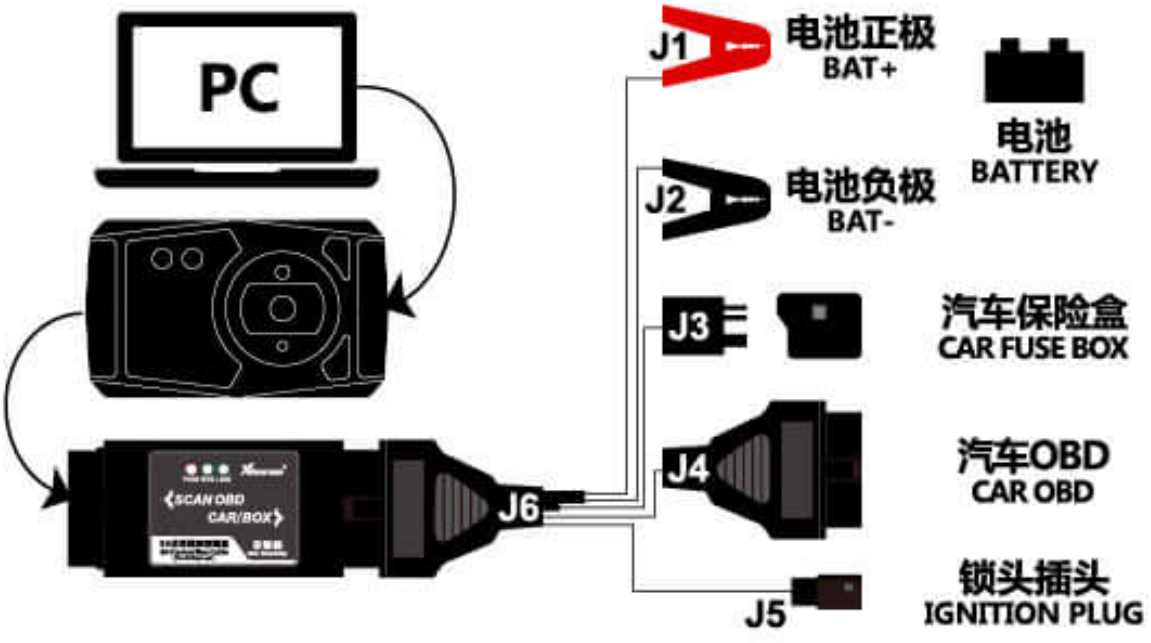
PC
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J5
锁头插头
IGNITION PLUG
J6
SCAN OBD
CAR/BOX

KEY TOOL MAX & MINI OBD

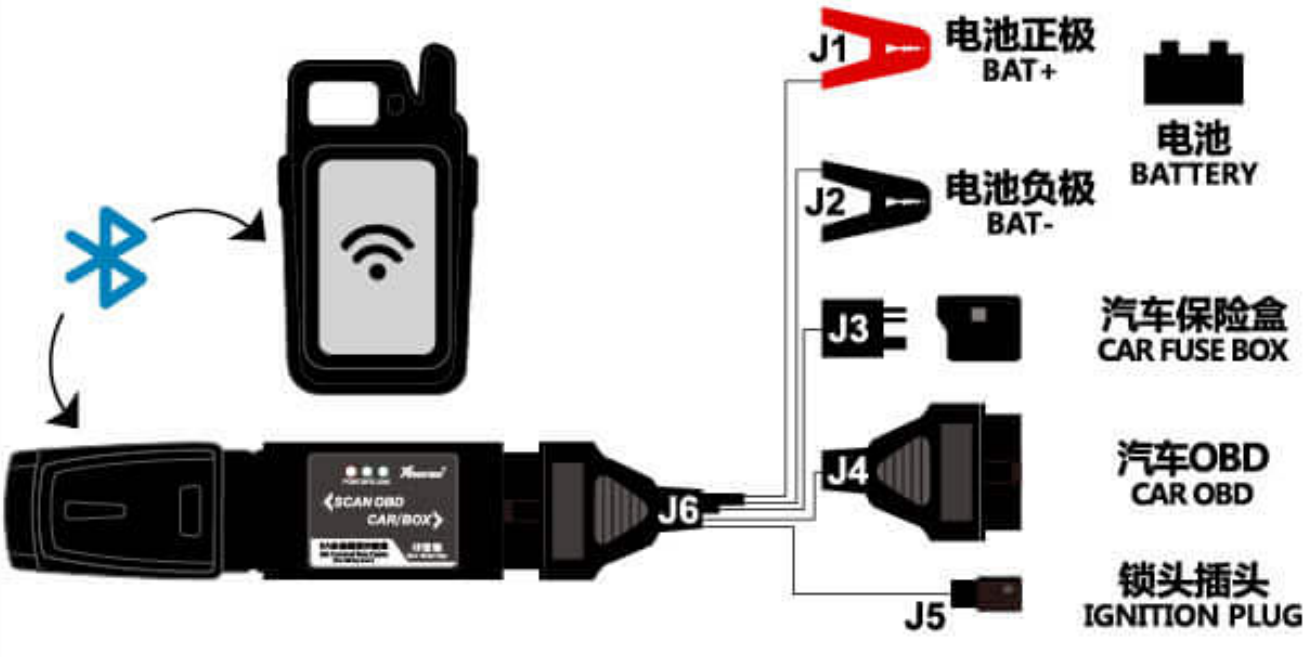
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J5
锁头插头
IGNITION PLUG
J6
SCAN OBD
CAR/BOX

ⓘ Please update device to latest version for this function

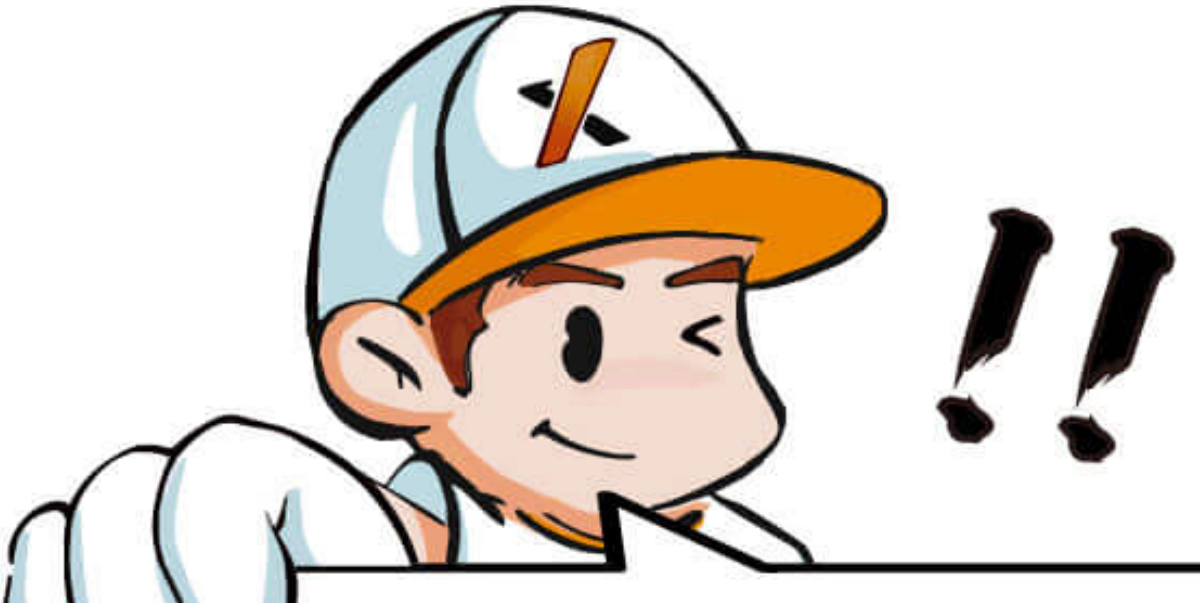

During the process don't insert the key, please keep ignition off

① Disconnect the positive pole of the car battery to protect the connector and avoid short circuits

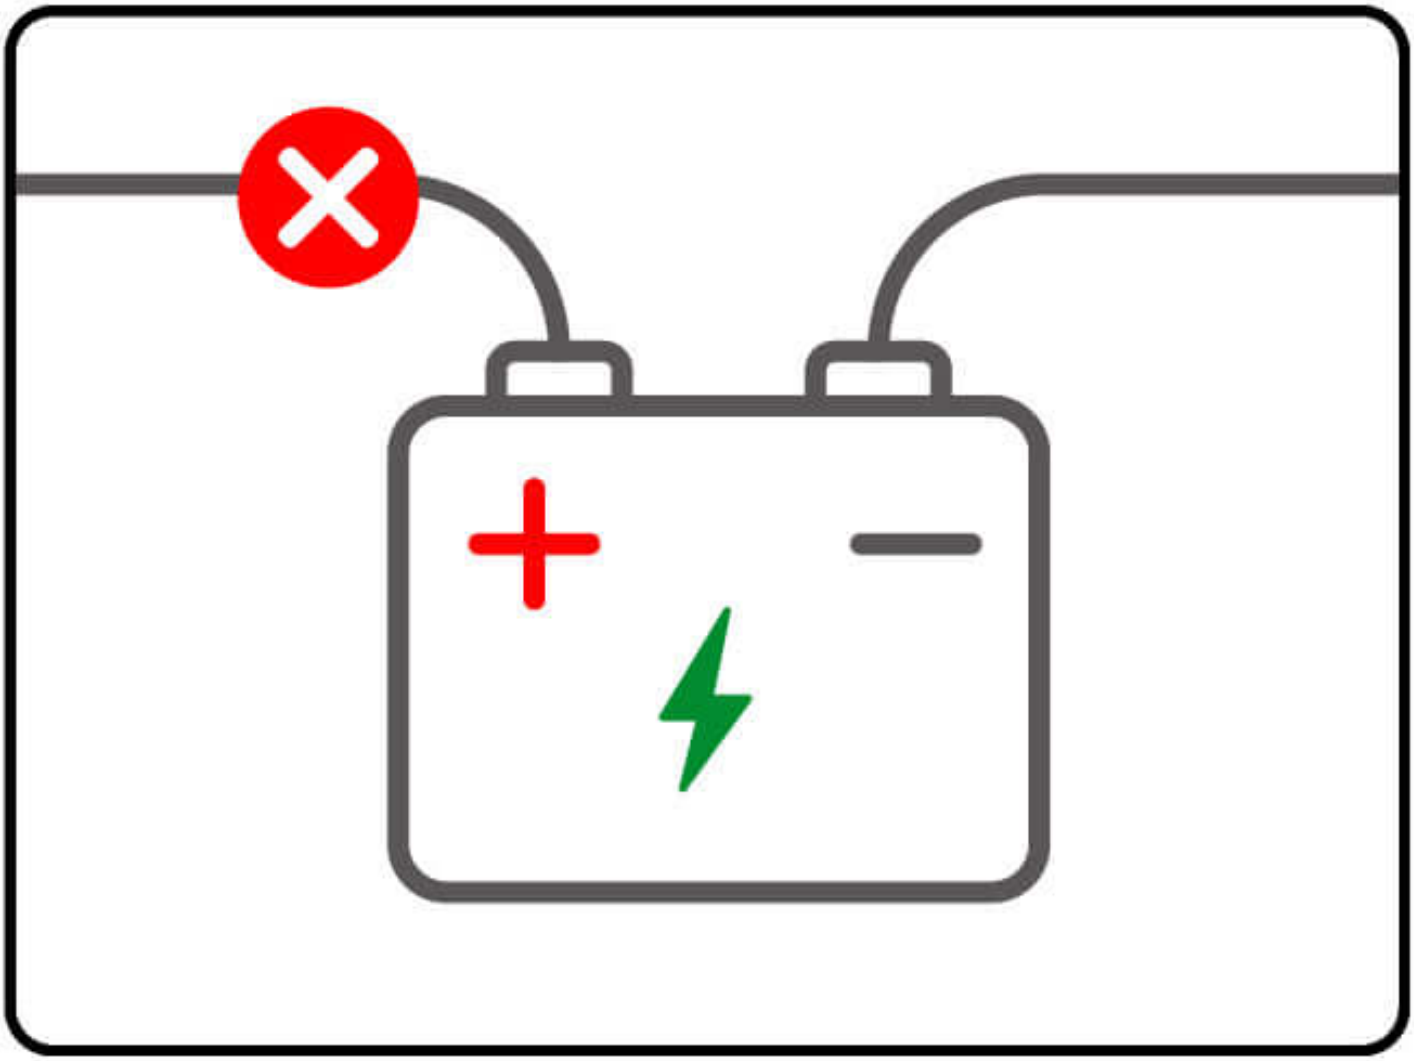

② Please connect to fuse box as the image

Located at engineer right side

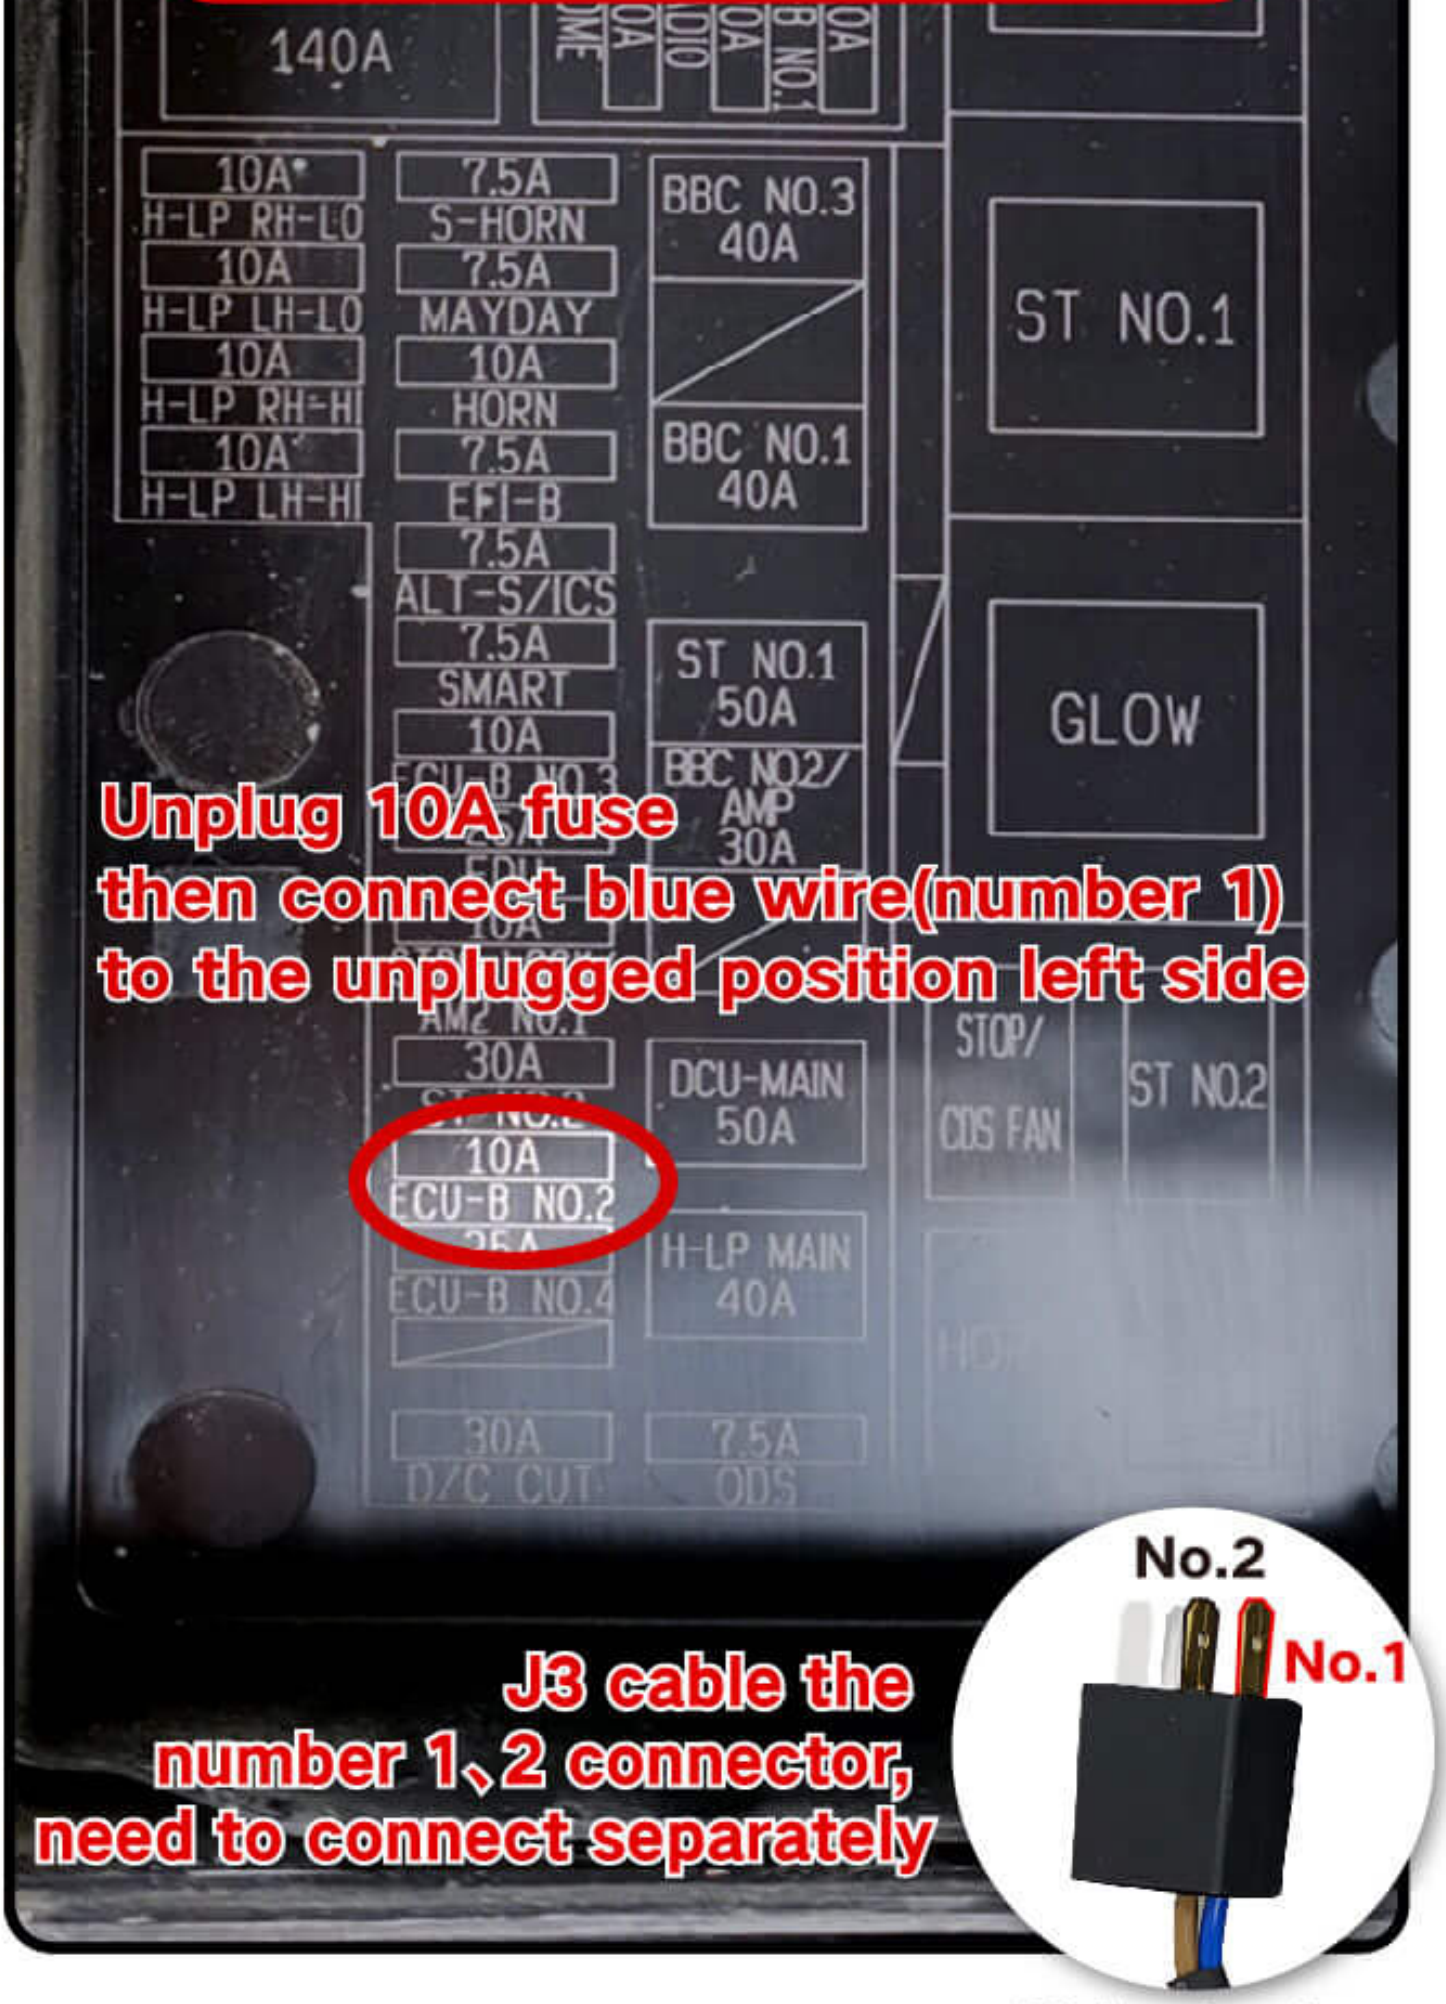
140A
10A
H-LP RH-LO
10A
H-LP LH-LO
10A
H-LP RH-HI
10A
H-LP LH-HI
7.5A
S-HORN
7.5A
MAYDAY
10A
HORN
7.5A
EFI-B
7.5A
ALT-S/ICS
7.5A
SMART
10A
ECU-B NO.3
EDU
10A
AM2 NO.1
30A
ST NO.2
10A
ECU-B NO.2
25A
ECU-B NO.4
30A
D/C CUT
BBC NO.3
40A
BBC NO.1
40A
ST NO.1
50A
BBC NO.2/
AMP
30A
DCU-MAIN
50A
H-LP MAIN
40A
7.5A
ODS
ST NO.1
GLOW
STOP/
CDS FAN
ST NO.2
No.2
No.1

Unplug 10A fuse then connect blue wire(number 1) to the unplugged position left side

J3 cable the number 1、2 connector, need to connect separately

J3 lock plug

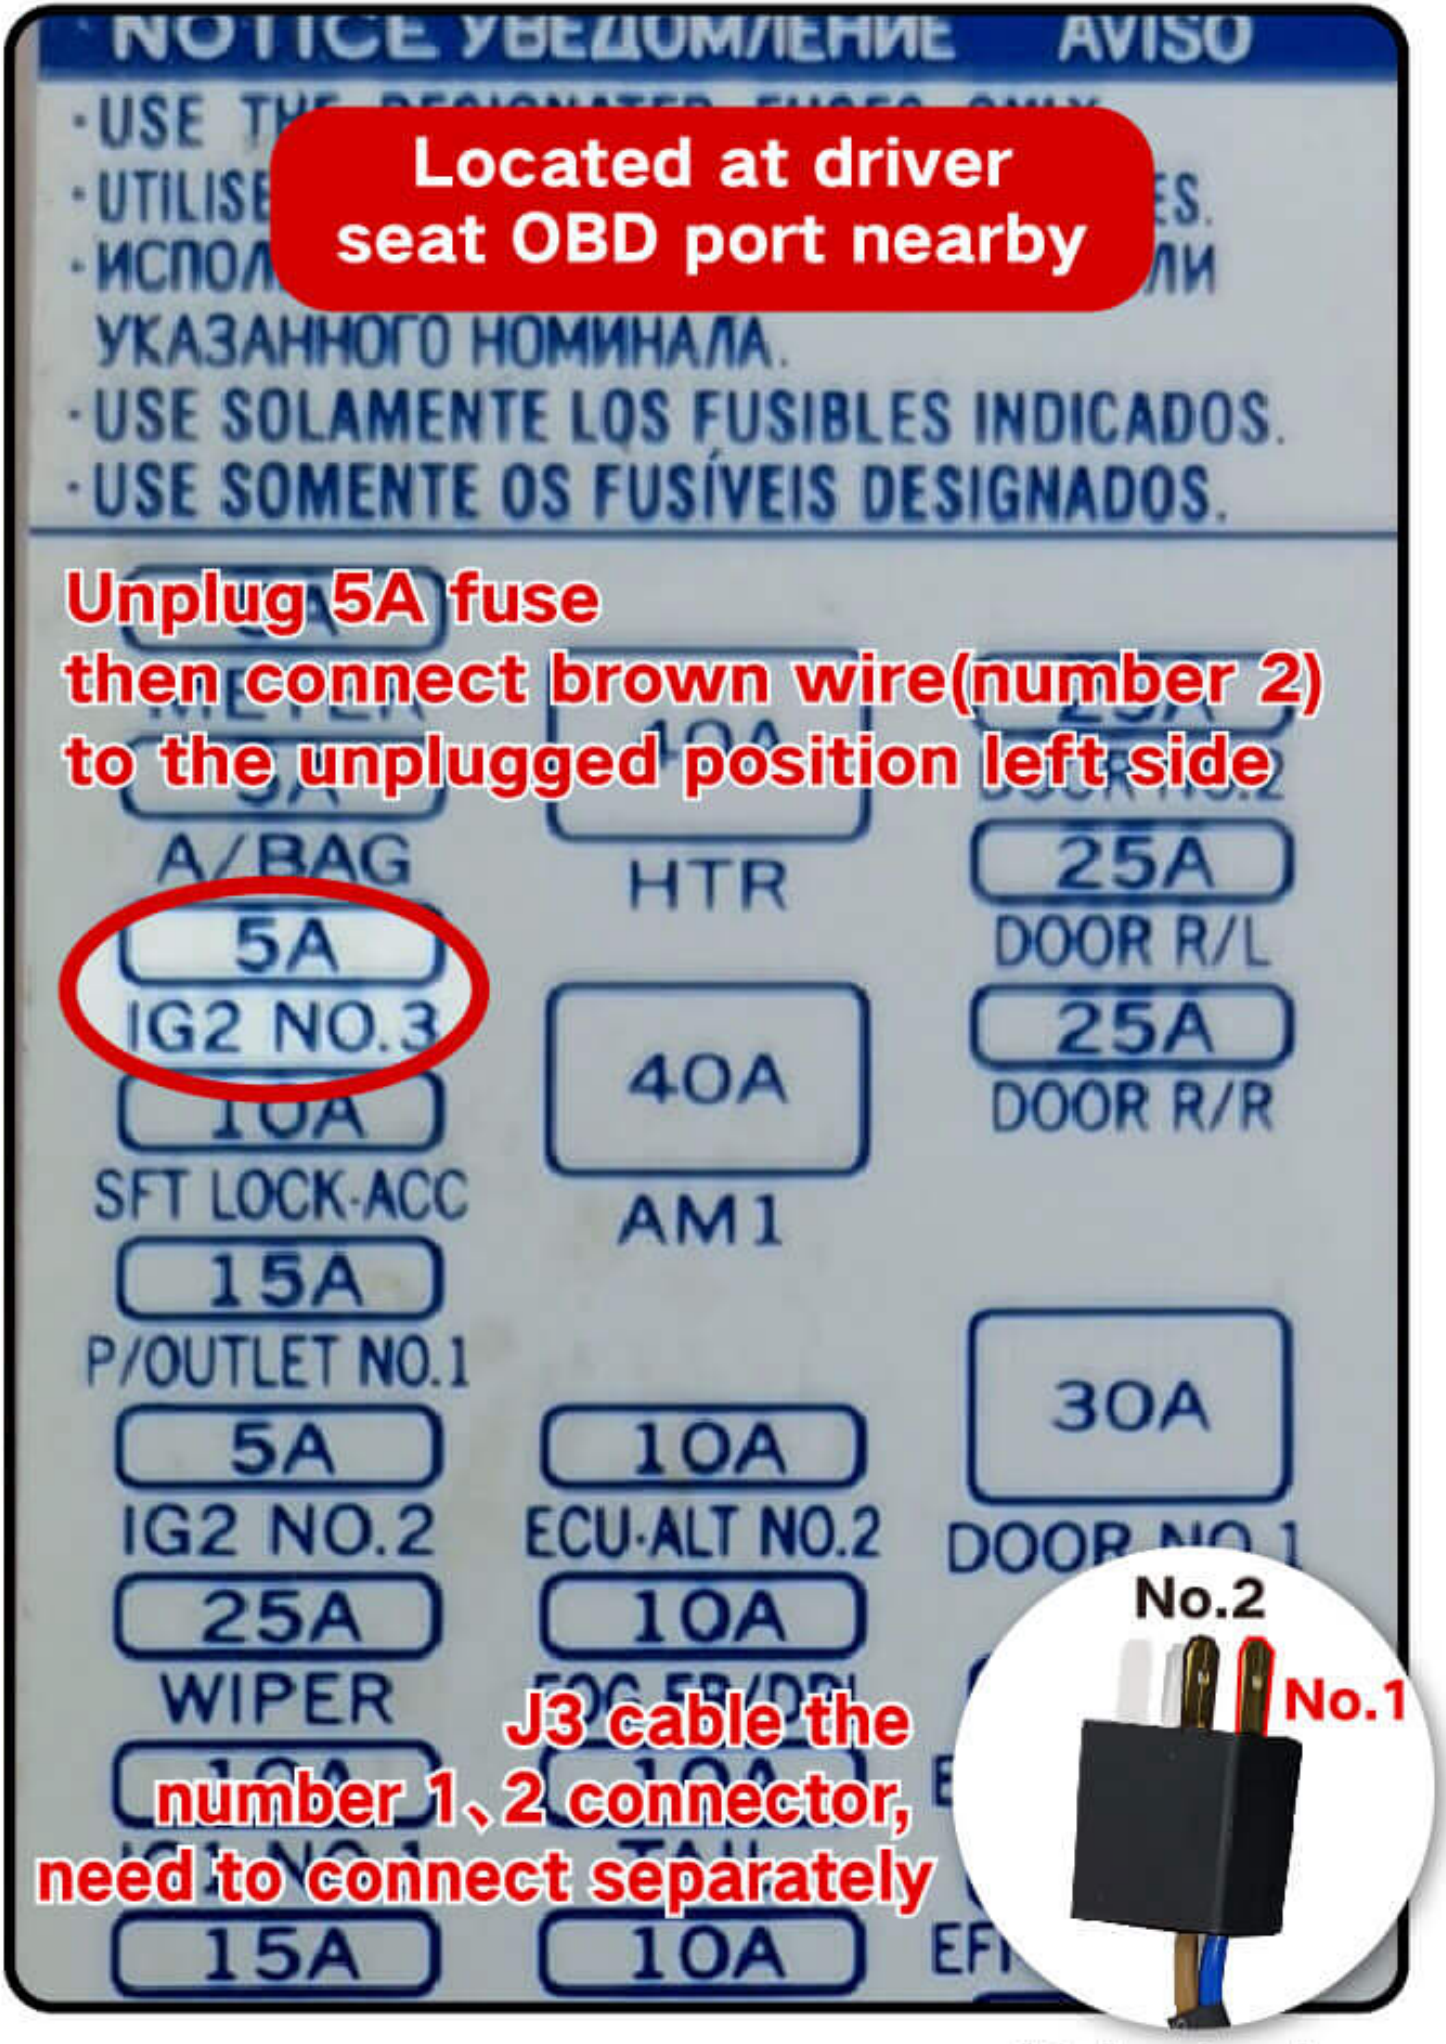
NOTICE УВЕДОМЛЕНИЕ AVISO
·USE TH
·UTILISE
ES.
·ИСПОЛ
ЛИ
УКАЗАННОГО НОМИНАЛА.
·USE SOLAMENTE LOS FUSIBLES INDICADOS.
·USE SOMENTE OS FUSÍVEIS DESIGNADOS.
METER
5A
A/BAG
10A
HTR
25A
DOOR NO.2
25A
DOOR R/L
25A
DOOR R/R
5A
IG2 NO.3
40A
AM1
10A
SFT LOCK-ACC
15A
P/OUTLET NO.1
30A
DOOR NO.1
5A
IG2 NO.2
10A
ECU-ALT NO.2
25A
WIPER
10A
10A
15A
10A
EF
No.2
No.1

Located at driver seat OBD port nearby

Unplug 5A fuse then connect brown wire(number 2) to the unplugged position left side

J3 cable the number 1、2 connector, need to connect separately

J3 lock plug

③ Please connect the ELV wires as shown

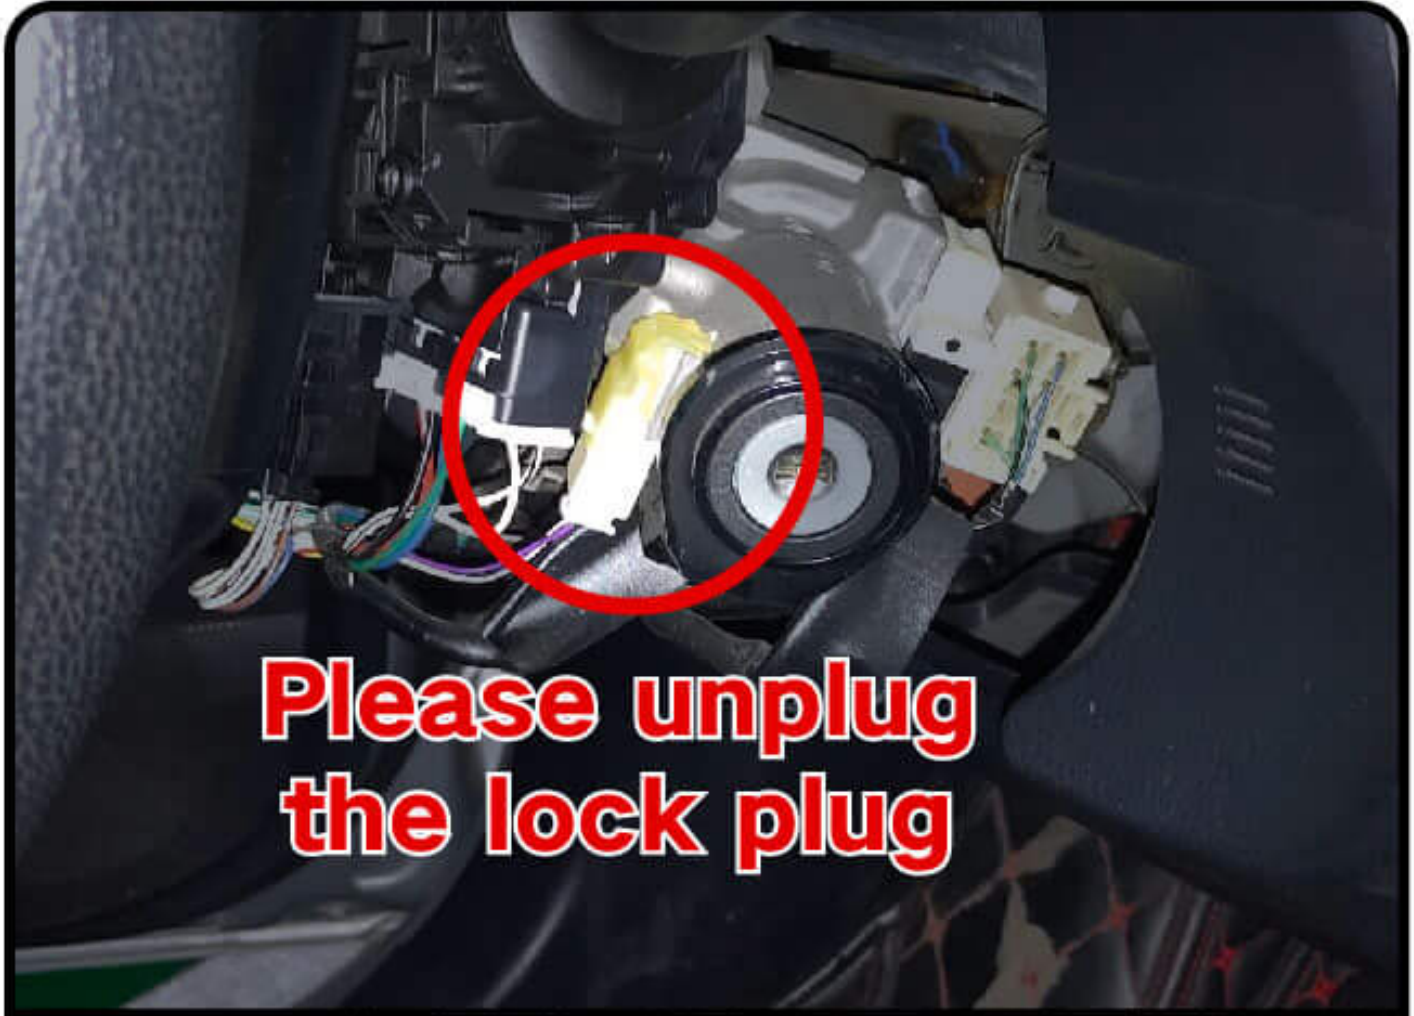
Please unplug
the lock plug

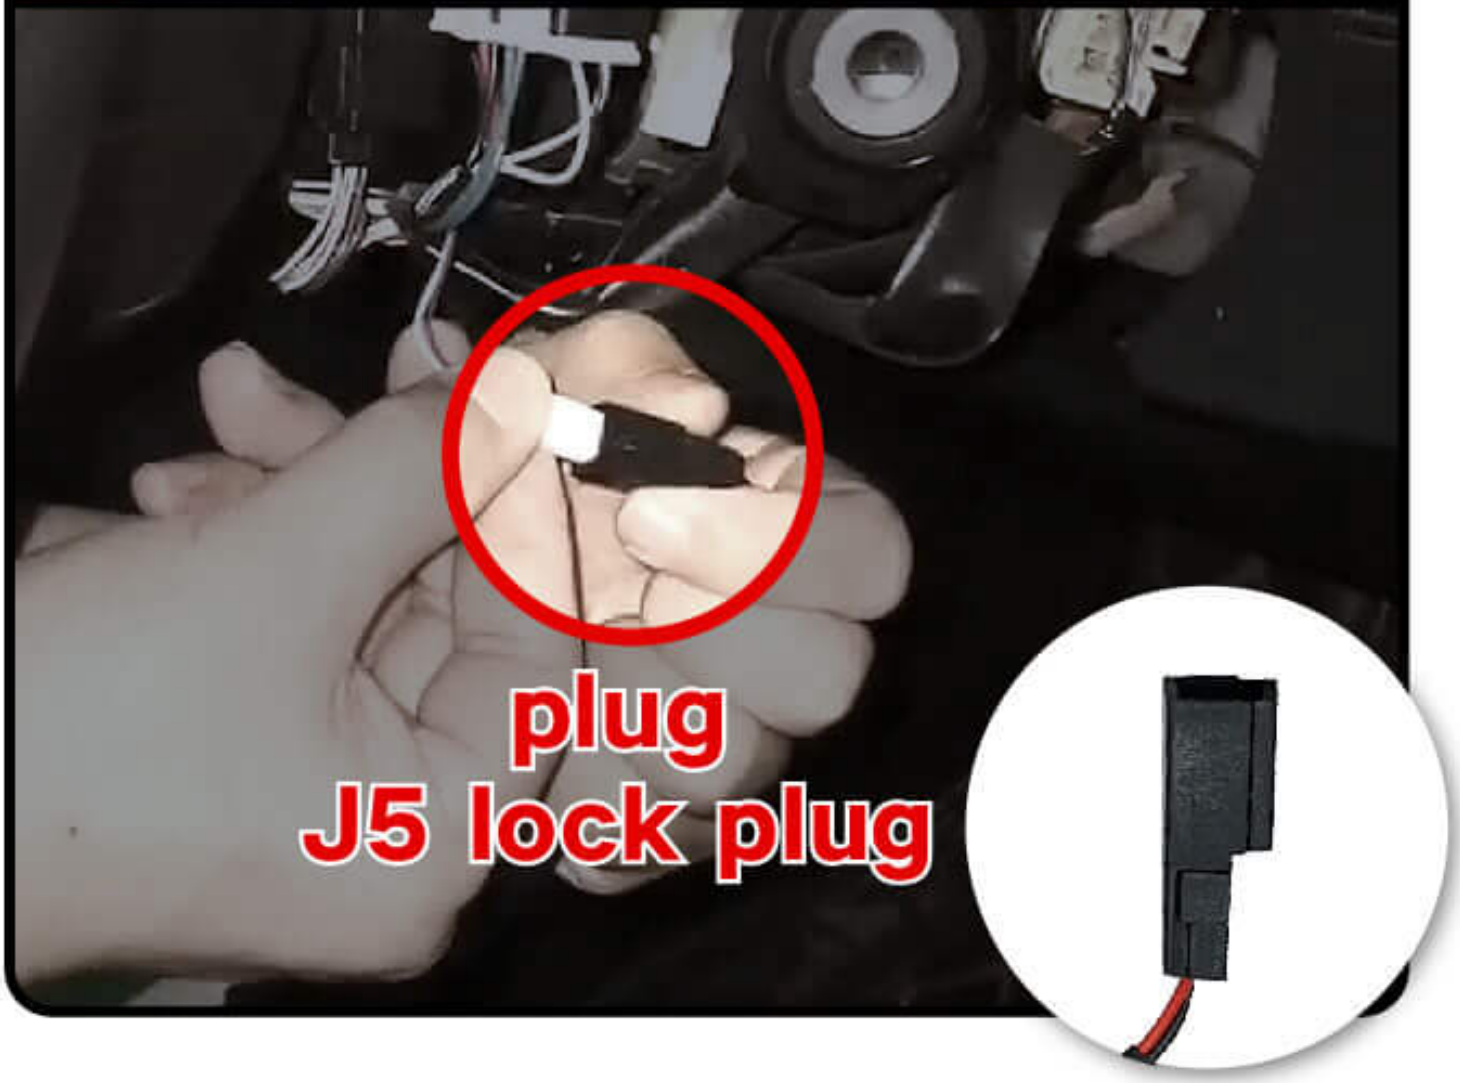
plug
J5 lock plug

J5 lock plug

④ Please connect to car OBD,

all key lost cables and car battery

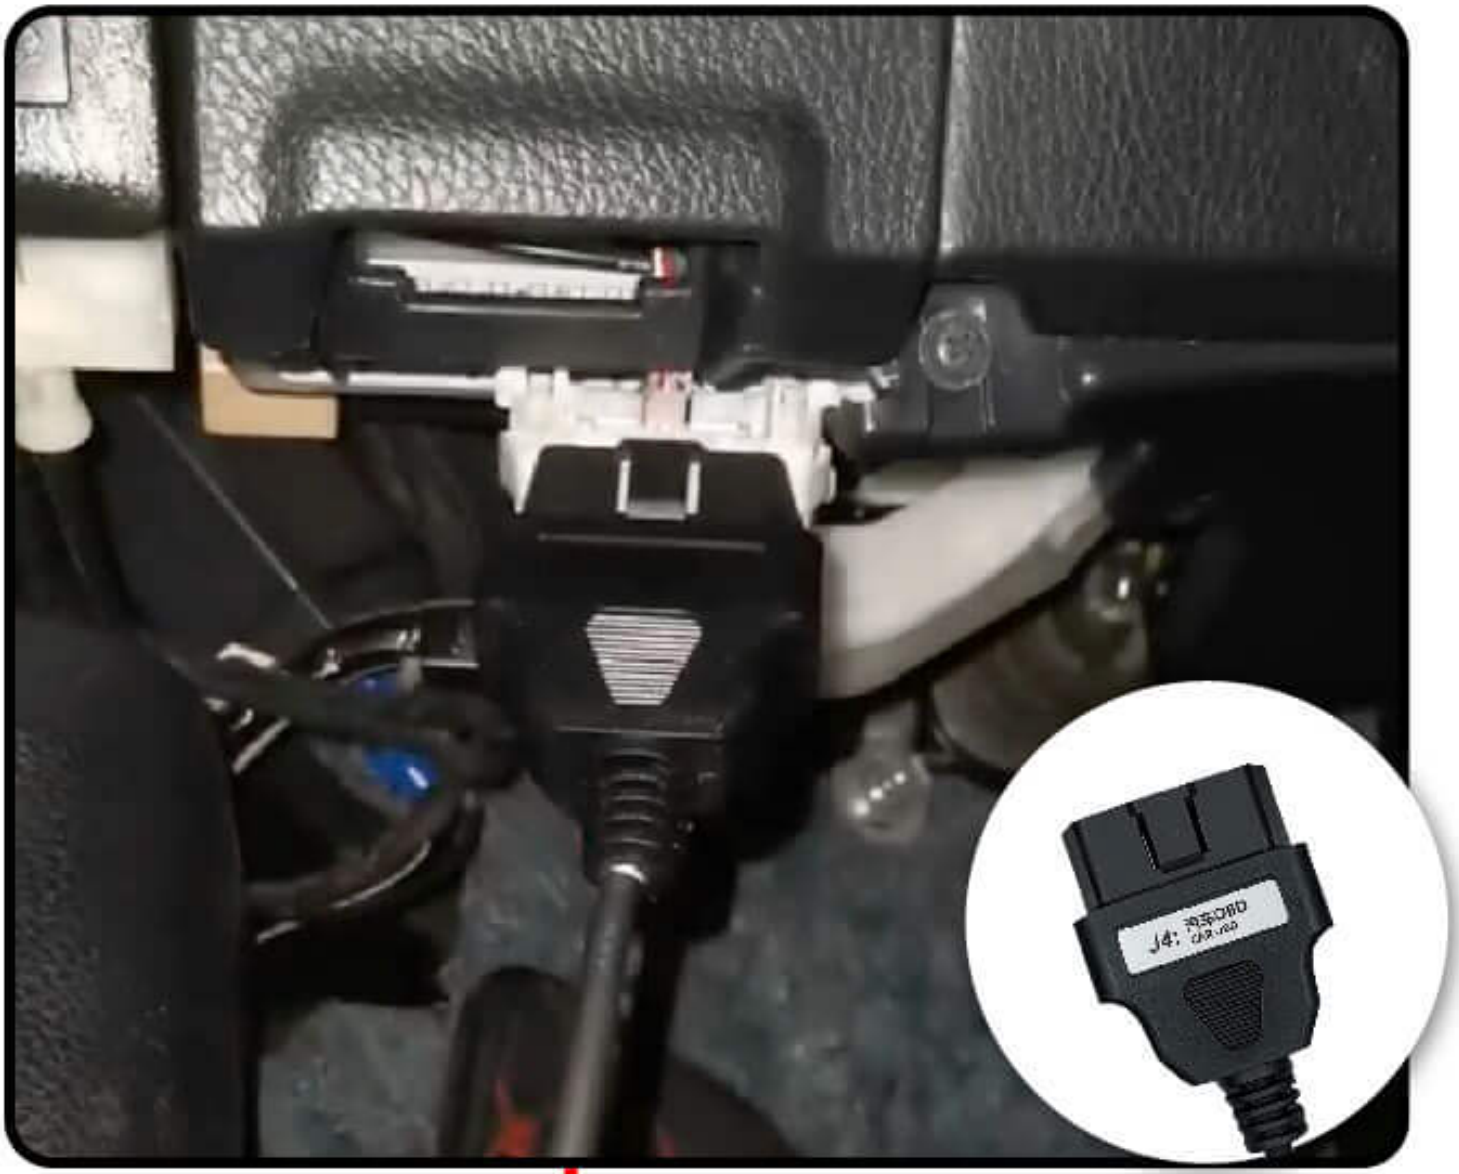
J4: 汽车OBD
CAR OBD

J4 lock plug

VVDI

J6 lock plug

KEY TOOL MAX &MINI OBD



J6 lock plug

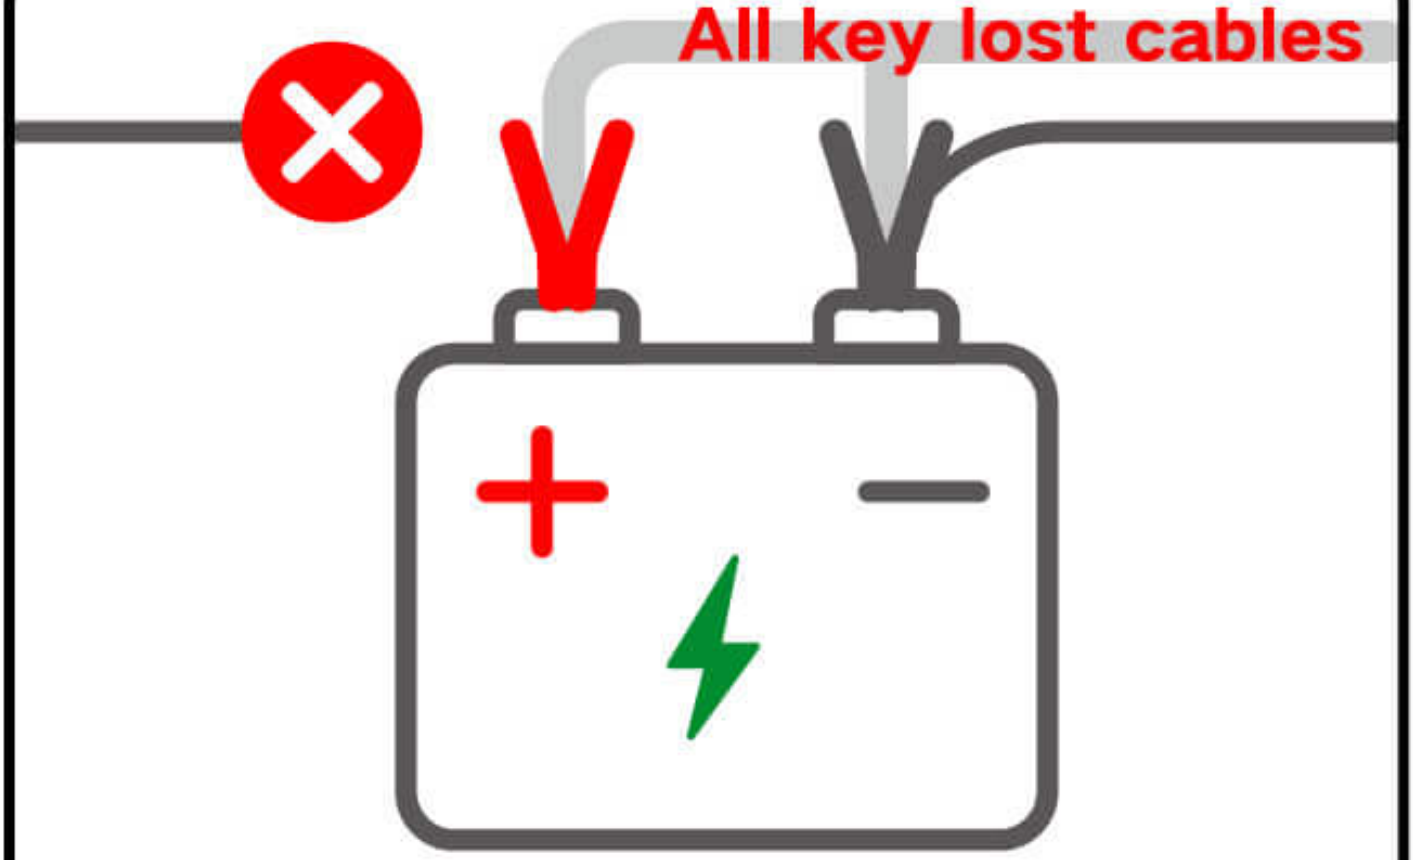
All key lost cables
+
−

⑤ Please generate start chip referring to software interface

VVDI

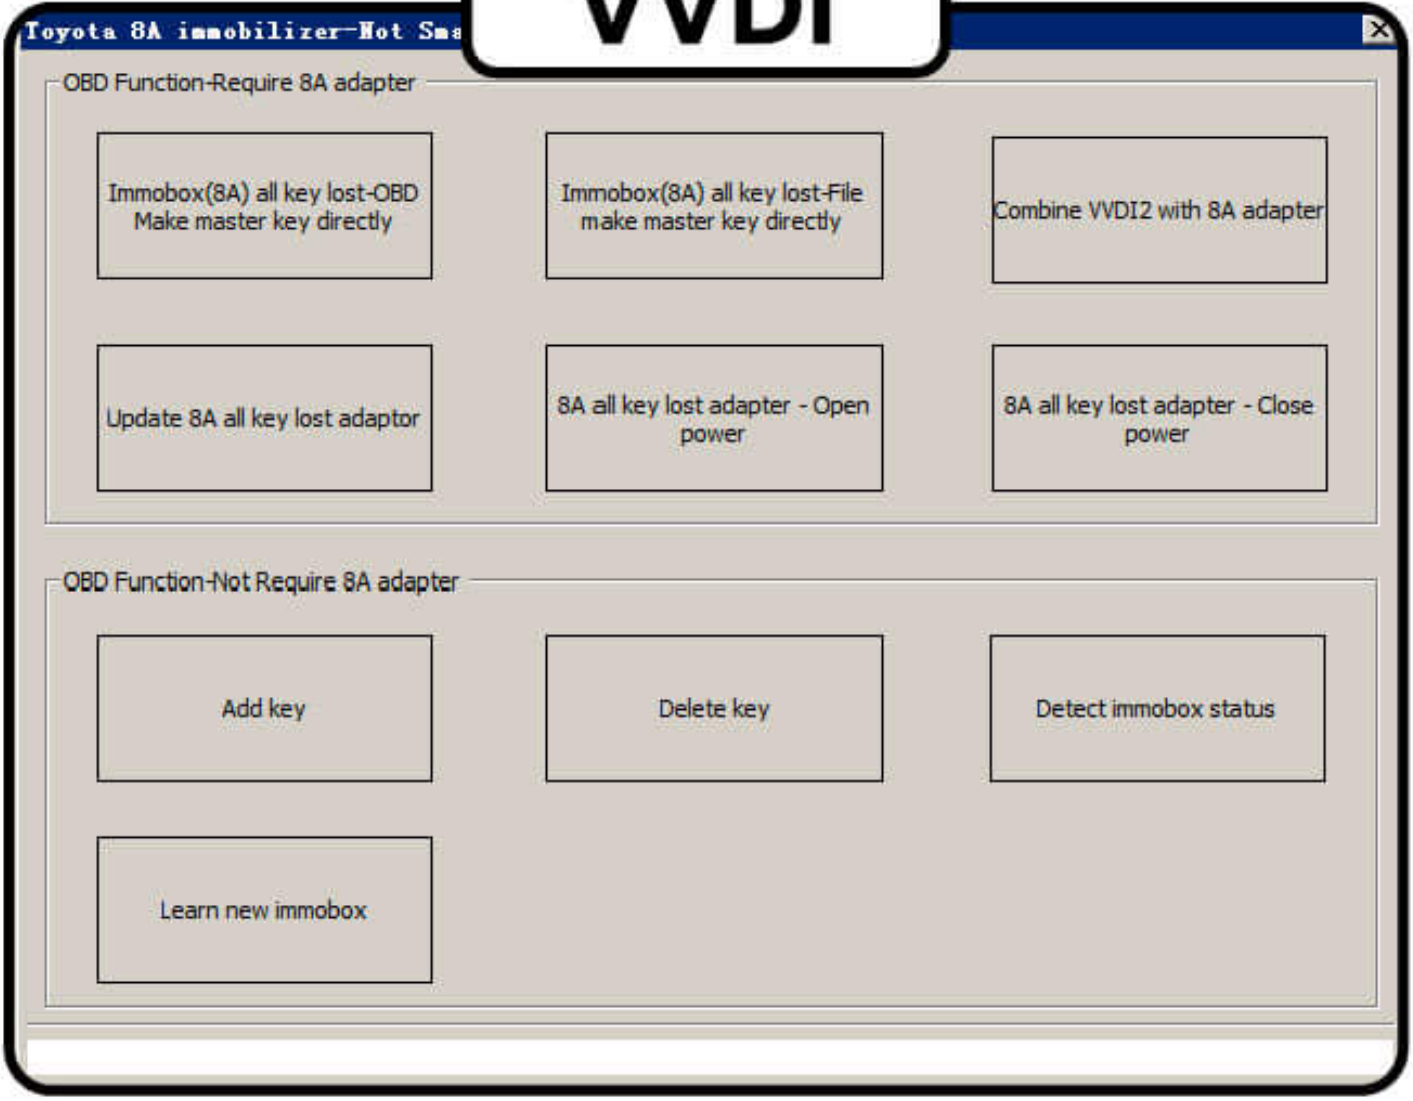
Toyota 8A immobilizer-Hot Sma
OBD Function-Require 8A adapter
Immobox(8A) all key lost-OBD Make master key directly
Immobox(8A) all key lost-File make master key directly
Combine VVDI2 with 8A adapter
Update 8A all key lost adaptor
8A all key lost adapter - Open power
8A all key lost adapter - Close power
OBD Function-Not Require 8A adapter
Add key
Delete key
Detect immobox status
Learn new immobox

KEY TOOL MAX &MINI OBD

9:27
8A all key lost

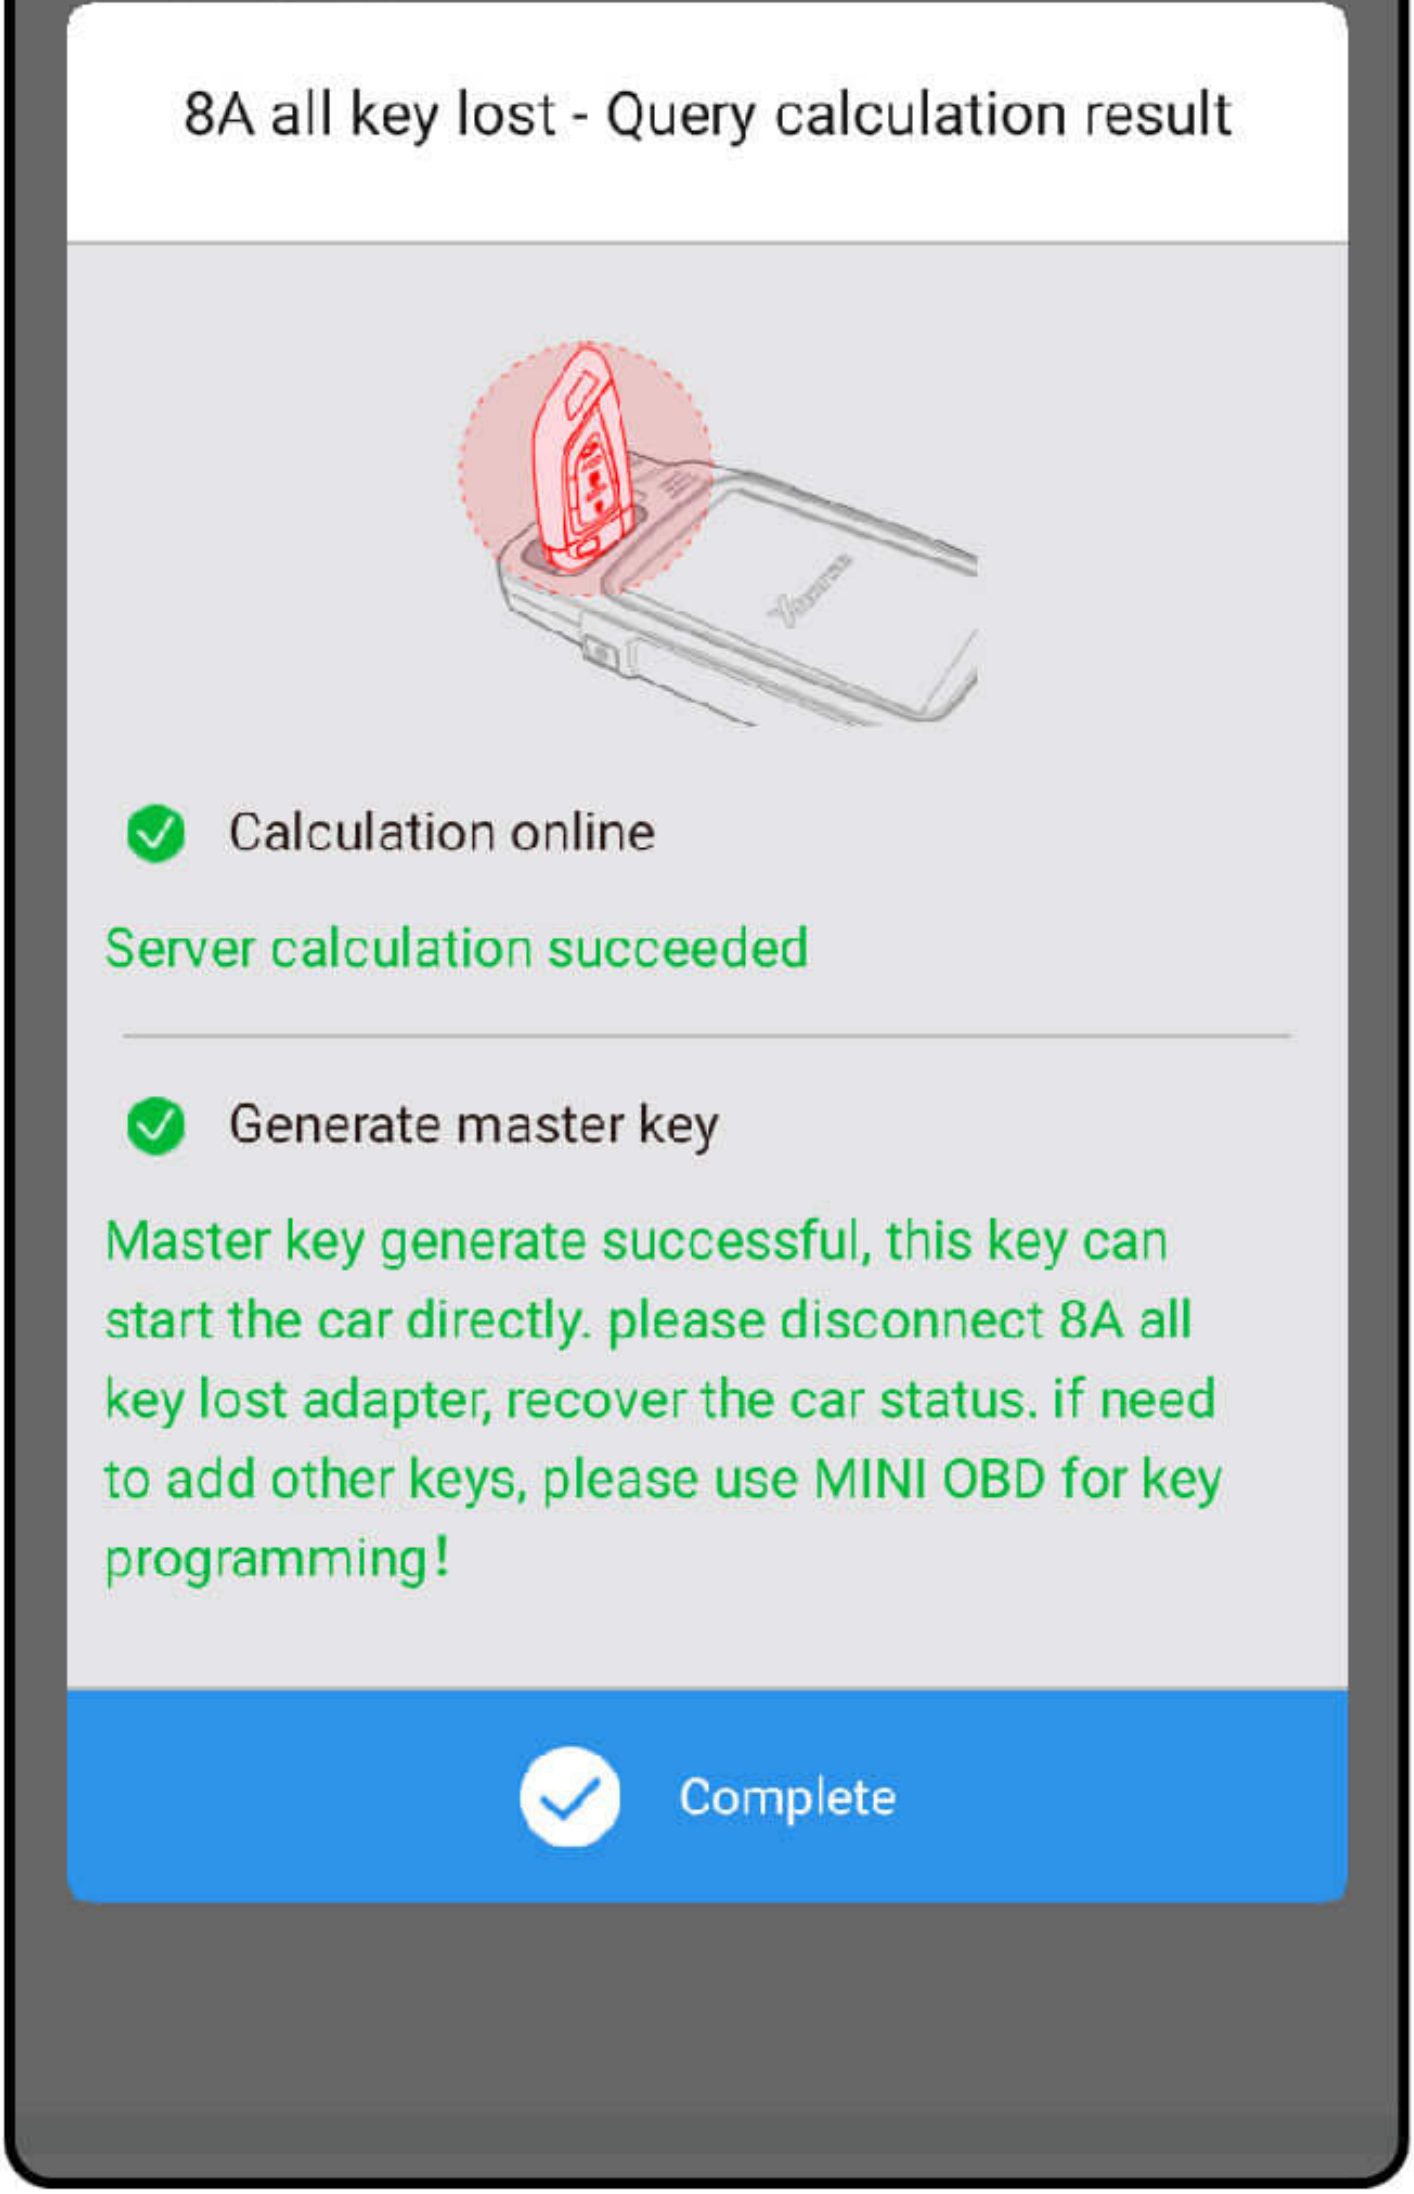

8A all key lost - Query calculation result

✓ Calculation online

Server calculation succeeded

✓ Generate master key

Master key generate successful, this key can start the car directly. please disconnect 8A all key lost adapter, recover the car status. if need to add other keys, please use MINI OBD for key programming!

⑥ Please disconnect all cables,recover all connection wires as car original status

If the connection wires not recovery to original status and start the car directly, the fuse boxe and device will be burnt

⑦ Test generated transponder