Toyota Levin

Support more models

Toyota Corolla、Camry、Prado、RAV etc.,

VVDI

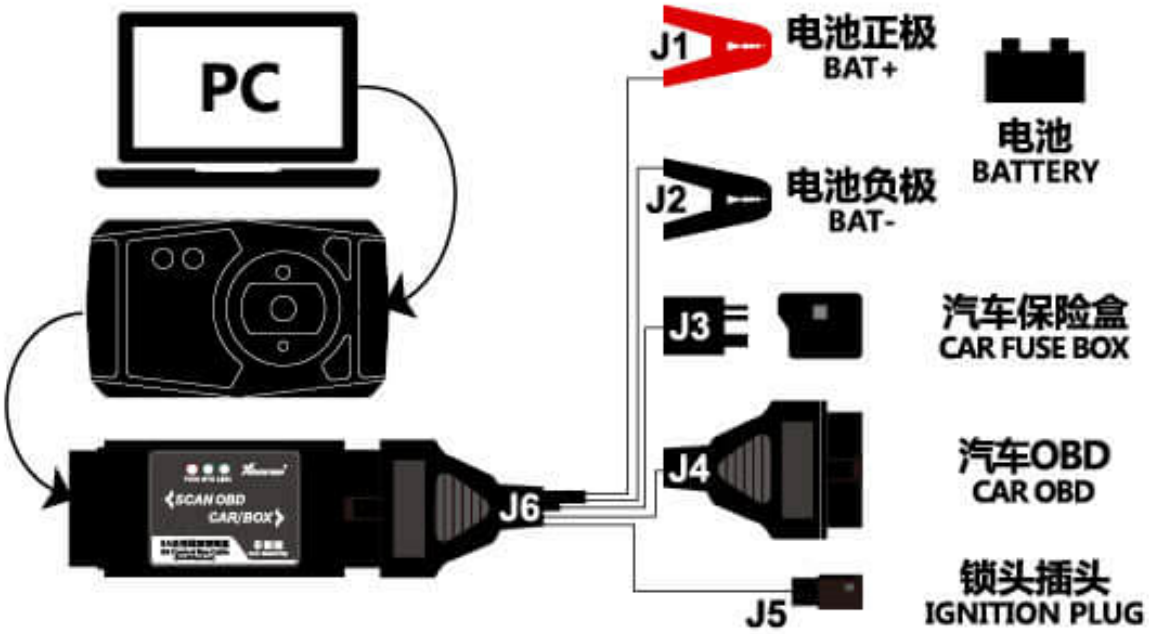
PC
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J6
SCAN OBD
CAR/BOX
J5
锁头插头
IGNITION PLUG

KEY TOOL MAX
& MINI OBD

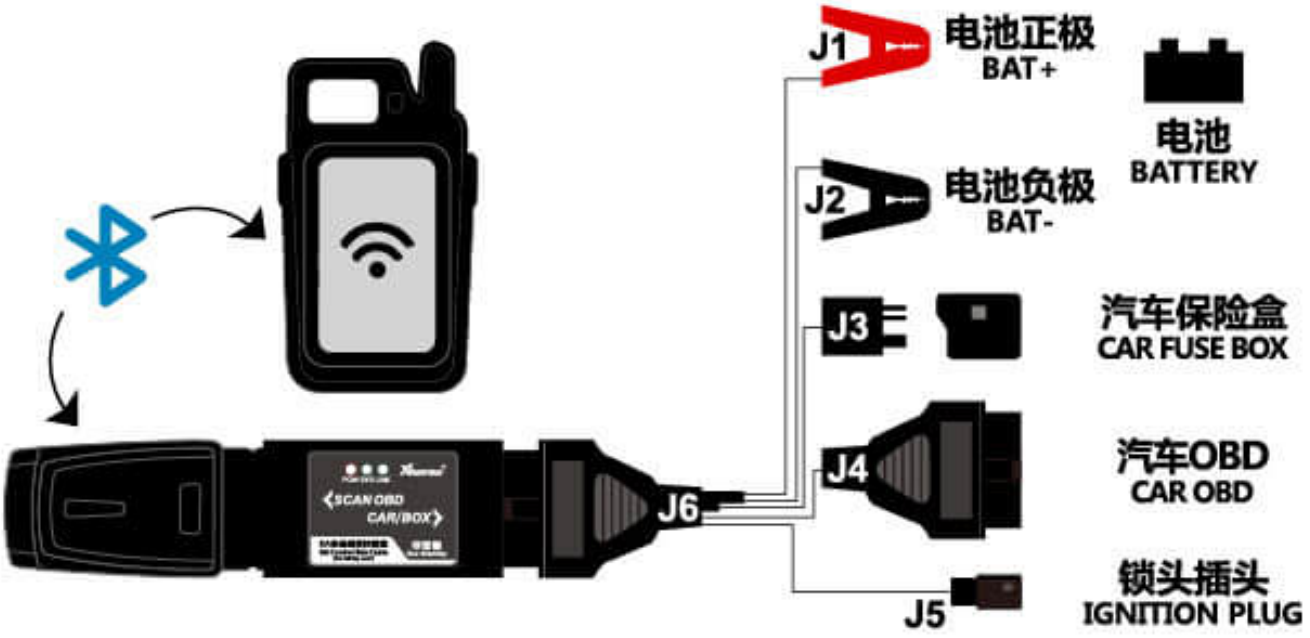
J1
电池正极
BAT+
电池
BATTERY
J2
电池负极
BAT-
J3
汽车保险盒
CAR FUSE BOX
J4
汽车OBD
CAR OBD
J5
锁头插头
IGNITION PLUG
J6
SCAN OBD
CAR/BOX

ⓘ Please update device to latest version for this function

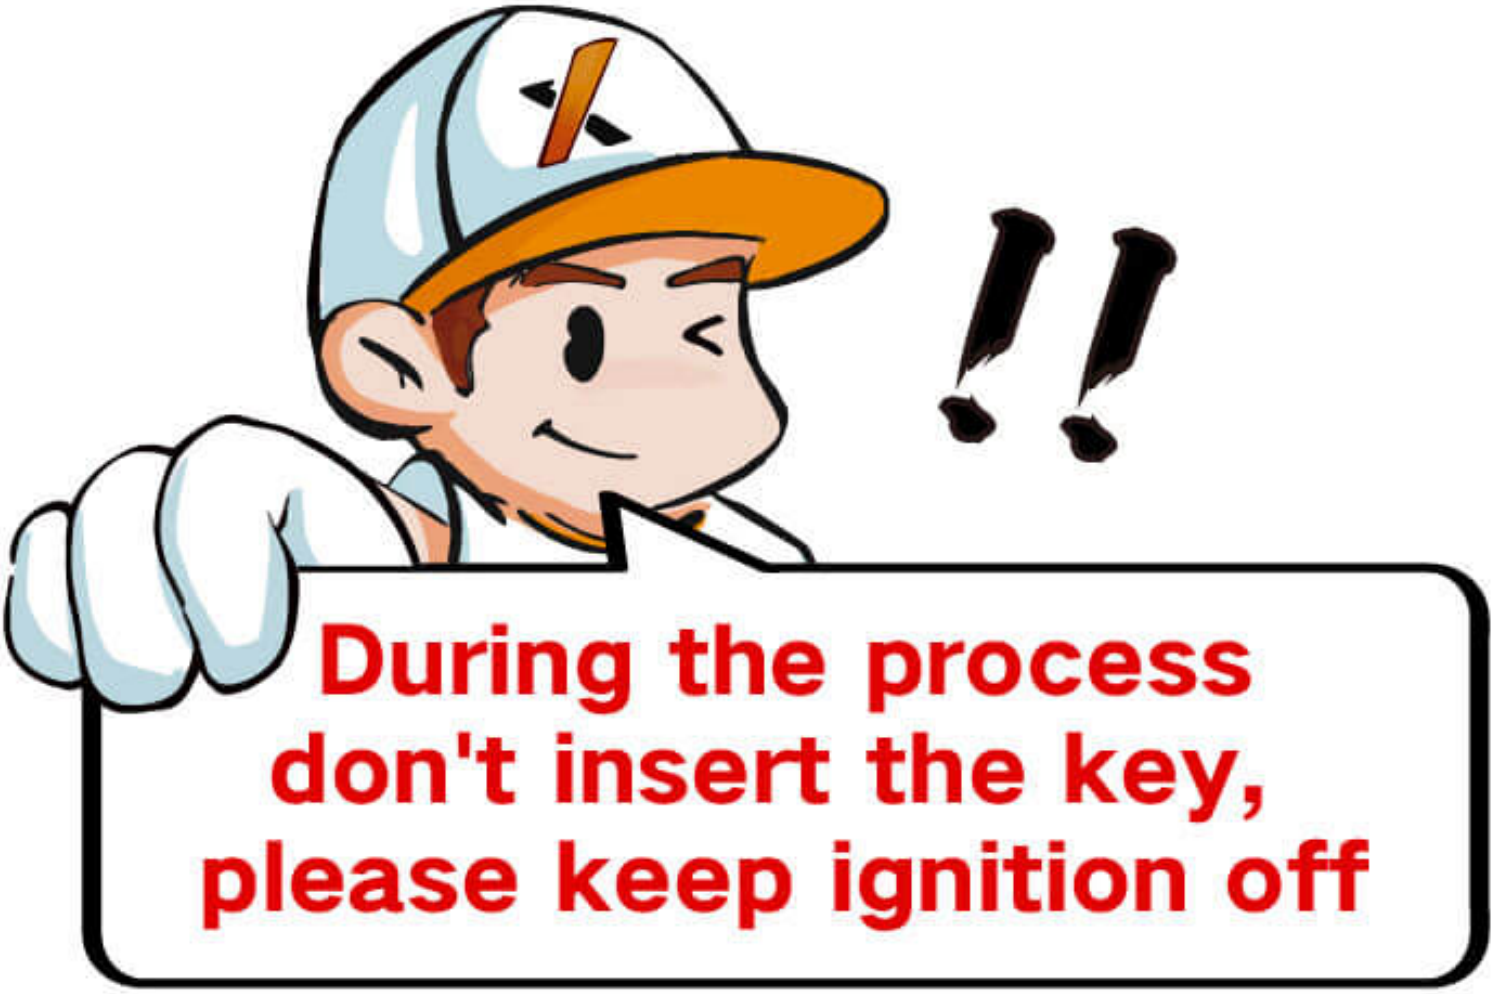

During the process don't insert the key, please keep ignition off

① Disconnect the positive pole of the car battery to protect the connector and avoid short circuits

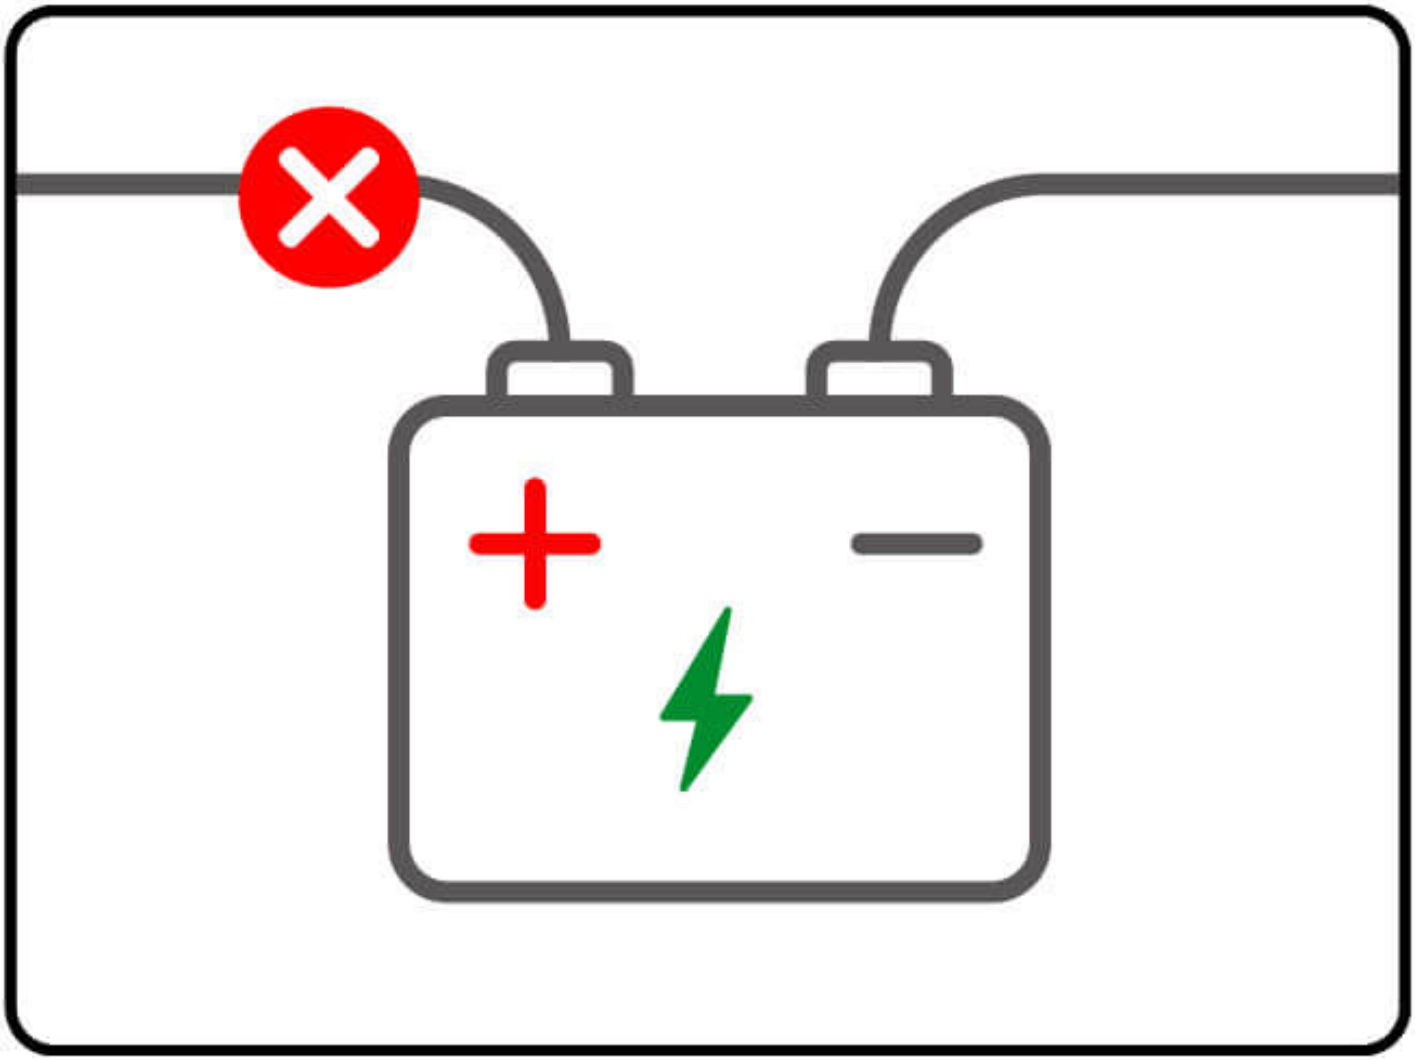

② Please connect to fuse box as the image

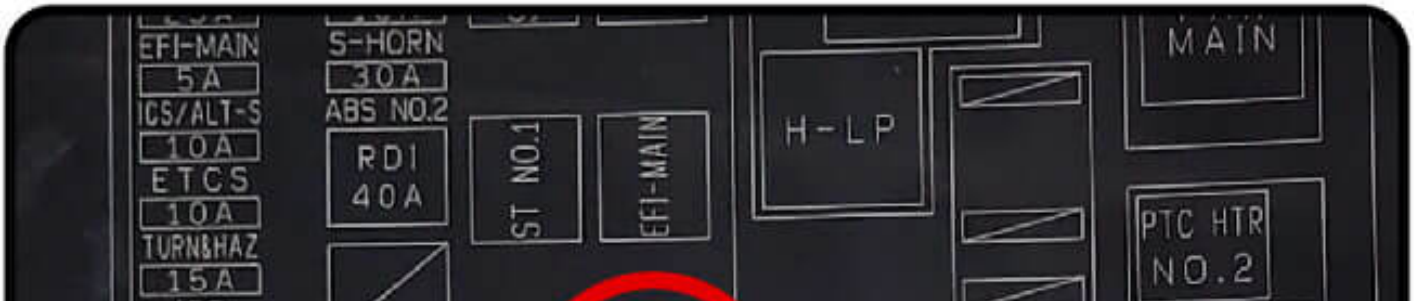
EFI-MAIN
5A
ICS/ALT-S
10A
ETCS
10A
TURN&HAZ
15A
S-HORN
30A
ABS NO.2
RDI
40A
ST NO.1
EFI-MAIN
H-LP
MAIN
PTC HTR
NO.2

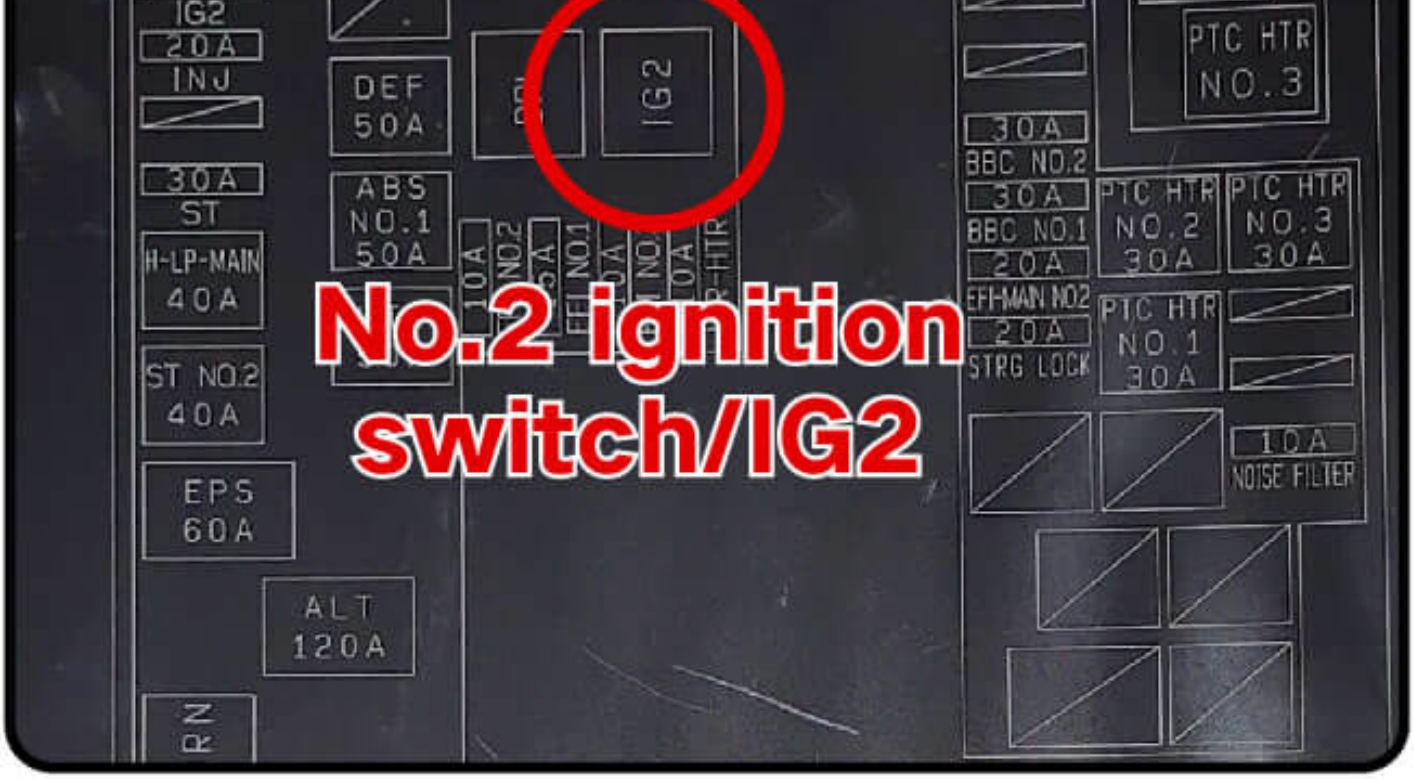
IG2
20A
INJ
30A
ST
H-LP-MAIN
40A
ST NO.2
40A
EPS
60A
ALT
120A
DEF
50A
ABS
NO.1
50A
IG2
30A
BBC NO.2
30A
BBC NO.1
20A
EFI-MAIN NO.2
20A
STRG LOCK
PTC HTR
NO.3
PTC HTR
NO.2
30A
PTC HTR
NO.3
30A
PTC HTR
NO.1
30A
10A
NOISE FILTER

No.2 ignition switch/IG2

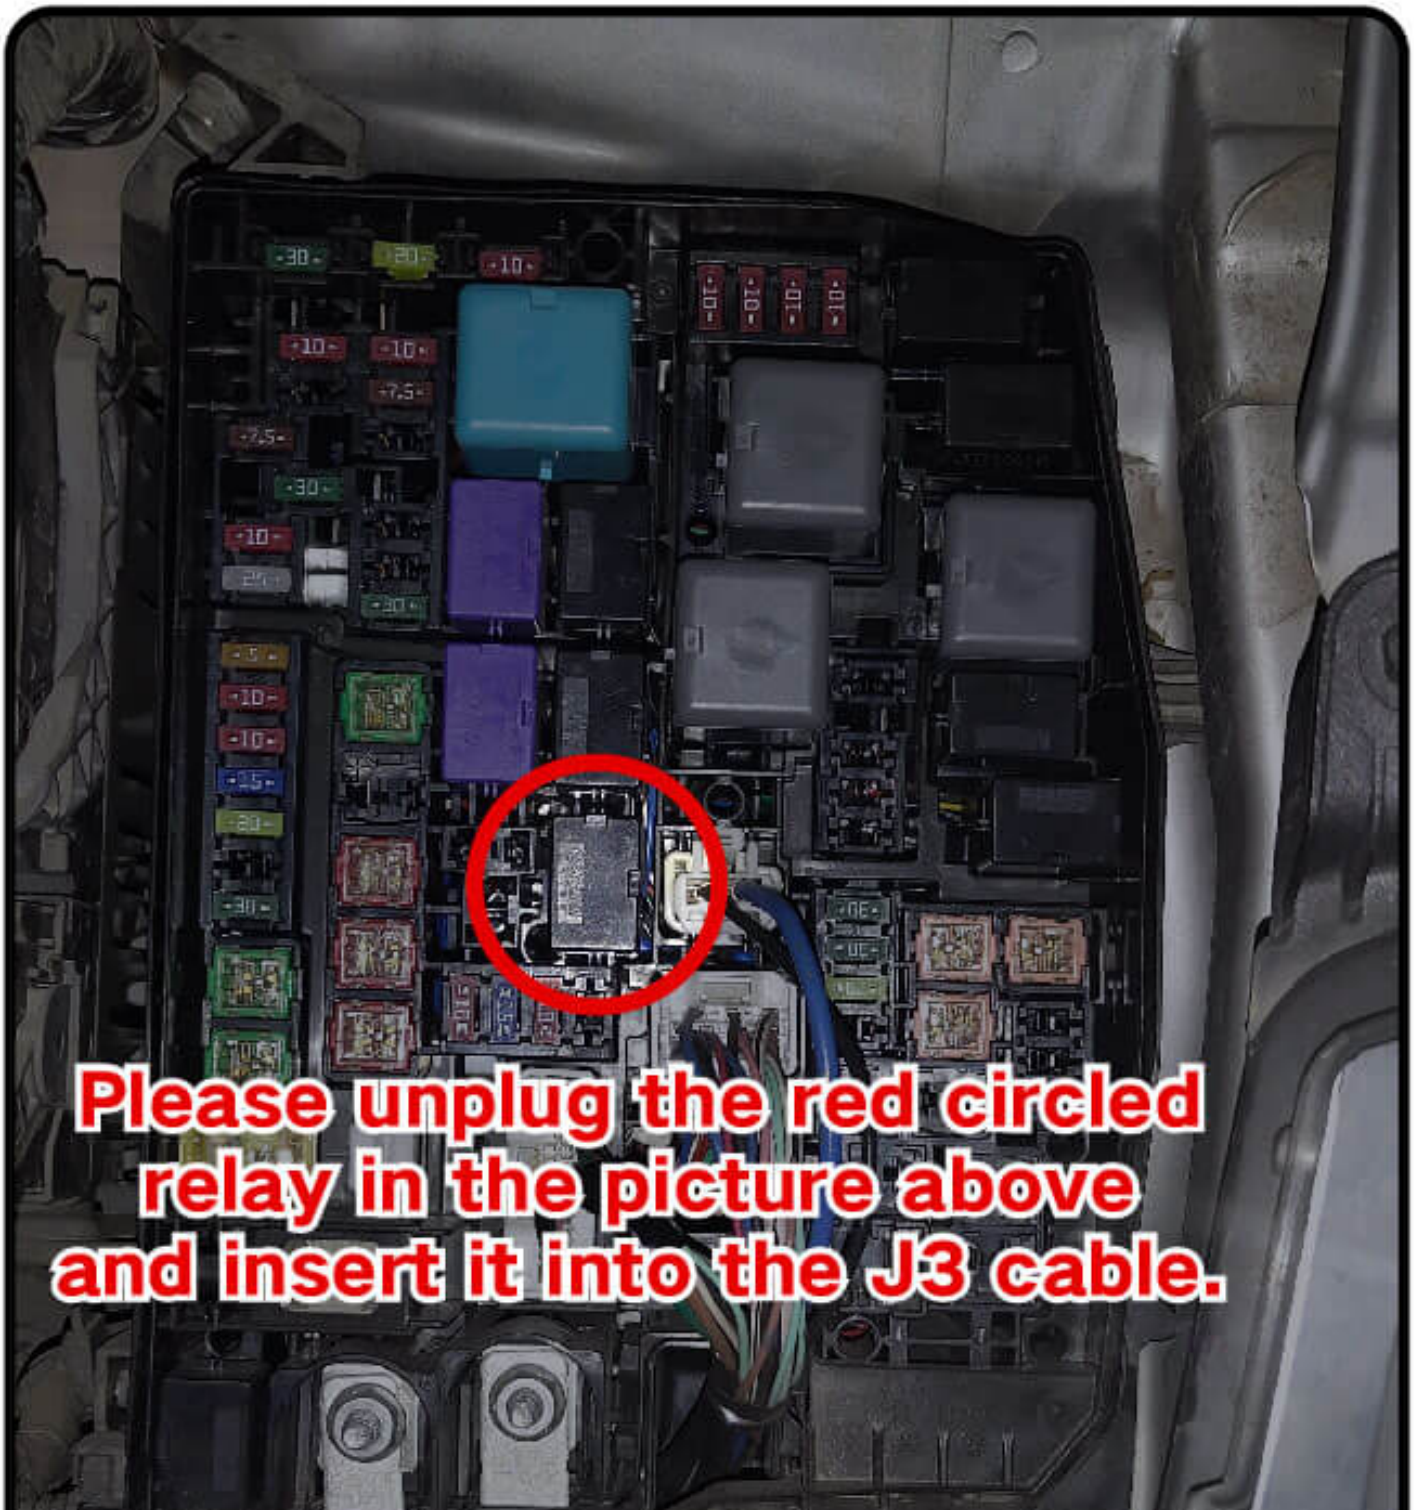
30
20
10
10
10
7.5
7.5
30
10
25
30
10
10
10
10
5
10
10
15
20
30

Please unplug the red circled relay in the picture above and insert it into the J3 cable.

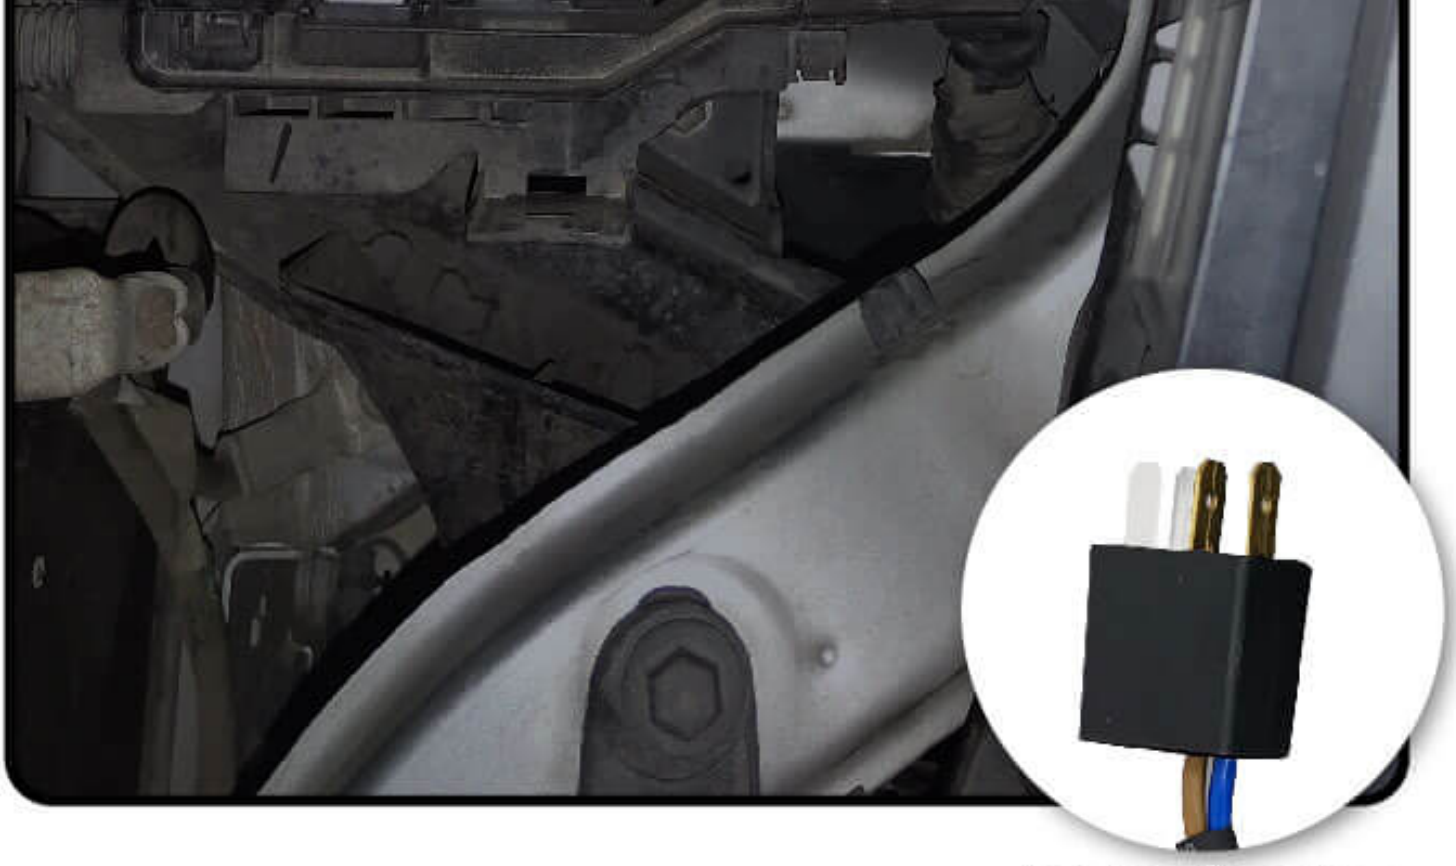

J3 lock plug

③ Please connect the ELV wires as shown

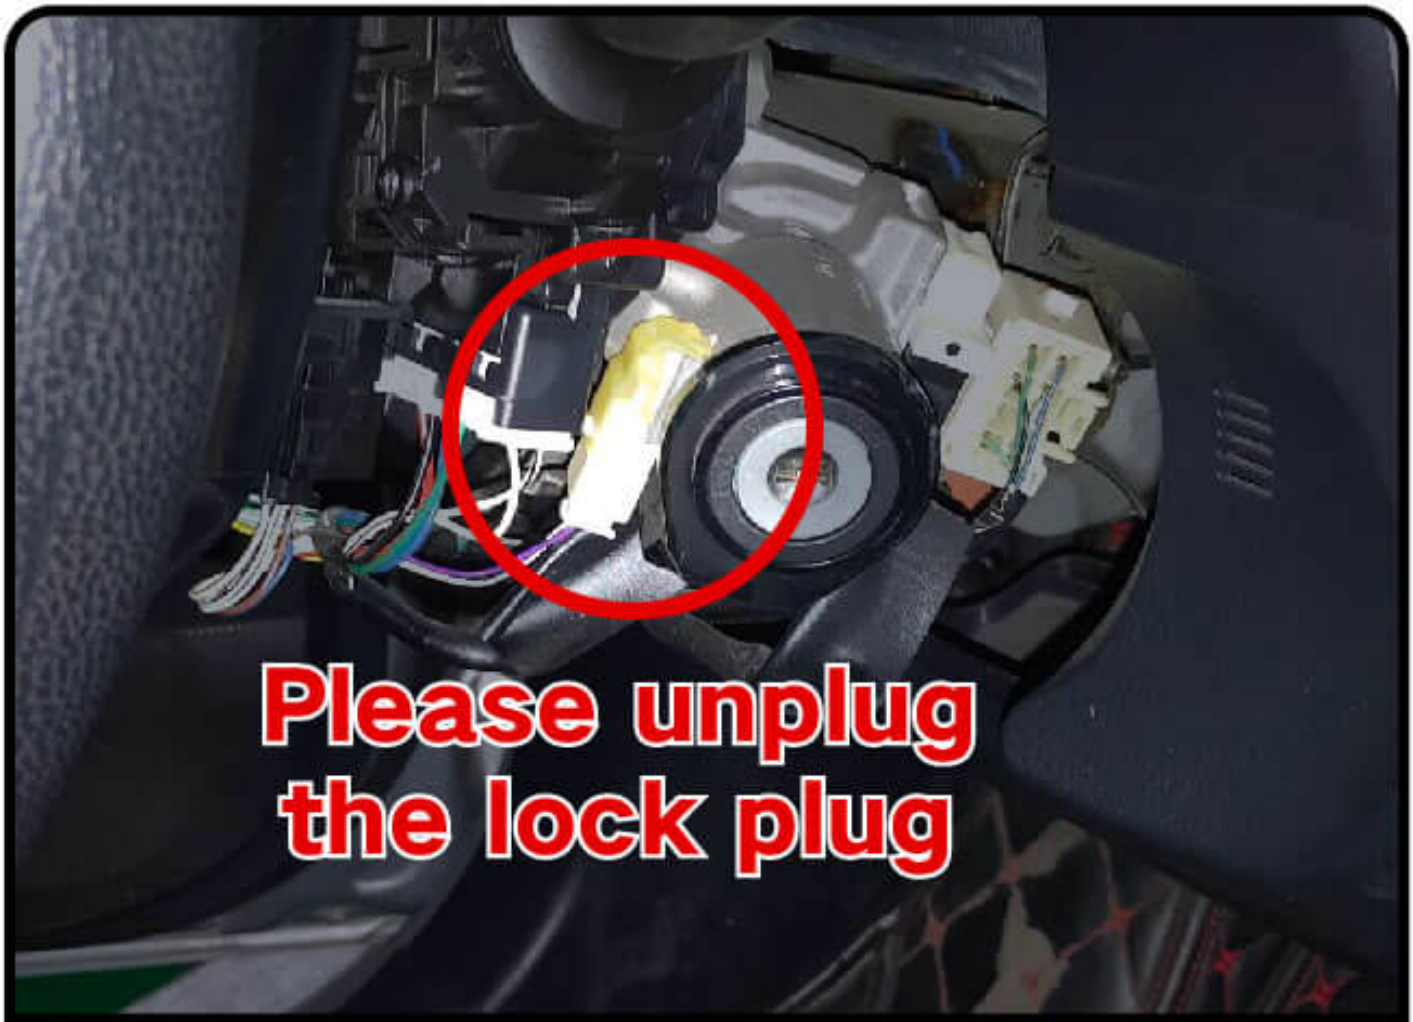

Please unplug the lock plug

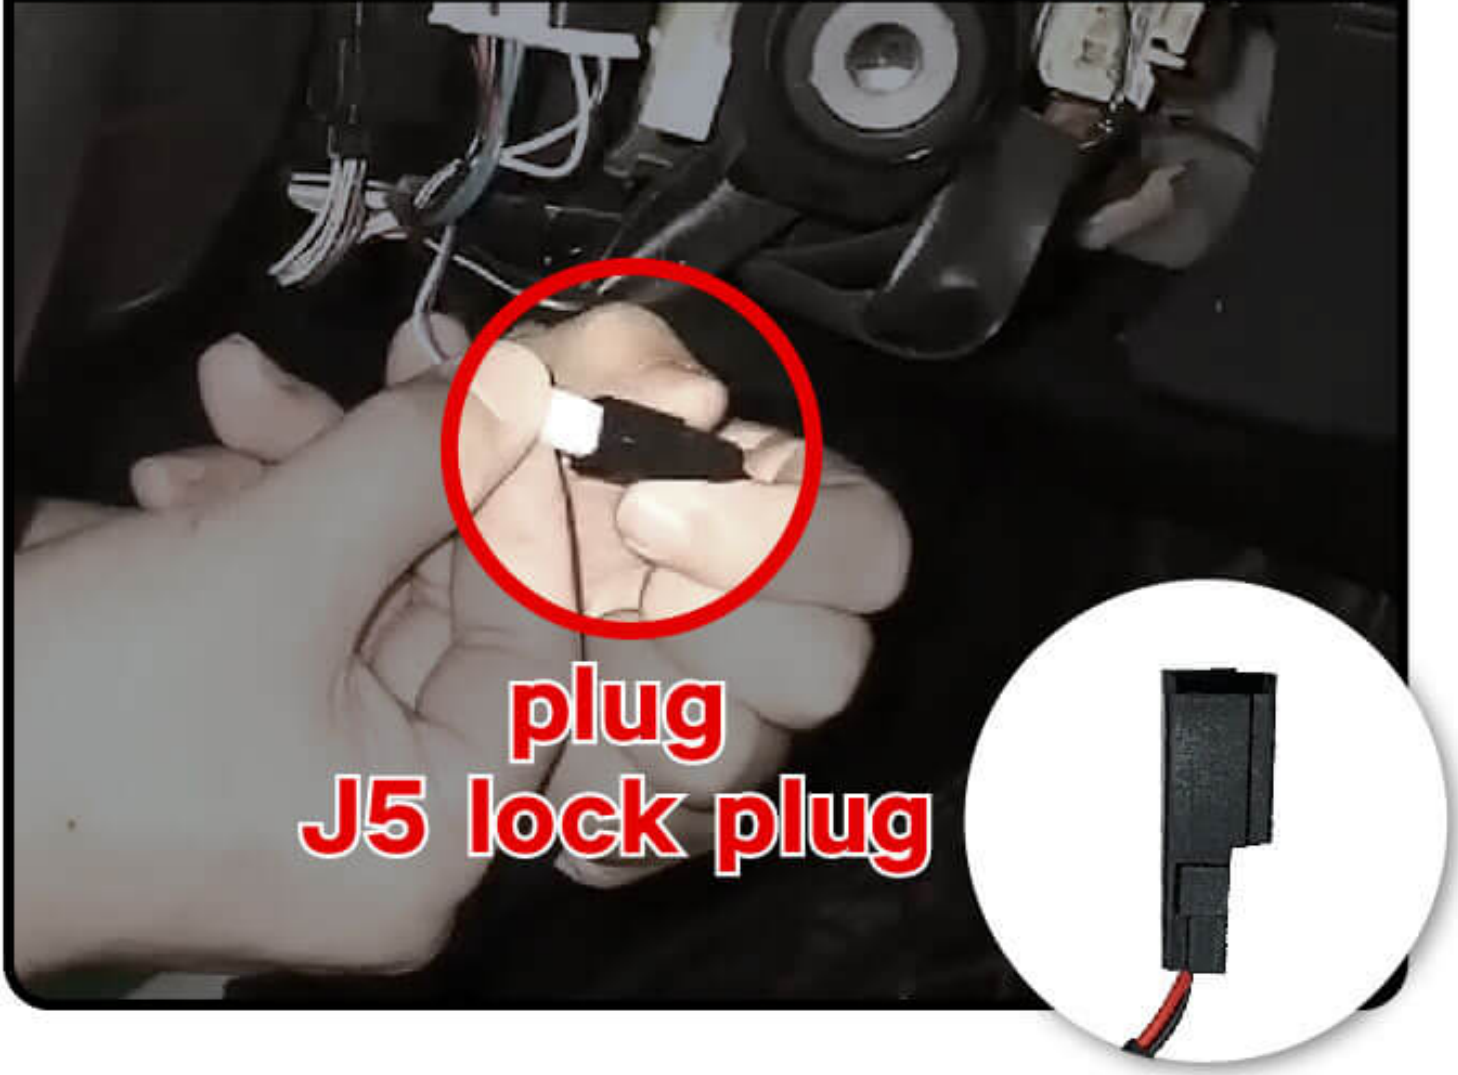
plug
J5 lock plug

J5 lock plug

④ Please connect to car OBD,
all key lost cables and car battery

J4 lock plug

VVDI

J6 lock plug

KEY TOOL MAX

&MINI OBD


J6 lock plug

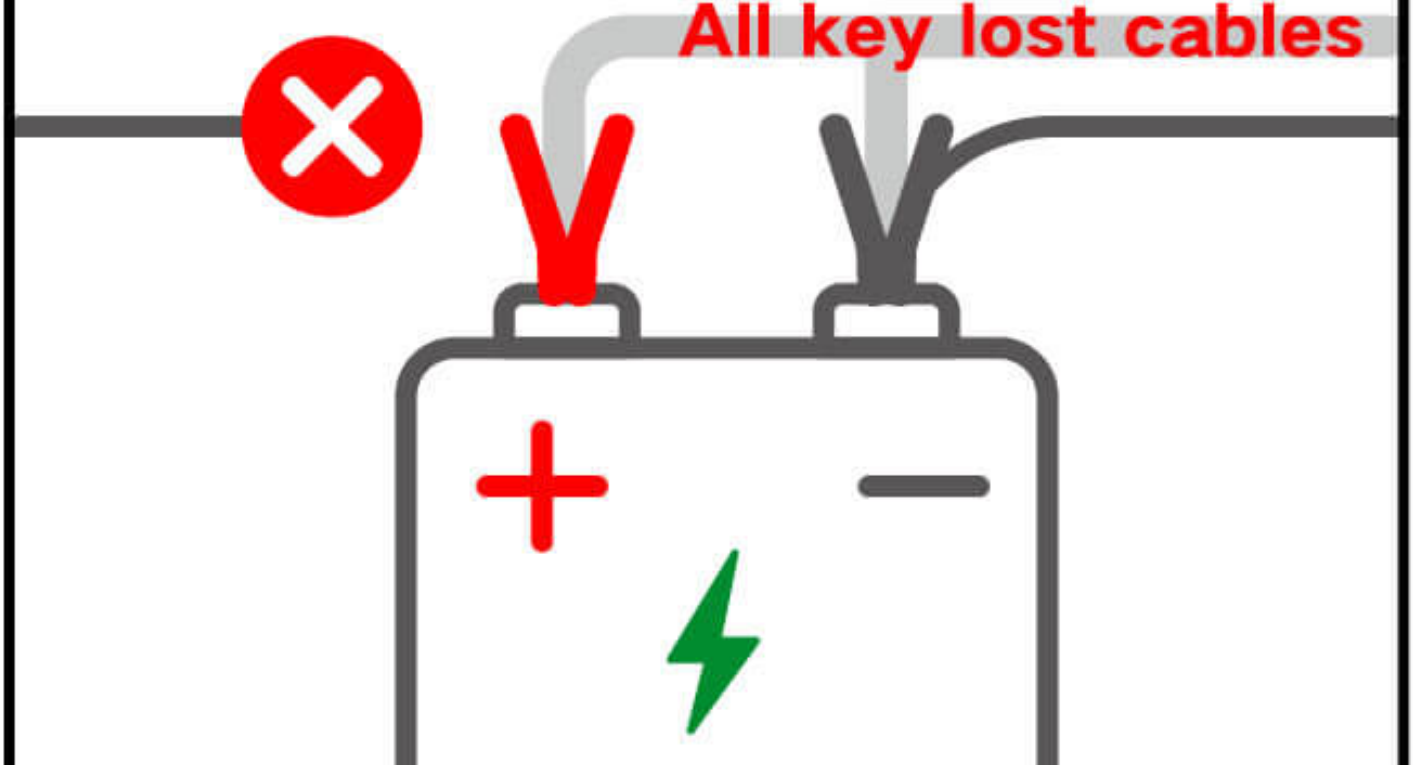
All key lost cables
+
−

⑤ Please generate start chip referring to software interface

VVDI

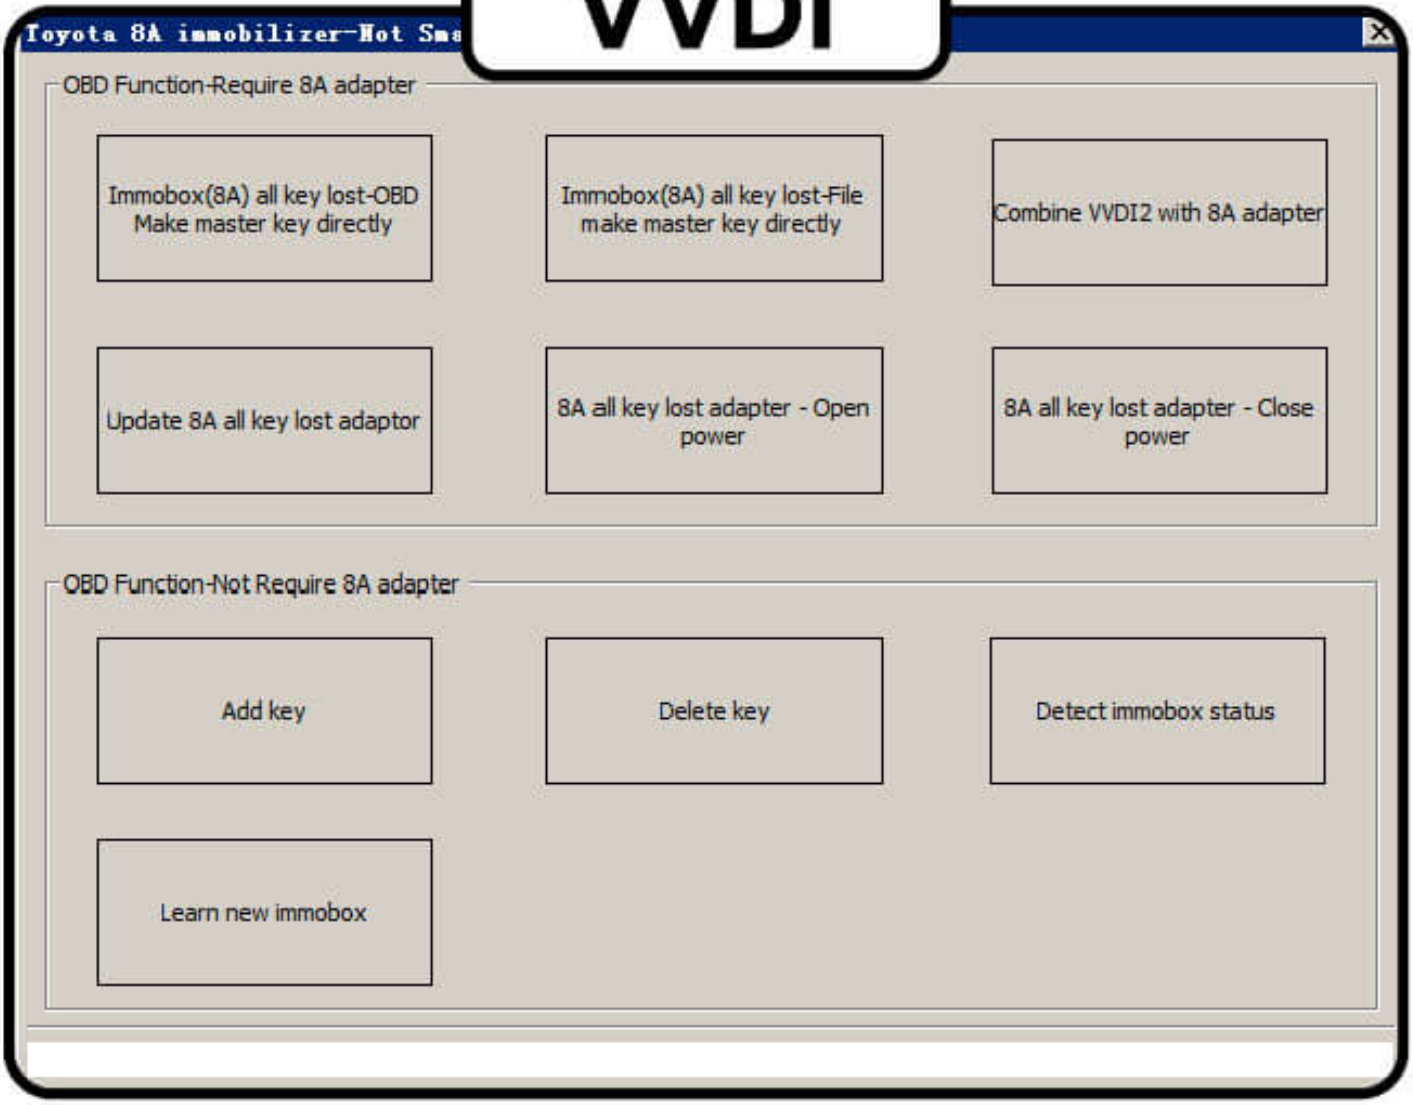
Toyota 8A immobilizer-Not Sma
OBD Function-Require 8A adapter
Immobox(8A) all key lost-OBD Make master key directly
Immobox(8A) all key lost-File make master key directly
Combine VVDI2 with 8A adapter
Update 8A all key lost adaptor
8A all key lost adapter - Open power
8A all key lost adapter - Close power
OBD Function-Not Require 8A adapter
Add key
Delete key
Detect immobox status
Learn new immobox

KEY TOOL MAX &MINI OBD

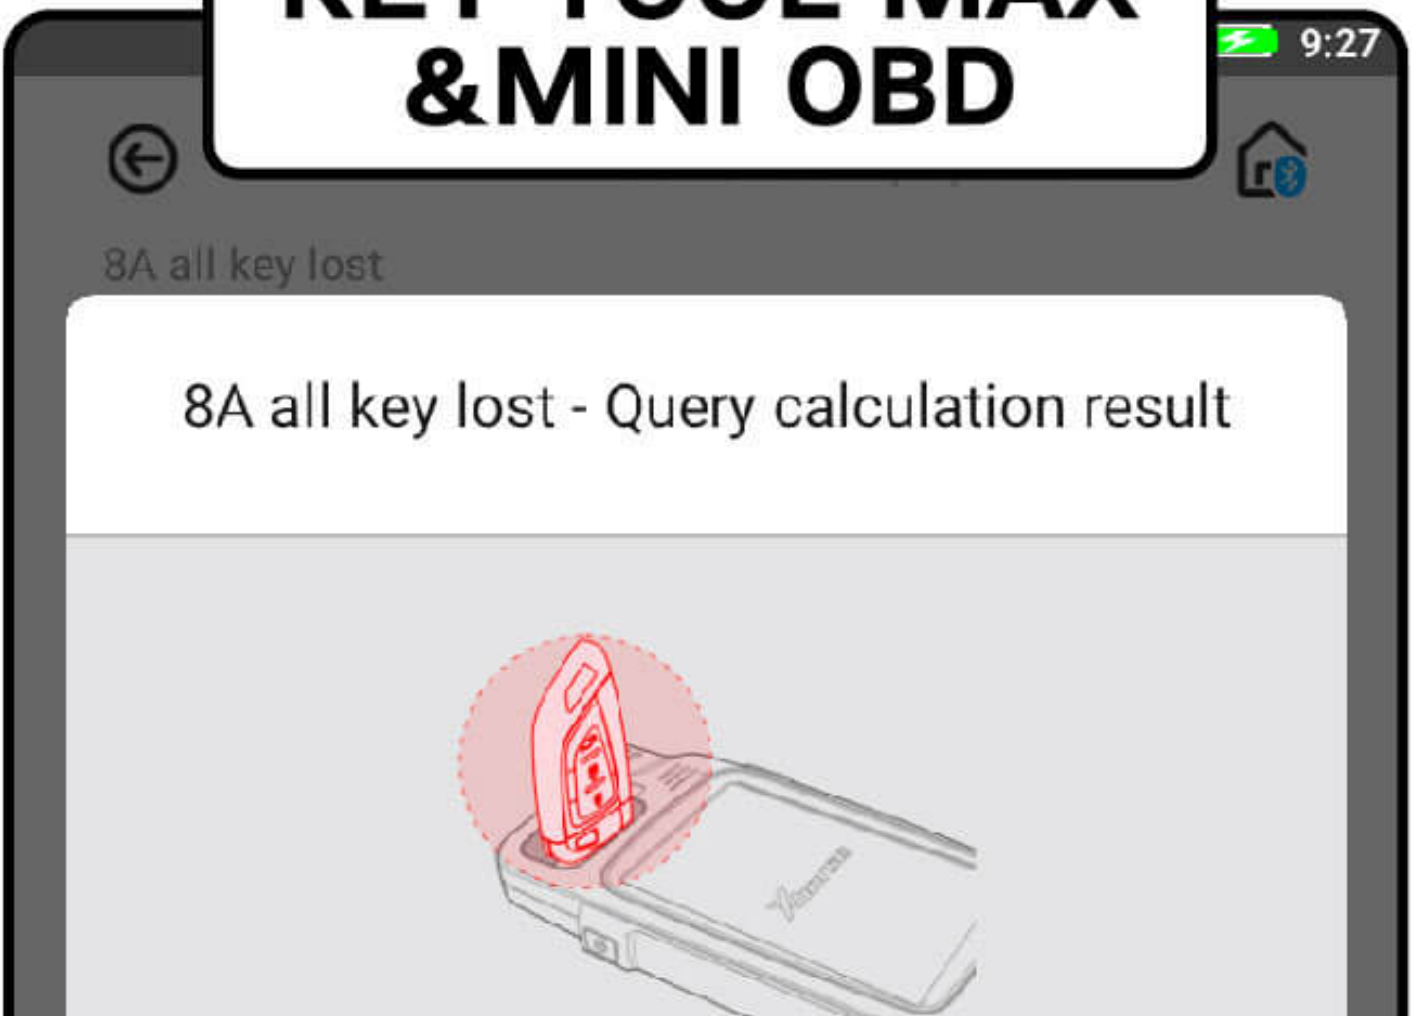
9:27
8A all key lost

8A all key lost - Query calculation result

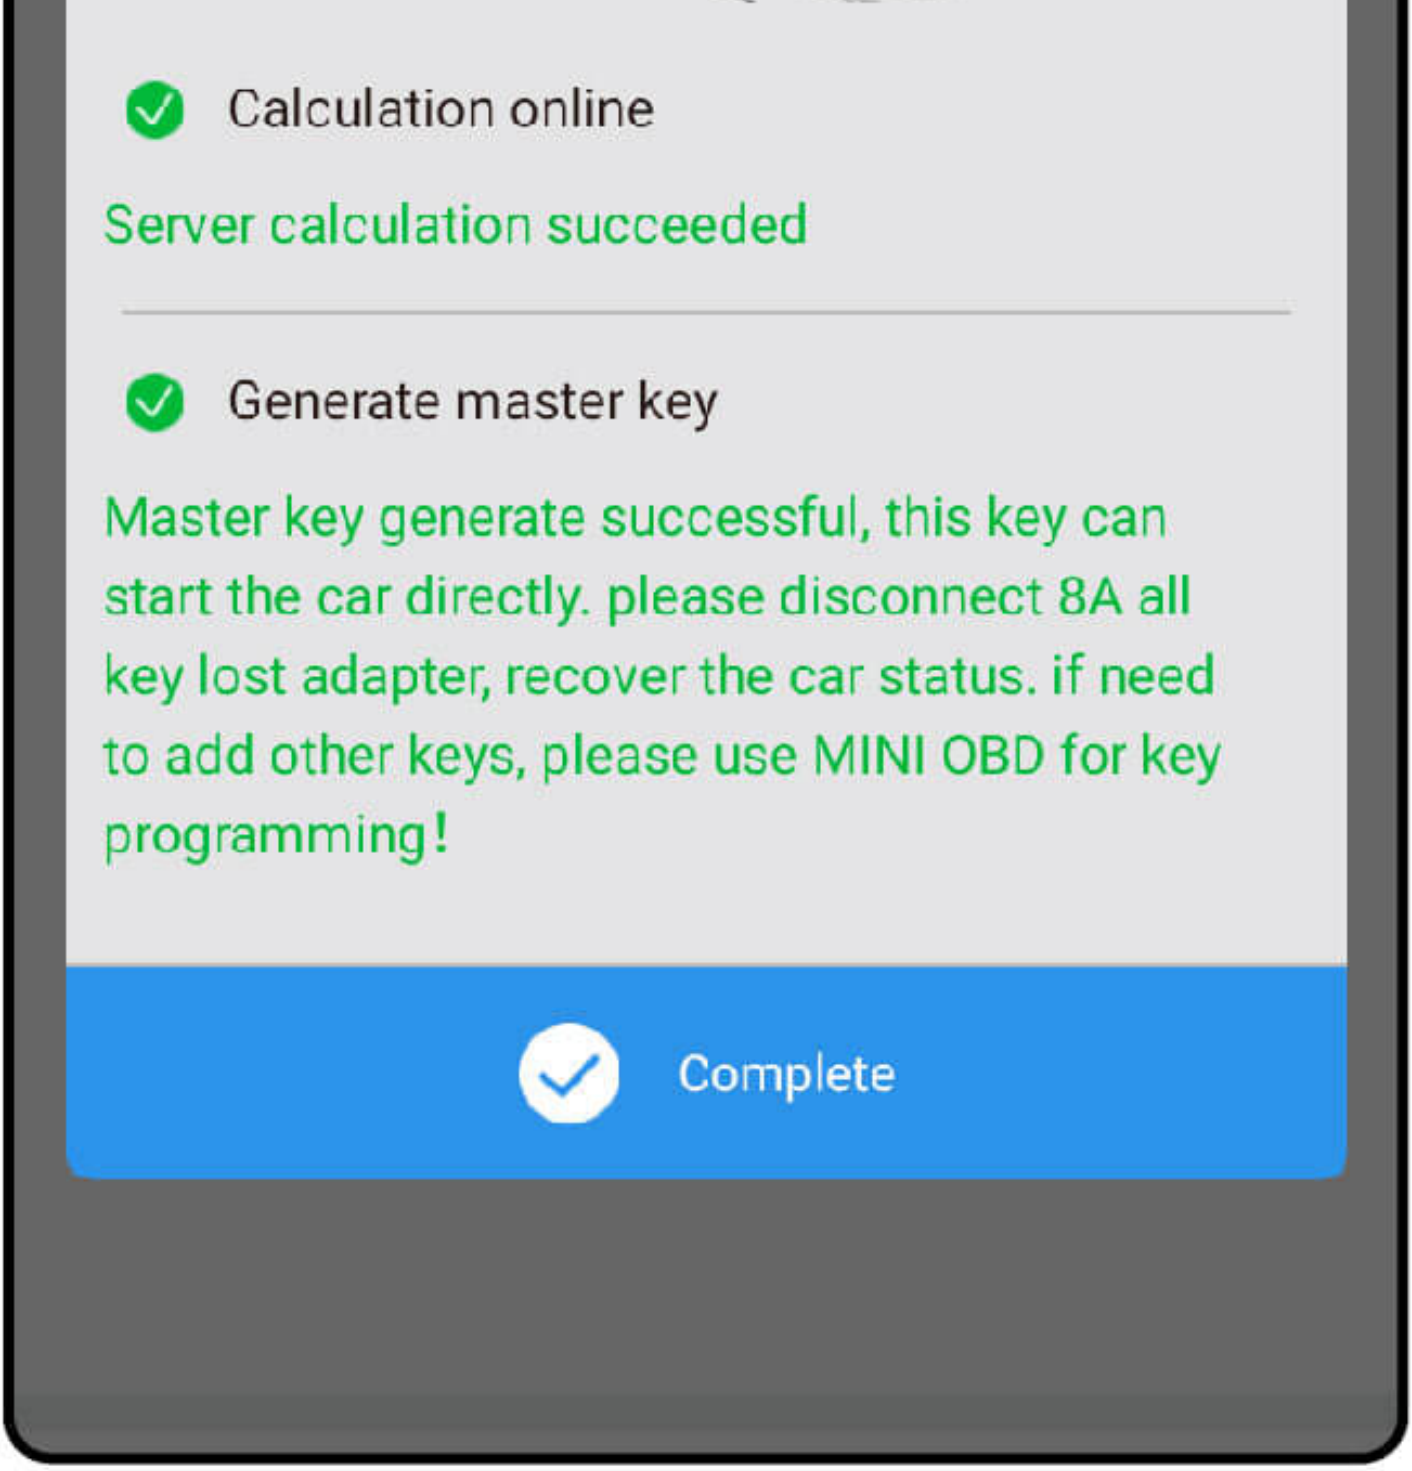

Calculation online

Server calculation succeeded

Generate master key

Master key generate successful, this key can start the car directly. please disconnect 8A all key lost adapter, recover the car status. if need to add other keys, please use MINI OBD for key programming!

⑥ Please disconnect all cables,recover all connection wires as car original status

If the connection wires not recovery to original status and start the car directly, the fuse boxe and device will be burnt

⑦ Test generated transponder