



## Fetrotech Installation Tutorial


1、 First connect your Fetrotech to the computer using a USB cable as shown below

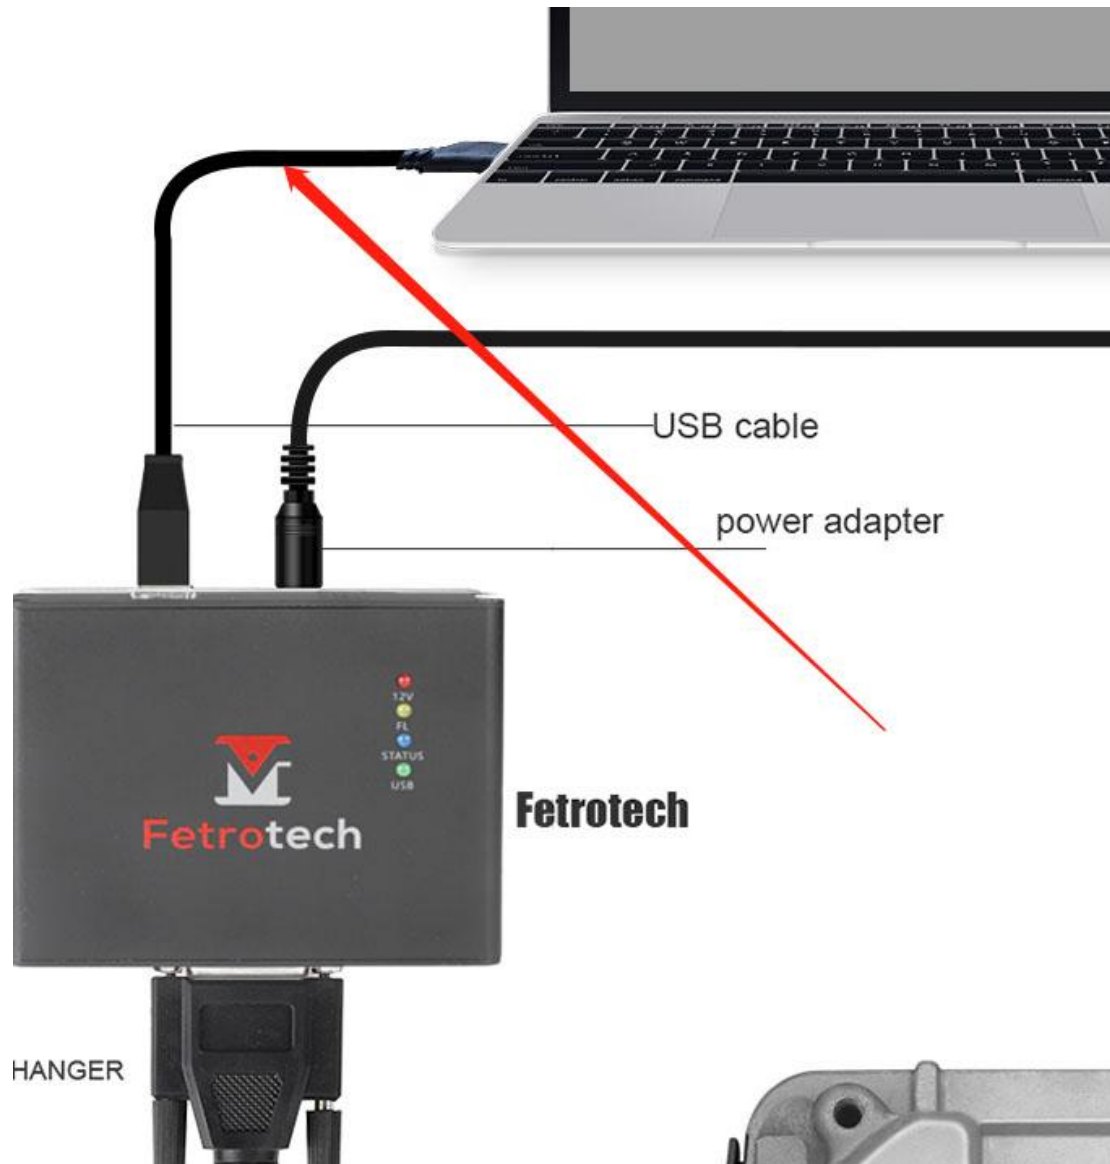



2、 Then log on to the website [www.tuner-box.com](http://www.tuner-box.com) and click the download button to download the Fetrotech software

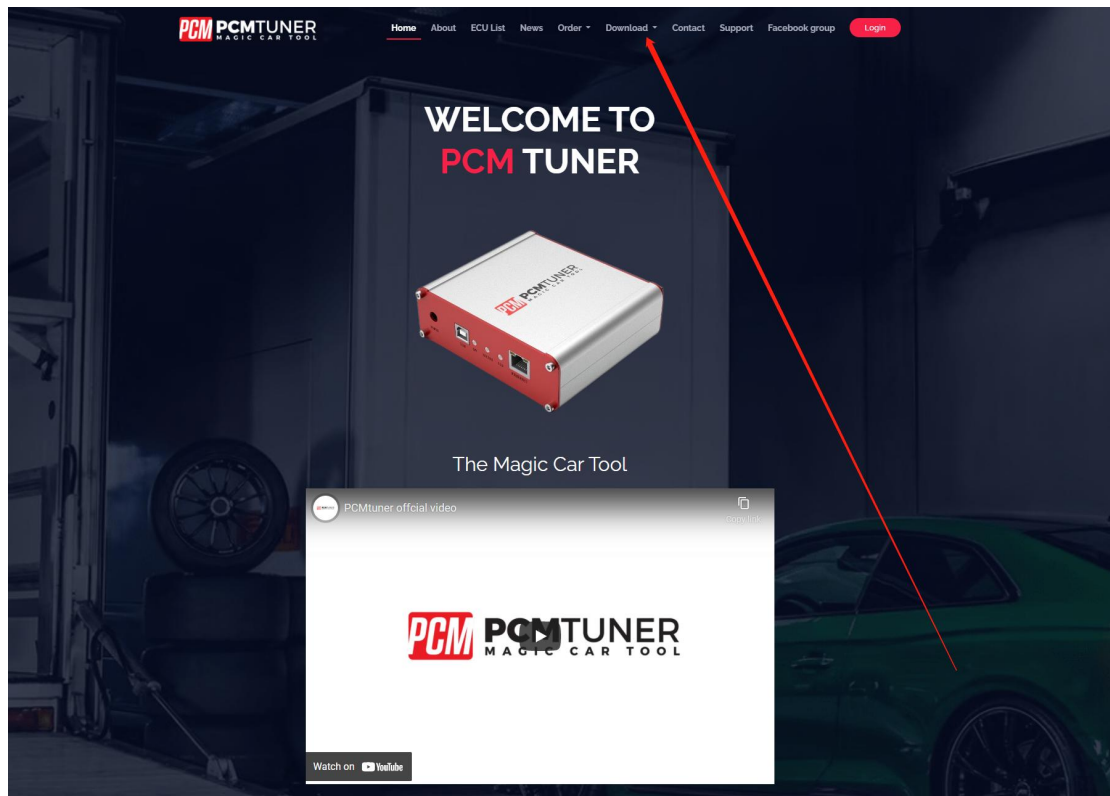


3、 Download the software to your computer and unzip it

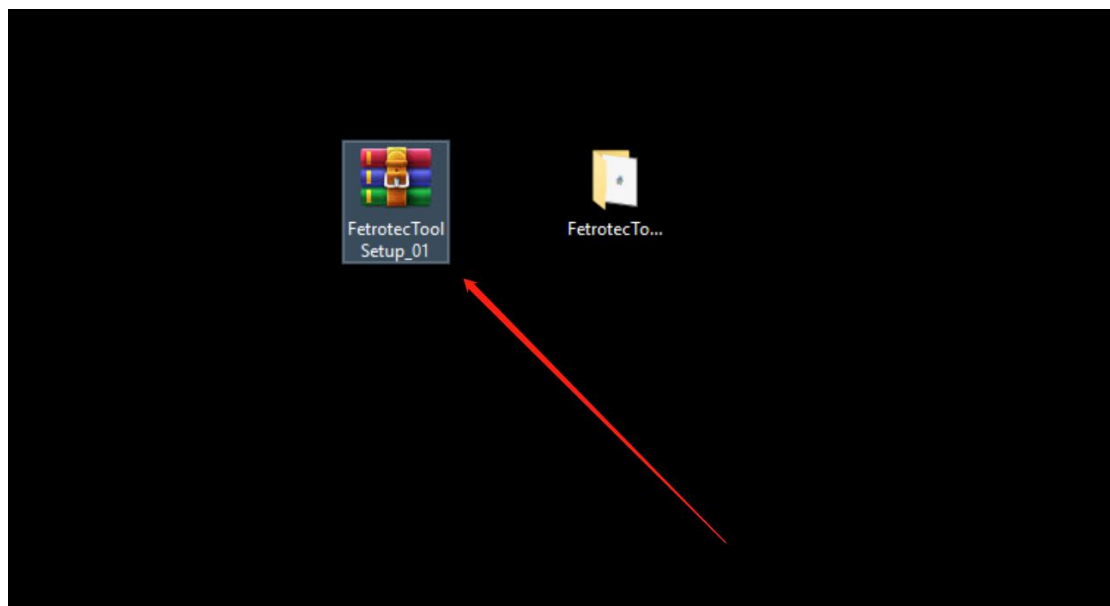


4、 Open the software to install

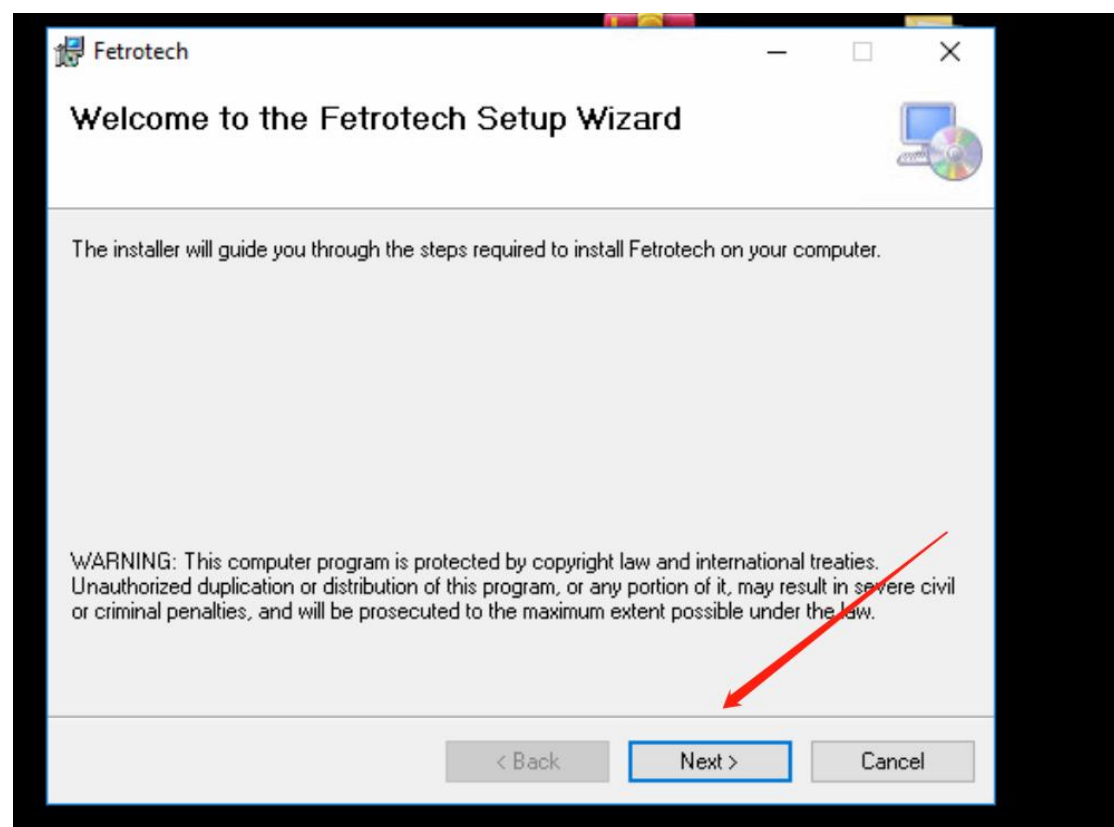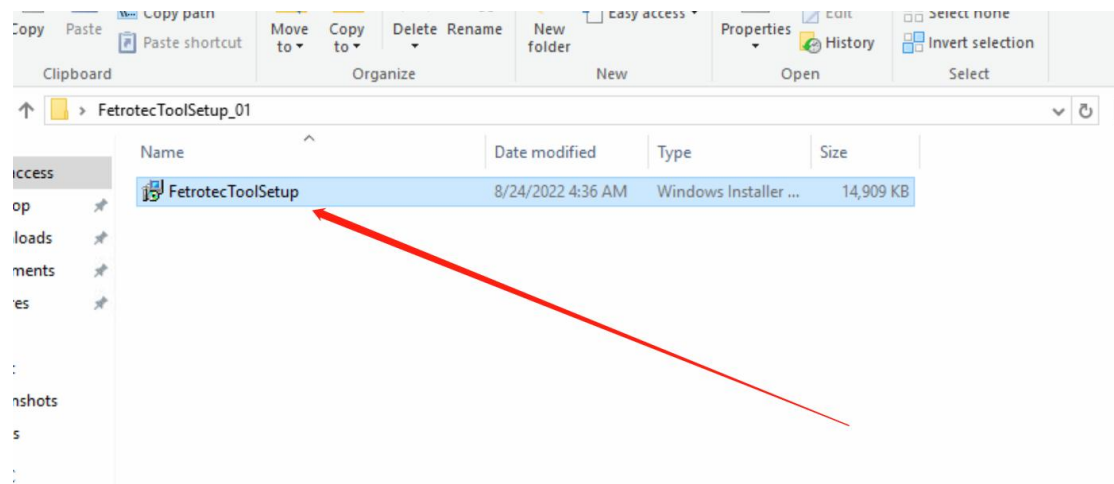


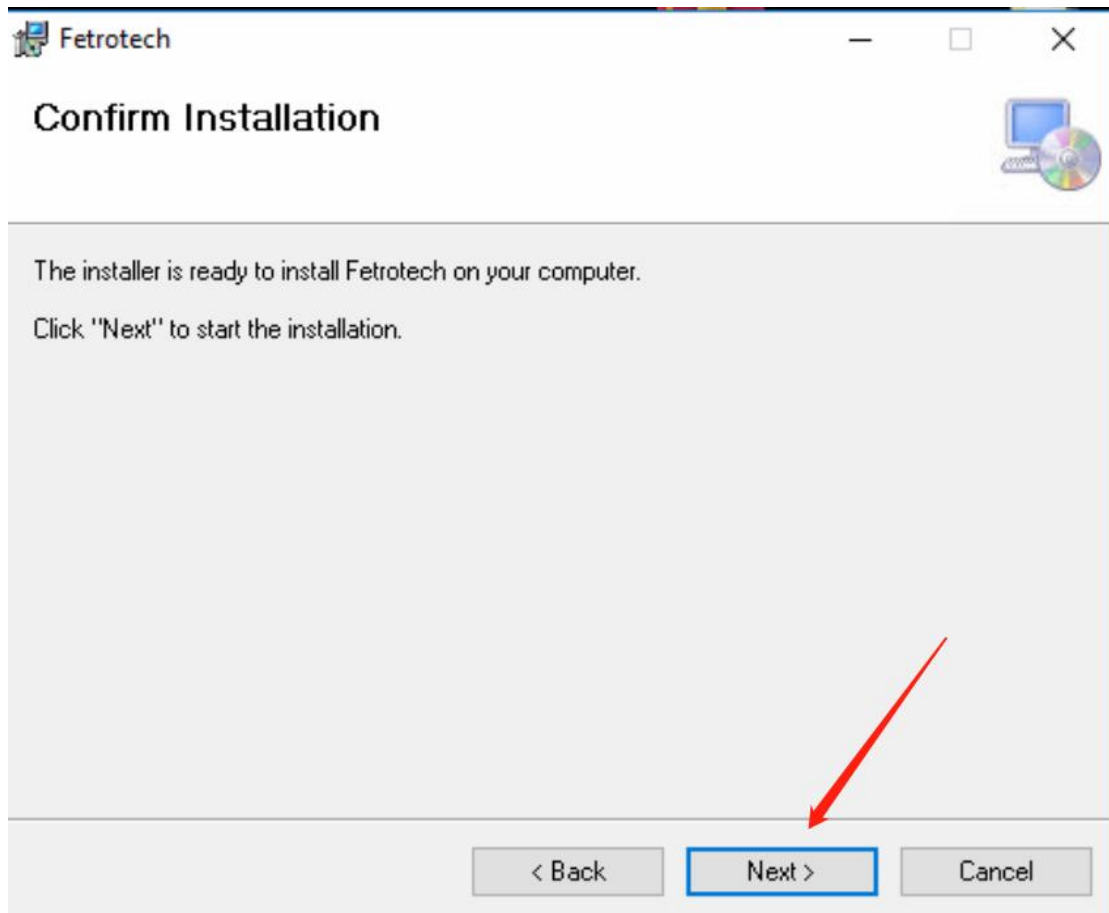

5、 Still click next

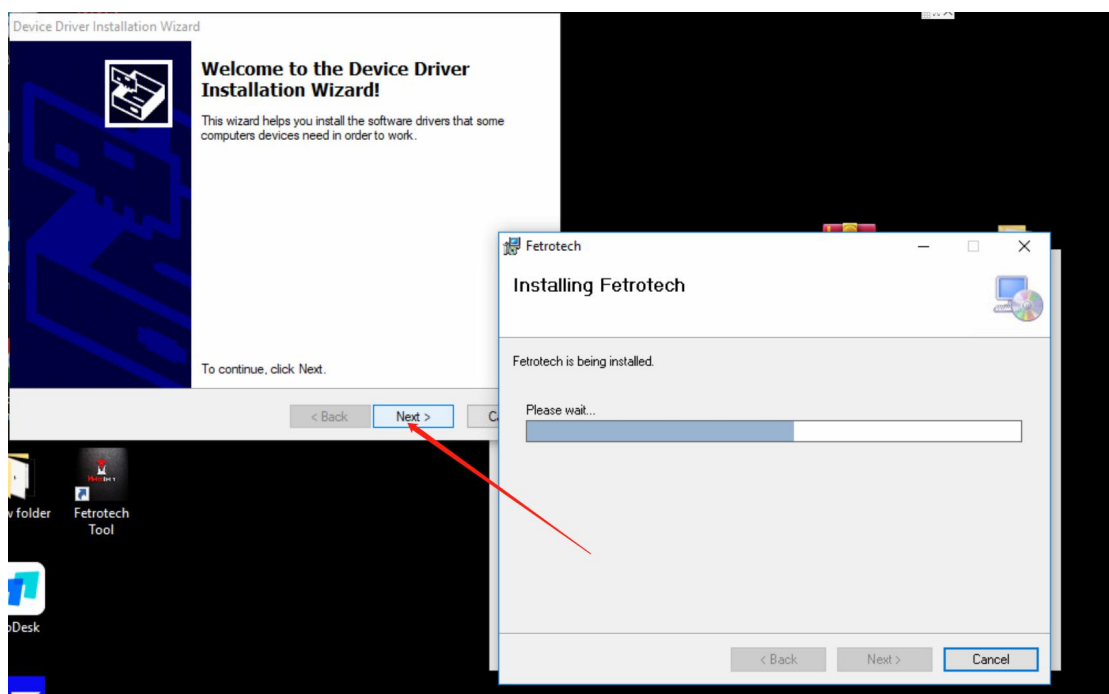


6、 until it is completed.

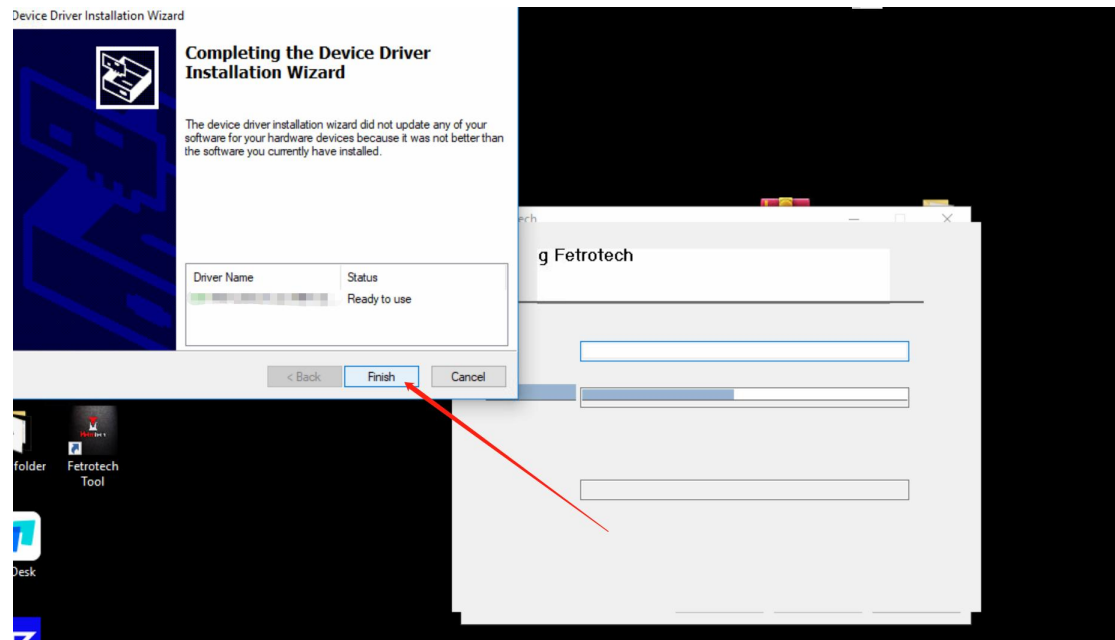

7、 The following dialog box appears, please fill in your information as required to activate your device


A screenshot of a 'Fetrotech' window titled 'Please Enter following Information'. The window contains four input fields: 'Full Name :', 'Email :', 'Country :', and 'Phone :'. Each input field has a red arrow pointing to it from the right. Below the input fields is a 'Submit' button. The window has a standard Windows title bar with the 'Fetrotech' icon and name.

8、 After filling in, click Submit

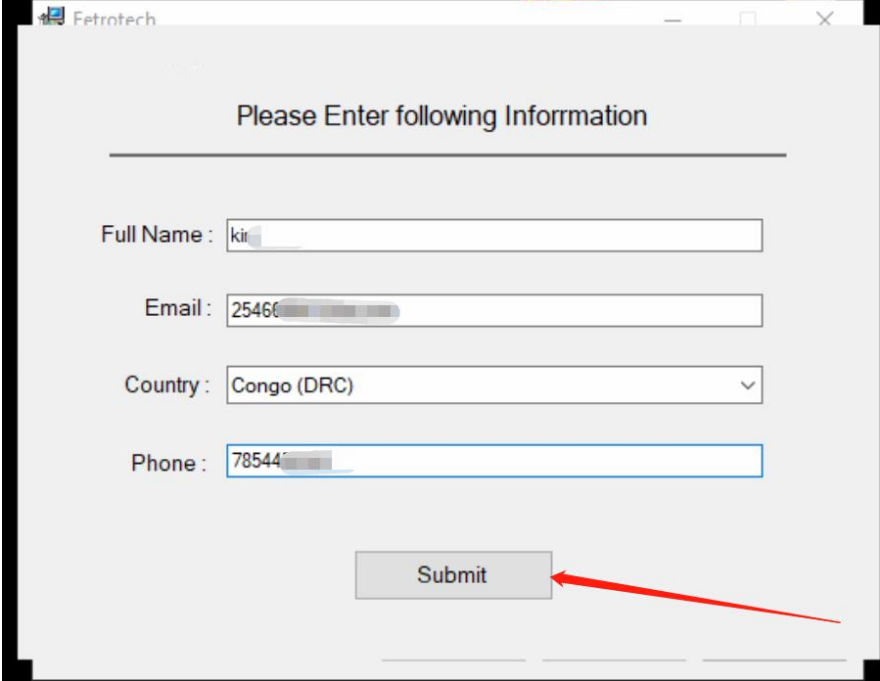

A screenshot of a Windows application window titled "Fetrotech". The window contains a form titled "Please Enter following Information". The form has four input fields: "Full Name" with the text "kir", "Email" with the text "25460", "Country" with a dropdown menu showing "Congo (DRC)", and "Phone" with the text "78544". Below the form is a "Submit" button. A red arrow points to the "Submit" button.

9、 Finally click Close to complete the installation

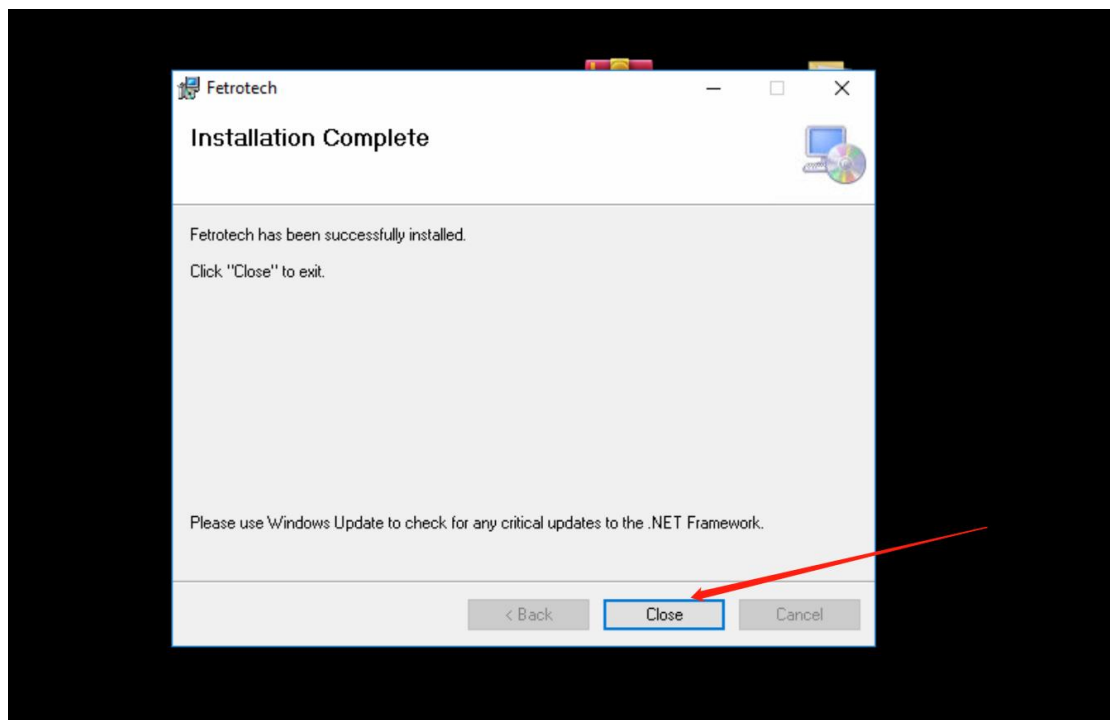

10、 Return to the desktop and click the fetrotech icon to run the software



11、 When the following interface appears, hold Ctrl+V to copy your machine code,

Copy the machine code on the back of your device as follows and send them to info@tuner-box.com. The subject of the email is "request my fetrotech active" .


Machine code:                      machine sn in device back side :

Machine sn :




12、 When you receive the mail you will get two files as shown in the image below

[WWW.CARDIAGTOOL.CO.UK](http://WWW.CARDIAGTOOL.CO.UK)

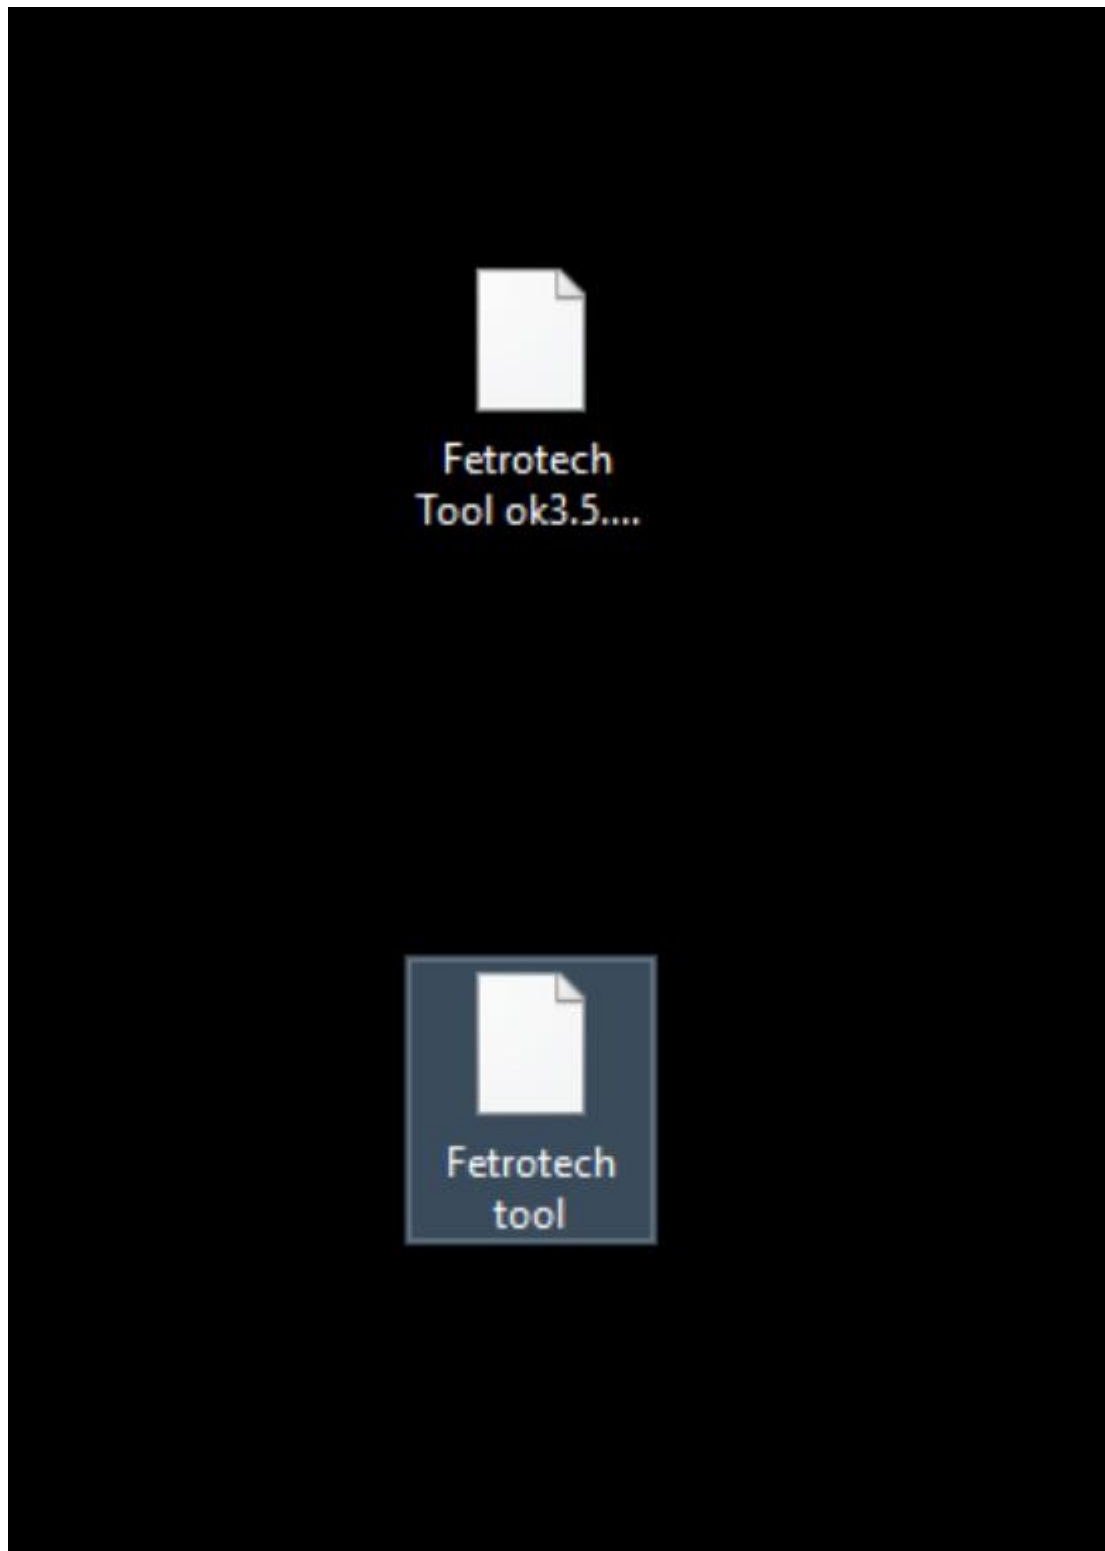


13、 Please save your key file , put Fetrotech into C disk as shown below

[WWW.CARDIAGTOOL.CO.UK](http://WWW.CARDIAGTOOL.CO.UK)


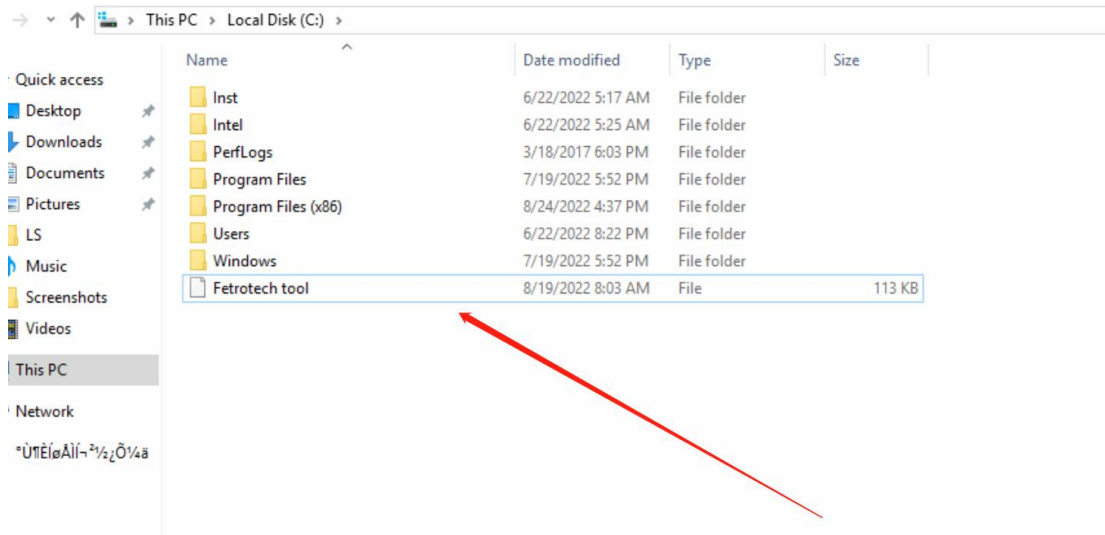



14、 Please put Fetrotech tool ok 3.5 into the Fetrotech tool installation directory” C:\Program Files (x86)\Fetrotech” as shown below

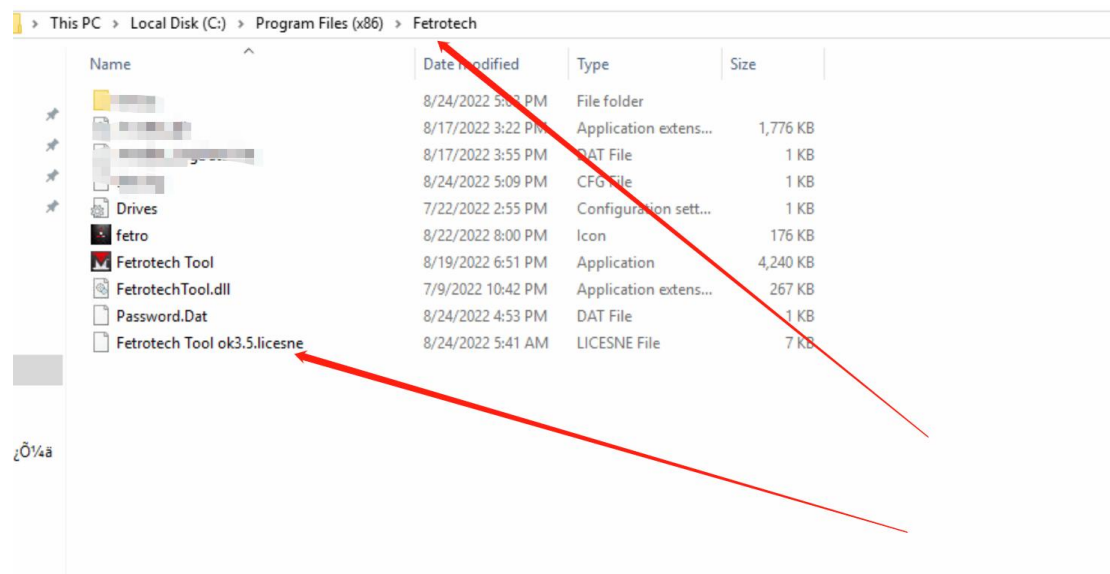

15、 Click Fetrotech tool ok 3.5 to set the open method to Fetrotech tool as shown below:


fetro	8/22/2022 8:00 PM	Icon	176 KB
Fetrotech Tool	8/19/2022 6:51 PM	Application	4,240 KB
FetrotechTool.dll	7/9/2022 10:42 PM	Application extens...	267 KB
Password.Dat	8/24/2022 4:53 PM	DAT File	1 KB
Fetrotech Tool ok3.5.license	8/24/2022 5:41 AM	LICESNE File	7 KB

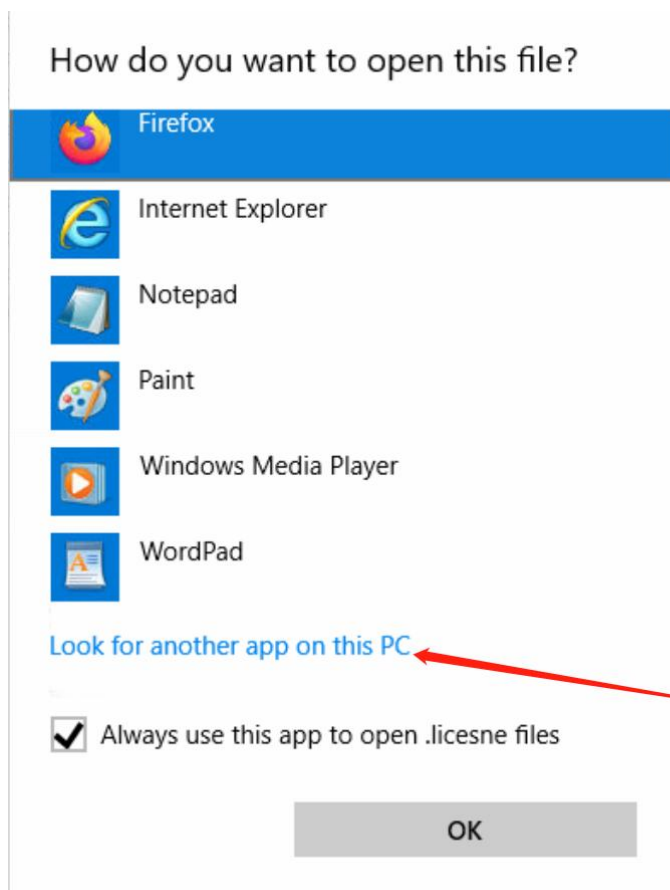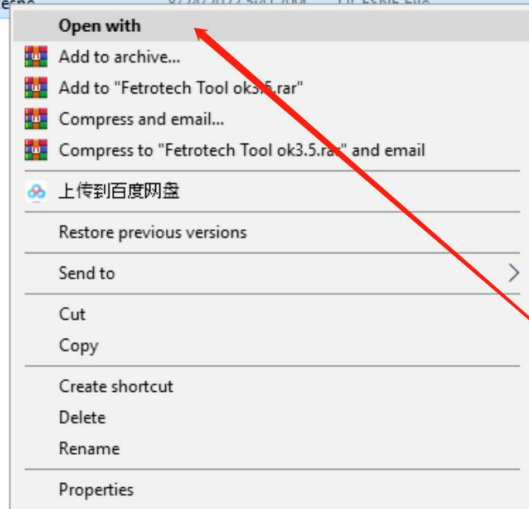

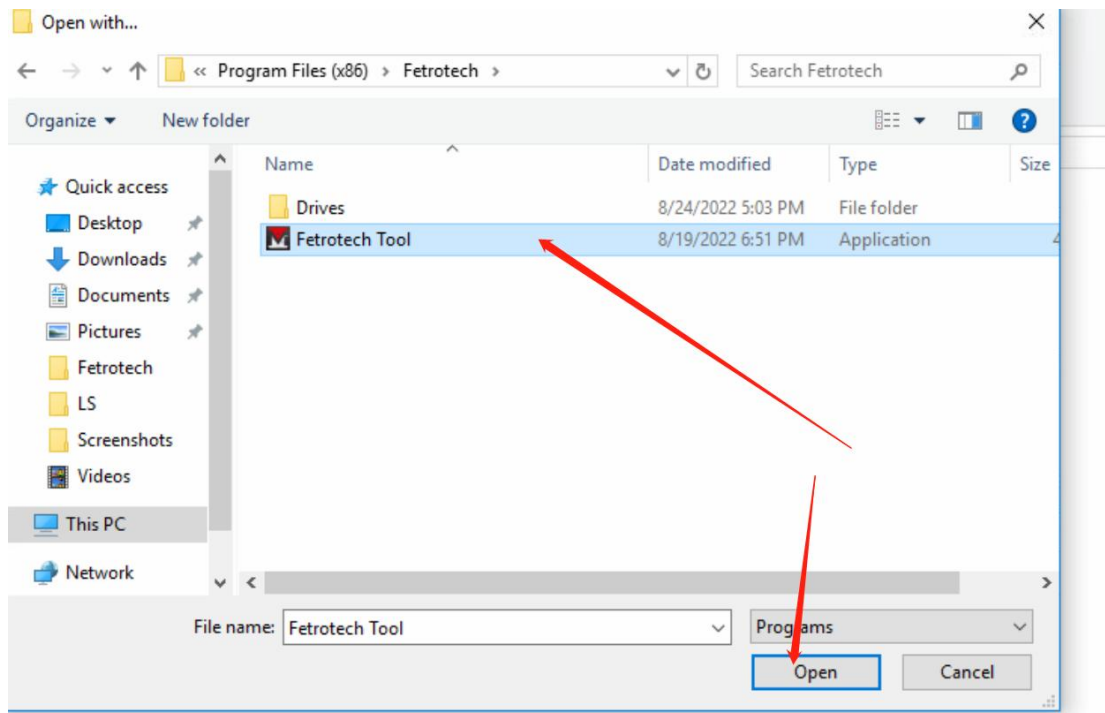

16、 Then the setup is completed.

Return to the desktop and click Fetrotech tool to run the software

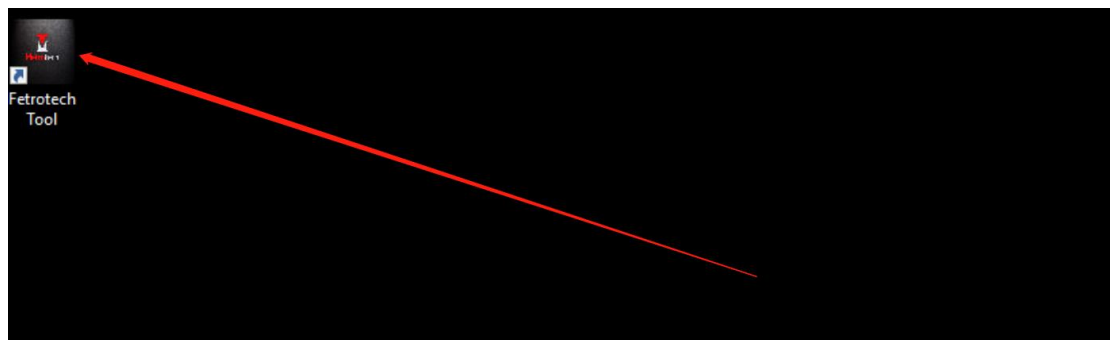


17、 So that our software can be opened and waited to start.

[WWW.CARDIAGTOOL.CO.UK](http://WWW.CARDIAGTOOL.CO.UK)

If the software crashes after opening, please click the Fetrotech installation package again

Click "Repair Fetrotech" , as shown below.

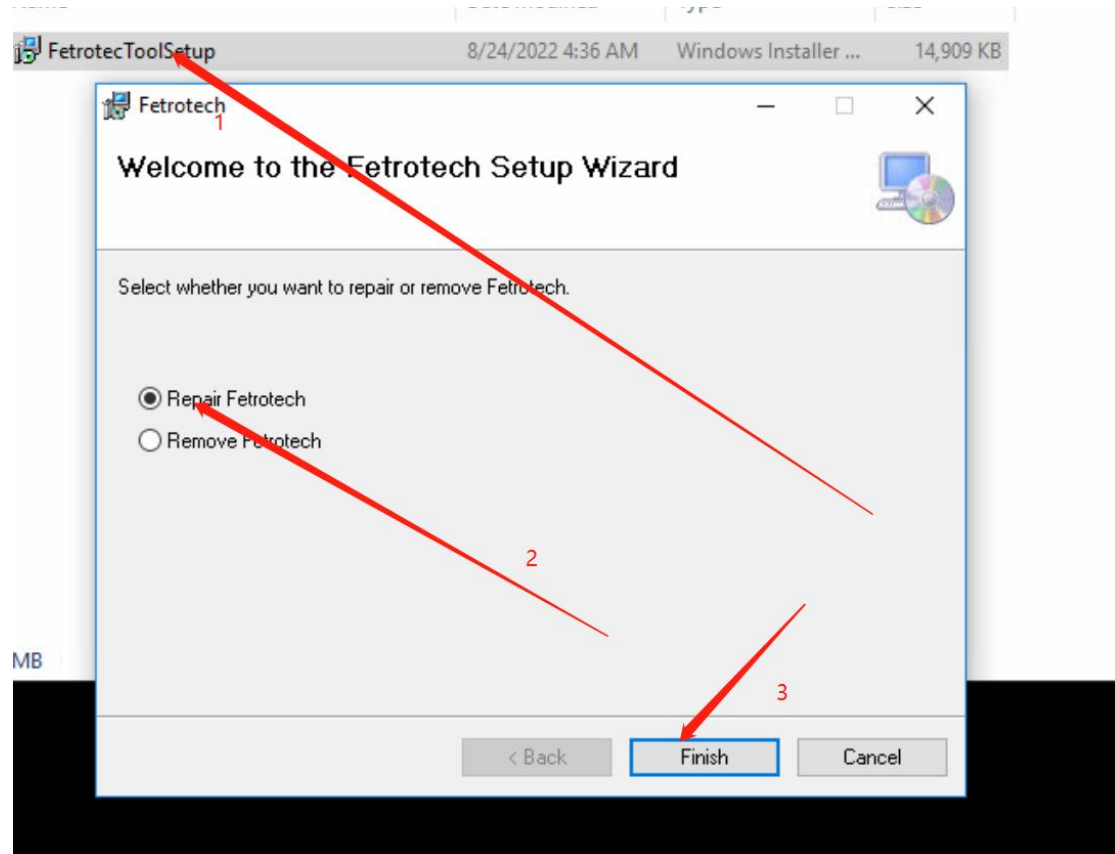

If you cannot activate your device by following the steps above, please uninstall the software.

Re-operate according to the instructions, please keep the key from info@tuner-box.com for your convenience on this computer.